

Non-display Industrial Computers

Catalog Numbers 6177R-MM, 6177R-RM, 6189V-DVIVGA, 6189V-HDDTRAY, 6189V-PCIBARMM, 6189V-PCIBARRM, 6189V-PSU600W, 6189V-RACKSLIDES, 6189V-4GDDR3, 6189V-8GDDR3, 6189V-16GDDR3, 6189V-35HDD500GB, 6189V-35HDD1TB, 6189V-35SSD128GB



Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

IMPORTANT Identifies information that is critical for successful application and understanding of the product.

Labels may also be on or inside the equipment to provide specific precautions.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



ARC FLASH HAZARD: Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

	Preface	
	Summary of Changes	7
	Abbreviations	8
	Additional Resources	8
	Chapter 1	
Computer Features	Computer Overview	9
	Operating Systems	9
	Computer Options	10
	Before You Begin	10
	Parts List	11
	Hardware Features	11
	750R Computer	12
	1450R Computer	13
	Status Indicators	14
	System Boards	15
	Chapter 2	
Install the Computer	Installation Precautions	18
	Environment and Enclosure Information	18
	European Union Directive	18
	Installation Guidelines	19
	Mounting Clearance Requirements	20
	Mounting Hardware	20
	Computer Dimensions	21
	Required Tools	21
	Install the Computer	22
	Mount the 750R Computer	22
	Mount the 1450R Computer in a Rack Cabinet	24
	Connect Peripherals	25
	Internal USB Port	26
	Connect Power	27
	Functional Ground Screw	27
	Connect to a Network	28
	Chapter 3	
Operate the Computer	Operating Guidelines	29
	Start the Computer	30
	Restart the Computer	31
	Restart the Computer with the Reset Button	31
	Shut Down the Computer	32

Replace Components**Chapter 4**

Accessories and Replacement Parts	33
Voltage Precautions	33
Electrostatic Discharge Precautions	34
Pre-configuration	34
Post-configuration	35
Required Tools	35
Remove the Cover	36
Reinstall the Cover	37
Drive Precautions	38
Replace a Drive	38
Replace or Add Memory Modules	40
Memory Configuration Guidelines	41
Replace or Add a Memory Module	41
Replace the RTC Battery	42
Replace the Power Supply Unit	44

Set Up the UEFI Utility**Chapter 5**

Set-up Utility Overview	49
Access the Set-up Utility	50
Set-up Screen Overview	50
Firmware Update	51
Firmware Configuration	52
Common Buttons at the Bottom of Screens	52
Main	53
Advanced	54
Chipset	67
Boot	68
Security	69
Save and Exit	70
Diagnostics	71
AMI Rescue	73
AMI Backup	74
AMI Restore	77
Exit	80

Troubleshoot the System**Chapter 6**

Hardware Monitoring	81
Troubleshooting	82
Diagnostics	83
Load the System Defaults	84
Clear the UEFI	85
Ship or Transport the Computer	86
Dispose of the Computer	86

Install Accessories**Appendix A**

Pre-installation Checklist	87
Install a Second HDD	87
Install I/O Card Retention Bracket	90
Install an Add-in Card	92
Install Rack Slides (1450R Computer)	94
Install More Memory	96

Index

.....	97
-------	----

Notes:

This manual is a user guide for non-display industrial computers. It provides procedures to the following:

- Install the computer.
- Make computer connections.
- Operate the computer.
- Troubleshoot the computer.

Summary of Changes

This manual contains new and updated information as indicated in the following table.

Topic	Page
Added Summary of Changes table to the Preface and eliminated it as a separate section.	7
Removed 6177R-PC001, and added IC-TD001 and Product Certification link to Additional Resources.	8
Updated IEC/CISPR 22 to IEC/CISPR 32 in Environment and Enclosure Information.	18
Updated hyperlink for product certification site in European Union Directive.	18
Revised first paragraph in Connect Power with more information about supplied power cords.	27
Changed chapter title from Set Up the UEFI Utility to Configure the UEFI (BIOS) Settings.	49
Added the Important table to Access the Set-up Utility.	50

Abbreviations

This publication can use the following abbreviations.

Abbr	Description	Abbr	Description
ACPI	Advanced configuration (and) power interface	PCDC	Product Compatibility and Download Center
AHCI	Advanced host controller interface	PCH	Platform control hub
AMI	American Megatrends, Inc.	PCI	Peripheral component interconnect
AMT	Active management technology	PCIe	Peripheral component interconnect express
BIOS	Basic input/output system	PEG	PCI express graphics
CPU	Central processing unit	PERR	PCI parity error
CMOS	Complementary metal oxide semiconductor	POST	Power on self-test
COM	Communication (serial port interface)	PSU	Power supply unit
DDR	Double data rate (RAM)	PXE	Pre-boot execution environment
DIMM	Dual in-line memory module	RAID	Redundant array (of) independent disks
DVI	Digital video interface	RAM	Random access memory
DVMT	Dynamic video memory technology	RTC	Real-time clock
ECC	Error correcting code	SAS	Serial attached SCSI
EEA	European Environment Agency	SATA	Serial advanced technology attachment
EMC	Electromagnetic compatibility	SCSI	Small computer system interface
ESD	Electrostatic discharge	SERR	PCI signal error
FAT	File allocation table	SSD	Solid-state drive
HDD	Hard disk drive	UEFI	Universal extensible firmware interface
IEC	International Engineering Consortium	USB	Universal serial bus
LAN	Local area network	UPS	Uninterruptible power source
NEMA	National Electrical Manufacturers Association	VBAT	Voltage (battery)
ODD	Optical disk drive	VDDR	Voltage (DDR RAM)
PCB	Printed circuit board	VGA	Video graphics array

Additional Resources

These documents contain additional information about related products from Rockwell Automation.

Resource	Description
Industrial Computer and Monitor Specifications Technical Data, publication IC-TD001	Provides technical specifications for Rockwell Automation industrial computers and monitors, which includes non-display computers.
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines to install a Rockwell Automation industrial system.
Product Certifications website, http://www.rockwellautomation.com/global/certification/overview.page	Provides declarations of conformity, certificates, and other certification details.

You can view or download publications at <http://www.rockwellautomation.com/global/literature-library/overview.page>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

Computer Features

Topic	Page
Computer Overview	9
Operating Systems	9
Computer Options	10
Before You Begin	10
Parts List	11
Hardware Features	11

Computer Overview

Non-display industrial computers run operations from small visual interface and maintenance applications to large control and information applications. Combine an industrial display with the 750R (catalog number 6177R-MM) or 1450R (catalog number 6177R-RM) computer to complete your system.

These computers are available with performance, advanced, and server features. They come standard with a selection of I/O ports for peripheral connections and expansion slots.

Operating Systems

The following Microsoft-licensed operating systems are available:

- Windows Embedded 8.1 Industry Pro (64-bit)
- Windows 7 Professional, Service Pack 1 (64-bit)
- Windows Server 2012 R2 Standard (64-bit)
- Windows Server 2008 R2 Standard, Service Pack 1 (64-bit)
- Windows 10 IoT Enterprise (64 bit)

No operating system updates have been applied to the factory image beyond the service packs.

Computers with HDDs include a recovery partition with the original factory image. You can use AMI Rescue that is embedded in the BIOS/UEFI set-up utility to restore the operating system from the recovery partition, and create a recovery image. See [AMI Rescue on page 73](#) for instructions.

IMPORTANT	Computers with the Windows Embedded 8.1 Industry Pro operating system do not contain a backup of the factory image in the recovery partition.
------------------	---

To obtain a copy of a factory system image, contact your local technical support center or access the Rockwell Automation® Product Compatibility and Download Center (PCDC) at <https://compatibility.rockwellautomation.com/Pages/home.aspx>.

Computer Options

This table summarizes the options that are available for non-display industrial computers. A comparative summary of features for the computers is in Industrial Computers and Monitors Specifications Technical Data, publication [IC-TD001](#).

Cat. No.	Model	Form Factor	Package	Windows OS ⁽¹⁾
6177R-RMPW7	1450R	4U rack mount	Performance	7 Professional SP1
6177R-RMPWX				10 IoT Enterprise
6177R-RMPNO				None
6177R-RMRNO			Redundant	
6177R-RMAW7			Advanced	7 Professional SP1
6177R-RMAW8				Embedded 8.1 Industry Pro
6177R-RMAWX				10 IoT Enterprise
6177R-RMSS8			Server	Server 2008 R2 Standard SP1
6177R-RMS12				Server 2012 R2 Standard
6177R-RMSNO				None
6177R-MMPW7	750R	Machine mount	Performance	7 Professional SP1
6177R-MMPWX				10 IoT Enterprise
6177R-MMPNO				None
6177R-MMAW8			Advanced	Embedded 8.1 Industry Pro
6177R-MMAWX				10 IoT Enterprise
6177R-MMSS8			Server	Server 2008 R2 Standard SP1
6177R-MMS12				Server 2012 R2 Standard
6177R-MMSNO				None

(1) All operating systems are 64 bit.

Before You Begin

Before you unpack the computer, inspect the shipping carton for damage. If damage is visible, immediately contact the shipper and request assistance. Otherwise, continue to unpack.

Keep the original packing material in case you must return the computer for repair or transport it to another location. Use both inner and outer packing cartons to provide adequate protection for a computer that is returned for service.

Parts List

The computers ship with the following items.

Item	Description
Hardware	<ul style="list-style-type: none"> • Power cord for AC power models • Mounting hardware <ul style="list-style-type: none"> – Rack handles for 1450R computers – Mounting brackets for 750R computers – Mounting fasteners – Cable ties for internal USB device • Keys for door lock for 1450R computers • Assembly screw bag • DVI-to-VGA adapter
Documents	<ul style="list-style-type: none"> • Non-display Industrial Computers Product Information, publication 6177R-PC001 • Industrial Computers with the Windows Embedded 8.1 Industry Professional Operating System Release Note, publication 6000-RN011⁽¹⁾ • China RoHS hazardous material table insert • Production test report

(1) Shipped only with computers with the Windows Embedded 8.1 Industry Pro operating system.


Hardware Features

The illustrations in this section show the hardware features of each computer:

- Exterior views
 - Front panel
 - Rear panel
- Status indicators
- System boards
 - Motherboard
 - Front panel board
 - HDD adapter boards
 - PCI expansion board

750R Computer

Figure 1 - Front Panel

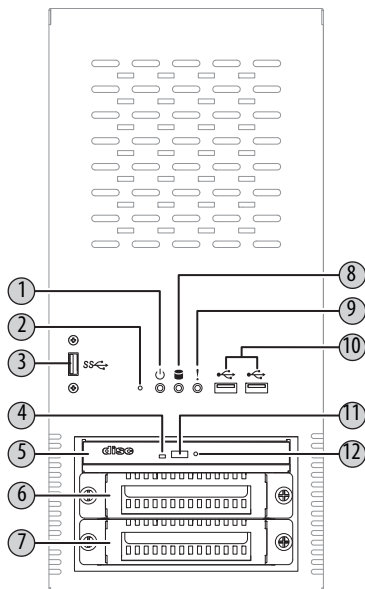


Item	Icon	Component
1		Power status indicator
2		Reset button
3		USB 3.0 port
4		ODD access indicator
5		ODD SATA 2
6		HDD SATA 0 ⁽¹⁾

Item	Icon	Component
7		HDD SATA 1 ⁽²⁾
8		Disk drive access status indicator
9		System health status indicator
10		USB 2.0 ports, 2
11		ODD eject button
12		ODD mechanical eject hole

- (1) Computers with Windows Server operating systems ship with two HDDs that are configured for RAID 1 operation. Computers that ship with two HDDs but no operating system are not configured for RAID 1 operation.
- (2) A second HDD is optional for computers with non-server operating systems.

Figure 2 - Rear Panel

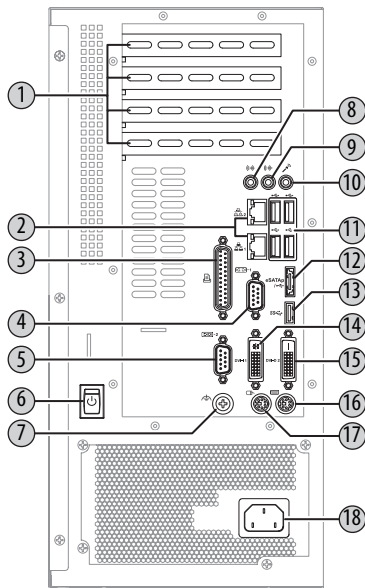


Item	Icon	Component
1		PCI expansion slot covers, 4
2		Gigabit LAN ports, 2
3		Parallel port
4		Serial COM1 port (RS-232)
5		Serial COM2 port (RS-232)
6		Power switch
7		Functional ground screw
8		Line-in jack
9		Line-out jack

Item	Icon	Component
10		Microphone-in jack
11		USB 2.0 ports, 4
12		eSATAp port
13		USB 3.0 port
14		DVI-I1 port
15		DVI-D2 port
16		PS/2 keyboard port
17		PS/2 mouse port
18		Power input, AC

1450R Computer

Figure 3 - Front Panel

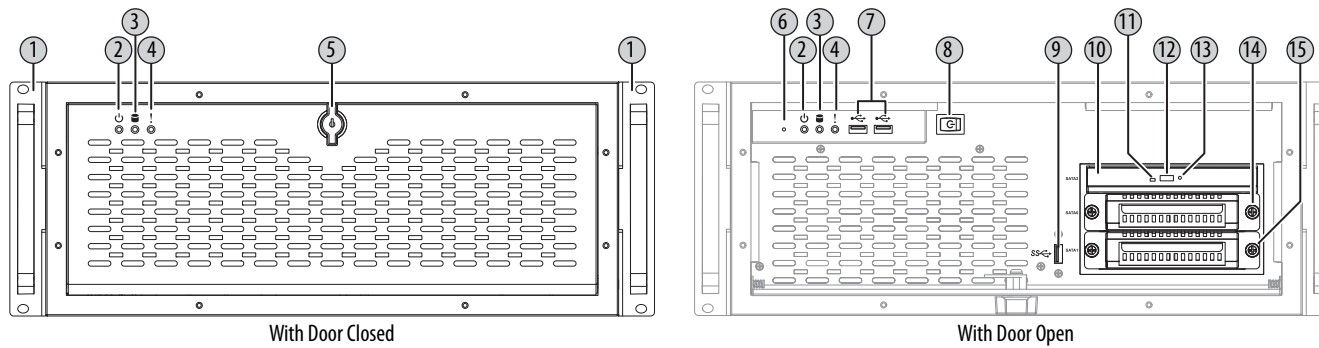


Item	Icon	Component
1		Rack handle
2		Power status indicator
3		Disk drive access status indicator
4		System health status indicator
5		Door lock

Item	Icon	Component
6		Reset button
7		USB 2.0 ports, 2
8		Power switch
9		USB 3.0 port
10		ODD SATA 2

Item	Icon	Component
11		ODD access indicator
12		ODD eject button
13		ODD mechanical eject hole
14		HDD SATA 0 ⁽¹⁾
15		HDD SATA 1 ⁽¹⁾⁽²⁾

- (1) Computers with Windows Server operating systems ship with two HDDs that are configured for RAID 1 operation. Computers that ship with two HDDs but no operating system are not configured for RAID 1 operation.
- (2) A second HDD is optional for computers with non-server operating systems.

Figure 4 - Rear Panel

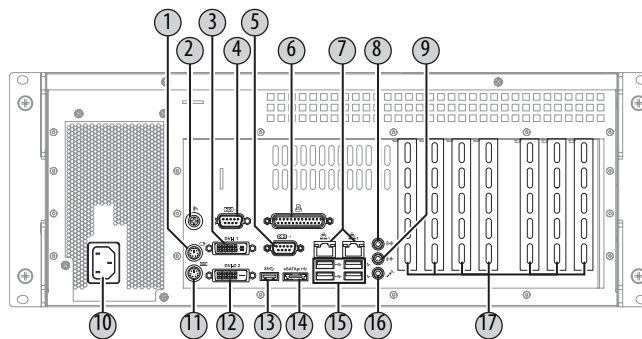


Item	Icon	Component
1		PS/2 mouse port
2		Functional ground screw
3		DVI-D2 port
4		Serial COM2 port (RS-232)
5		Serial COM1 port (RS-232)
6		Parallel port




Item	Icon	Component
7		Gigabit LAN ports, 2
8		Line-in jack
9		Line-out jack
10		Power input, AC
11		PS/2 keyboard port
12		DVI-I1 port

Item	Icon	Component
13		USB 3.0 port
14		eSATAp port
15		USB 2.0 ports, 4
16		Microphone-in jack
17		PCI expansion slot covers, 7

Status Indicators

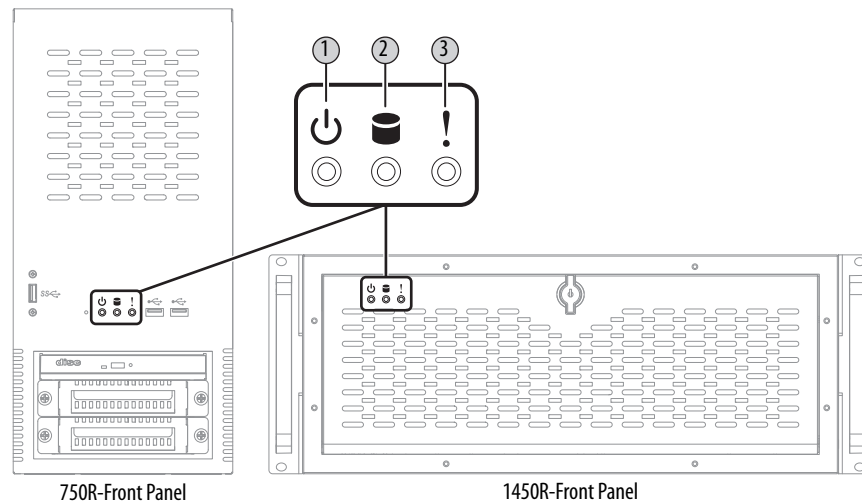There are three status indicators on the front panel of the 750R and 1450R computers. These indicators aid in issue diagnosis by providing status information of different system components.




Item	Icon	Indicator	Status	Description
1		Power status	Green	The computer is operating.
			Flashing orange	The computer is in standby mode.
			Off	The computer is off.
2		Disk drive access status	Flashing red	HDD or ODD activity.
			Off	No HDD or ODD activity.
3		System health status	Red	The computer temperature threshold has been exceeded.
			Off	System health is normal.

System Boards

The illustrations in this section show the system board layouts for the computers. The 750R and 1450R computers share system boards except for the PCI expansion board, which is available only on 1450R computers.

Figure 5 - Motherboard

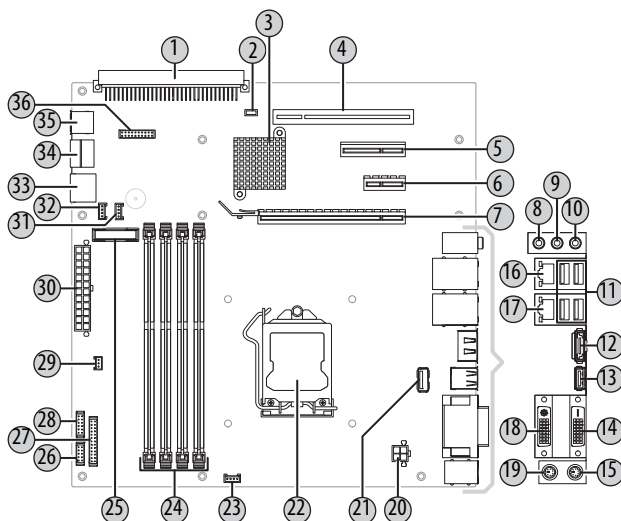


Item	Component
1	PCI expansion board connector
2	Clear UEFI (CMOS1) jumper
3	Platform control hub
4	PCI expansion slot
5	PCIe x4 expansion slot
6	PCIe x1 expansion slot
7	PCIe x16 expansion slot
8	Line-in jack
9	Line-out jack
10	Microphone-in jack
11	Rear USB 2.0 ports, 4
12	eSATAp port

Item	Component
13	Rear USB 3.0 port
14	DVI-D2 connector
15	PS/2 keyboard port
16	Gigabit LAN 2 port
17	Gigabit LAN 1 port
18	DVI-I1 connector
19	PS/2 mouse port
20	+12V 4-pin power connector
21	Internal USB 3.0 connector
22	LGA1155 processor socket
23	Processor fan connector
24	DDR3 DIMM slots, 4

Item	Component
25	Battery socket
26	Serial port (COM1)
27	Internal parallel connector
28	Serial port (COM2)
29	Power switch cable connector
30	ATX 24-pin power connector
31	System fan 2 connector
32	System fan 1 connector
33	SATA 3.0 cable connector
34	SATA 2.0 cable connector
35	Internal USB 2.0 connector
36	Front panel board cable connector


Figure 6 - Front Panel Board

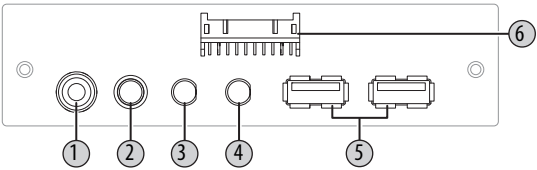


Item	Component
1	Reset button
2	Power status indicator
3	Disk drive access indicator

Item	Component
4	System health indicator
5	USB 2.0 ports
6	Front panel board cable connector

Figure 7 - HDD Adapter Boards

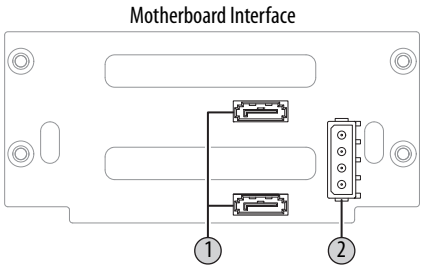


Item	Component
1	SATA cable connectors
2	Power connector

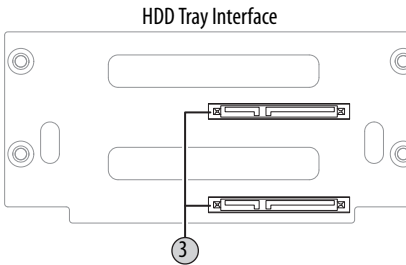

Item	Component
3	SATA drive connectors

Figure 8 - PCI Expansion Board (1450R computers)

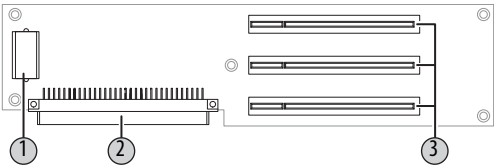

Item	Component
1	PCI expansion board power connector
2	Motherboard connector

Item	Component
3	PCI expansion slots

Install the Computer

Topic	Page
Installation Precautions	18
Installation Guidelines	19
Mounting Clearance Requirements	20
Mounting Hardware	20
Computer Dimensions	21
Required Tools	21
Install the Computer	22
Connect Peripherals	25
Connect Power	27
Functional Ground Screw	27
Connect to a Network	28

Installation Precautions

Read and follow these precautions before you install the computer.

Environment and Enclosure Information



ATTENTION: This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in IEC 60664-1), at altitudes up to 2000 m (6561 ft) without derating.

This equipment is considered Group 1, Class A industrial equipment according to IEC/CISPR 32. Without appropriate precautions, there can be potential difficulties with electromagnetic compatibility in other environments due to conducted and radiated disturbance.

This equipment is supplied as open type equipment. The interior of the enclosure must be accessible only by the use of a tool. UL Listed equipment need not be mounted inside another enclosure. Subsequent sections of this publication can contain extra information about specific enclosure type ratings that are required to comply with certain product safety certifications.

In addition to this publication, see the following:

- Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#), for additional installation requirements
 - NEMA 250 and IEC 60529, as applicable, for explanations of the degrees of protection that are provided by different types of enclosure
-

European Union Directive

This computer meets the European Union Directive requirements when installed within the European Union or EEA regions and have the CE mark. A copy of the declaration of the conformity is available at <https://www.rockwellautomation.com/global/support/technical-documentation/overview.page>.



ATTENTION: This computer is intended to operate in an industrial or control room environment, which uses some form of power isolation from the public low-voltage mains. Some computer configurations cannot comply with the EN 61000-3-2 Harmonic Emissions standard as specified by the EMC Directive of the European Union. Obtain permission from the local power authority before you connect any computer configuration that draws more than 75 W of AC power directly from the public mains.

To comply with EN 55024, the Ethernet port LAN cable must be only used indoors. All other I/O cables must be less than 3 m (9.84 ft) and only used indoors.

Installation Guidelines

Follow these guidelines to make sure that your computer provides service with excellent reliability:

- The installation site must have sufficient power.



ATTENTION: To maintain an electrically safe installation, AC powered computers must be plugged into a grounded outlet.

- In dry environments, static charges can build up easily. A properly grounded computer helps to reduce static discharges, which can cause shock and damage electronic components.
- The enclosure must allow sufficient space around air inlets and outlets to provide the circulation necessary for cooling. See [Mounting Clearance Requirements on page 20](#) for further information. Never allow air passages to become obstructed.
- The ambient air temperature must not exceed the maximum operating temperature of 0...50° C (32...113° F). Consider a user-supplied fan, heat exchanger, or air conditioner for heat from other devices in the enclosure.

TIP Hot air rises. The temperature at the top of the enclosure is often higher than the temperature in other parts of the enclosure, especially when air does not circulate.

IMPORTANT The computer can operate at a range of extremes. However, the life span of the computer is shortened if you continuously operate it at its highest rated temperature, which includes the touch screen and LCD panel.

- The humidity of the ambient air must not exceed 10...90% and must avoid condensation.
- The enclosure or cover must always remain in place during operation. The cover provides protection against high voltages inside the computer and inhibits radio-frequency emissions that can interfere with other equipment.

Mounting Clearance Requirements

When selecting an installation site for the computers, allow a minimum of 76 mm (3 in.) clearance at the front and rear of the computer for adequate ventilation and cable connections.

IMPORTANT

Computers generate heat. Therefore, do not operate the computer in an enclosure with the minimum clearances unless adequate ventilation or other methods are used to lower the temperature within the enclosure.

Allow enough clearance to install or remove peripheral components, such as storage drives.


Mounting Hardware

The table lists the hardware that is required for each type of installation.

Description	Cat. No.	Application	Supplied with computer?	Applies to	Cat. No.
Mounting brackets (2)	N/A	Machine or wall	Yes	750R	6177R-MMPW7 6177R-MMPWX 6177R-MMPNO 6177R-MMSS8 6177R-MMS12 6177R-MMAW7 6177R-MMAW8 6177R-MMAWX 6177R-MMSNO
Rack handles (2)	N/A	Rack	Yes	1450R	6177R-RMPW7 6177R-RMPWX 6177R-RMPNO 6177R-RMRNO 6177R-RMSS8 6177R-RMS12 6177R-RMAW7 6177R-RMAW8 6177R-RMAWX 6177R-RMSNO
Rack slides (2)	6189V-RACKSLIDES	Rack	No		

Computer Dimensions

Review computer dimensions to estimate the clearance necessary for computer installation. Dimensions are given in mm (in.).

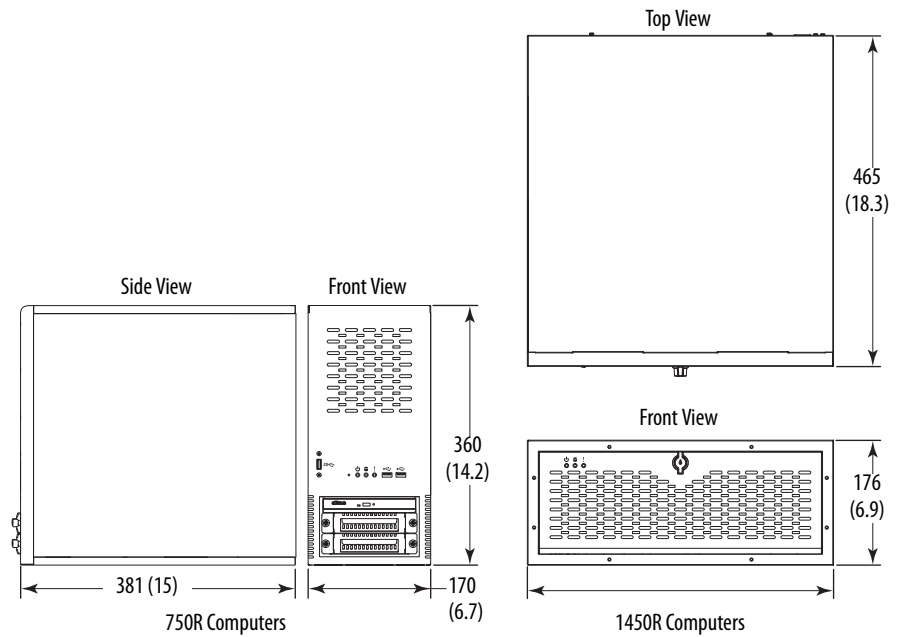

Required Tools

These tools are required for computer installation:

- #2 cross-head screwdriver
- Slot-head screwdriver
- Drill motor and drill bit
- Anti-static wriststrap

Install the Computer

The computers support the following mounting options:

- Machine or wall mount (for 750R models)
- Rack mount (for 1450R models)

Mount the 750R Computer

You can mount the 750R computer on any flat surface, such as a shelf inside a machine or against a wall, by using mounting brackets. Holes are provided on both sides of the 750R computer for side mounting installation.

TIP For ease of installation, use two or more people to install the computer.

Follow these steps to mount the 750R computer.


1. Verify that the mounting location provides adequate space for cables and airflow.

See [Mounting Clearance Requirements on page 20](#) for recommended allowances.


2. Decide where to locate the mounting brackets (the bottom side for an upright installation or the side for a wall installation).

3. Attach each mounting bracket to the computer with four screws.

Torque the screws to 1.3 N•m (12.1 lb•in).

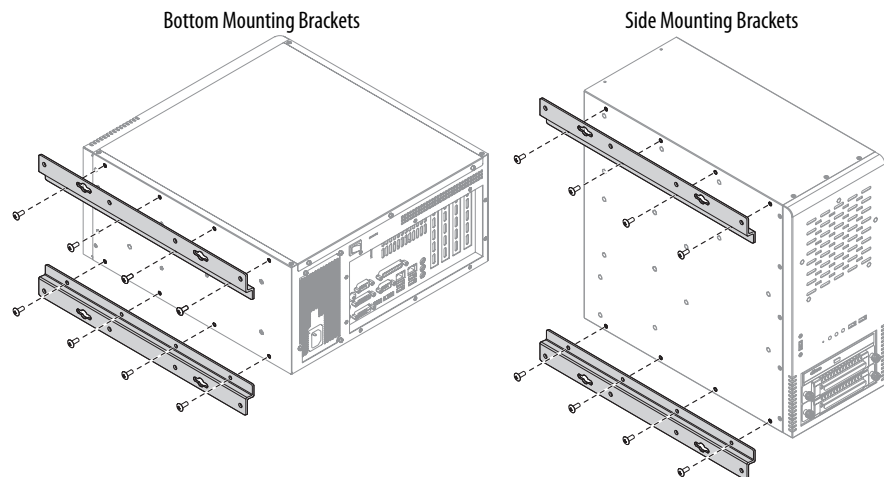

4. See [Figure 9](#) to decide which mounting holes to use on the bracket.
5. Drill holes in the wall or shelf to accommodate screws sized M6...M8.

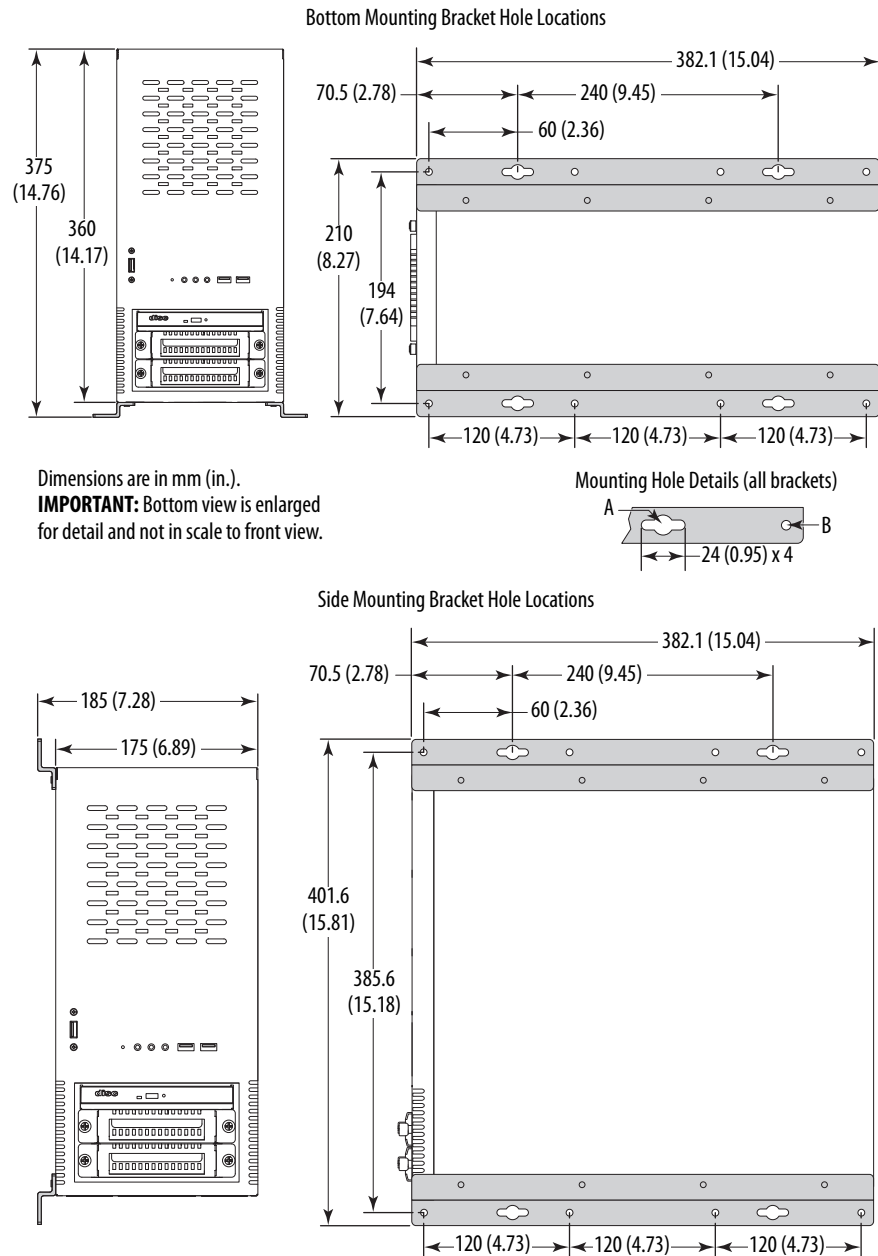Figure 9 - Mounting Hole Locations on 750R Computers


Callout	Dim, mm (in.)	Qty	Description
A	Ø 10 (0.39)	4	Use these mounting holes for the following. <ul style="list-style-type: none"> You are replacing a legacy computer. Shock and vibration are not environmental elements.
B	Ø 6.5 (0.25)	8	Use these mounting holes when shock and vibration are environmental elements.

6. Fasten the computer to the wall or shelf with M6...M8 mounting screws.

Mount the 1450R Computer in a Rack Cabinet

You can install the 1450R computer in a rack cabinet that does the following:

- Conforms to EIA standards for equipment with 483 mm (19 in.) wide panels
- Accommodates the 4U height and depth of the computer
- Provides rear clearance for cables and airflow

A rack cabinet with a depth of 610 mm (24 in.) is sufficient.

IMPORTANT Rack slides are not supplied with the computer and must be ordered separately.
See [Mounting Hardware on page 20](#) for the catalog number necessary for ordering.
See [Install Rack Slides \(1450R Computer\) on page 94](#) if you have purchased the rack slides.

Support the computer with rack slides or by fastening it to a shelf. The four flanges of the computer secure the computer horizontally only to the front mounting rails of the rack cabinet.

TIP For ease of installation, use two or more people to install the computer.


Follow these steps to mount the 1450R computer.

1. Verify that the mounting location provides adequate space for cables and airflow.

See [Mounting Clearance Requirements on page 20](#) for recommended allowances.

2. Attach the supplied rack handles to the computer.

Torque the screws to 1.3 N•m (12.1 lb•in).

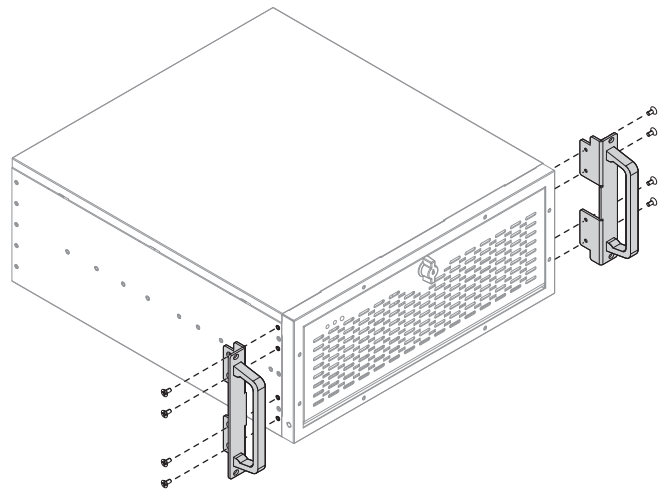


3. See [Install Rack Slides \(1450R Computer\) on page 94](#) on how to install rack slides to the rack cabinet and the 1450R computer.

Connect Peripherals

The following illustration shows the I/O port panel of the computers. Peripheral components compatible to each port are inside the callout figures.

Figure 10 - 750R and 1450R Computer Peripherals

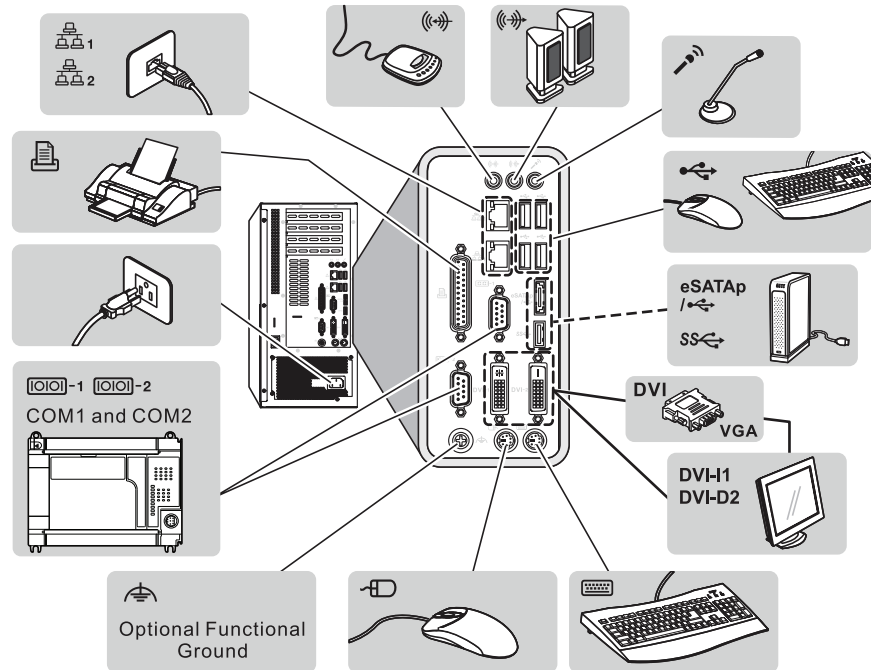


TIP

- There are three USB ports on the front panel. Use these ports to connect various USB devices to the computer, such as an external drive.
- You can use a DVI-to-VGA adapter to connect an external VGA display to the DVI-I1 port of the computer.


Internal USB Port

There is an internal USB port for activation dongles or other USB storage devices. You must first remove the computer cover to access the port.

See [Chapter 4](#) for how to remove and reinstall the computer cover.

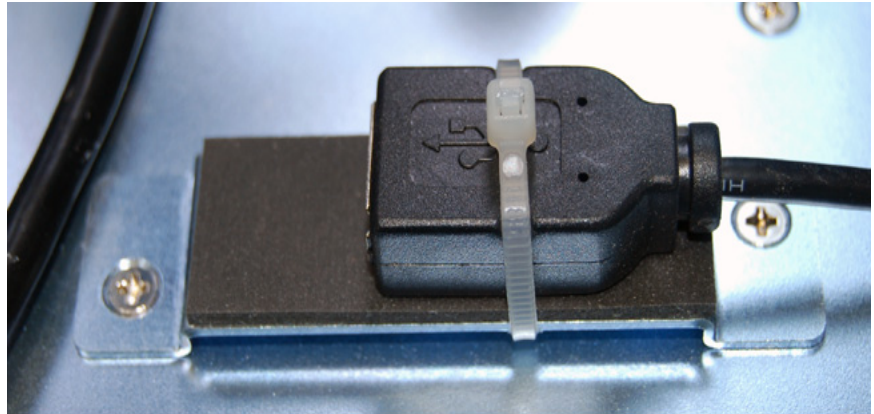

Internal USB port secured with factory installed cable tie.

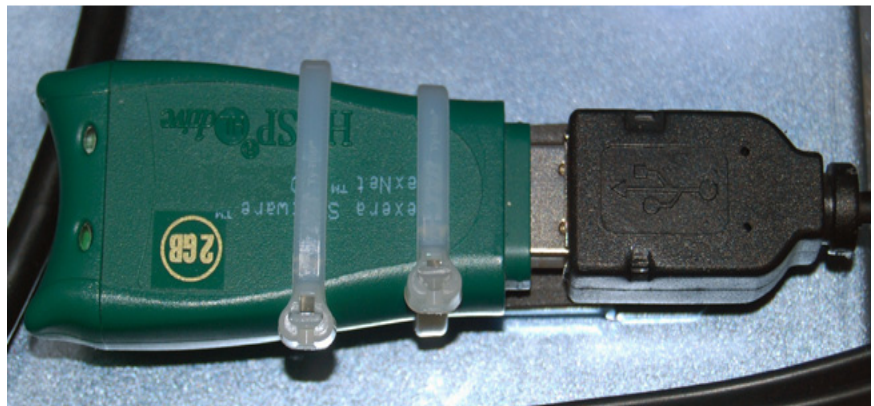

An activation dongle that is connected to internal USB port and secured with the supplied cable ties.

TIP To connect an external device, cut the factory installed cable tie that secures the internal USB port.
We recommend that you fasten any device that is connected to the internal USB port with the supplied cable ties.

Connect Power

Both power adapters ship with a power cord that has an IEC 60320 C14 receptacle and a NEMA 5-15P three-prong plug for North American applications. Any IEC 60320 C13 power cord can be used for other international applications. The power supply input accepts 100...240V AC and is autoranging.



ATTENTION: When you connect power to the computer for the first time, the following actions occur:

- The default UEFI setting automatically starts the computer after it is plugged into a power source.
- You must read and accept an End User Setup procedure for computers with a Windows operating system (requires an external display).

Do not disconnect power from the system until after the Windows Setup procedure is completed. If power is disconnected during this procedure, it can result in a corrupted system image.

Operate the computer in an industrial or control room environment, which uses some form of power isolation from the public low-voltage mains.



ATTENTION: Supply the computer circuit with its own disconnect. Use an uninterruptible power source (UPS) to help protect against unexpected power failure or power surges.

Always shut down the Windows operating system before you disconnect power to the computer to minimize performance degradation and operating system failures.

Follow these steps to connect the computer to an AC power source.

1. Connect the power cord to the AC power input. See [Hardware Features](#) starting on [page 11](#) for where the power inputs are on each computer model.
2. Connect the AC power cord to a power source.



SHOCK HAZARD: Connect the AC power cord to a power source with an earth ground. Failure to follow this warning can result in electrical shock.

3. Apply 100...240V AC power to the computer.

Functional Ground Screw

The pre-installed functional ground screw is not required for safety or regulatory compliance. If a supplemental ground is desired, use the functional ground screw on the rear panel of the 750R and 1450R computers. See [pages 12 and 13](#) for where the functional ground screw is on each computer model.

If you use the functional ground screw, connect the computer to earth ground by using a 1.5 mm² (16 AWG) or larger external wire. Use a ground wire with an insulation color that is approved by the local inspection authority.

Connect to a Network

The computers have two 1 Gb LAN ports that connect to an Ethernet network by using CAT5 or CAT5e twisted-pair Ethernet cable with RJ45 connectors. See [Hardware Features](#) starting on [page 11](#) for where the LAN ports are on each computer model.

IMPORTANT To help prevent performance degradation of Ethernet communication, do not subject the computer or cables to extreme radiation or conducted high-frequency noise.

In industrial environments, proper cable routing and power conditioning are required for Ethernet communication. We recommend that you route all Ethernet cabling through dedicated metal conduits. For improved performance reliability, install ferrite bead filters at the cable ends.

Operate the Computer

Topic	Page
Operating Guidelines	29
Start the Computer	30
Restart the Computer	31
Shut Down the Computer	32

Operating Guidelines

Follow these operating guidelines for your computer:

- If you use an external display, turn on the display first.



SHOCK HAZARD: Do not operate the computer with the covers removed. An electrical shock hazard exists. All covers are required to maintain EMI shield.

- Always use the proper power down procedures as required by your operating system, such as the Shut Down command in the Microsoft Windows operating system.
- After you shut down the computer, do not apply power again until shutdown is complete.


For computers with an HDD, the HDD must come to a complete stop, which can take up to 30 seconds after shutdown is initiated.

Start the Computer

Follow these steps to start the computer.

IMPORTANT The following steps apply to when you must manually start the computer. See [Connect Power on page 27](#) for when power is applied to the computer for the first time.

1. Make sure any connected components with separate power supplies (such as an external display) are turned on first.
2. Make sure all necessary peripheral devices are connected to the corresponding I/O ports on the computer.
3. If you have a 1450R computer and the front door is locked, complete the following steps:
 - a. Unlock the front door with the provided key.
 - b. Open the door to access the power switch.
4. Plug the AC power cable into the power input on the computer and into a power source or wall outlet.

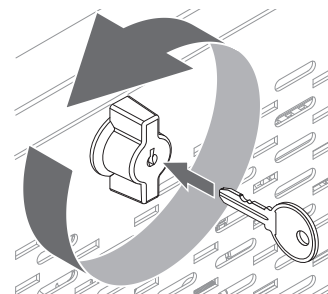

SHOCK HAZARD: Connect the AC power cord to a power source with an earth ground. Failure to follow this warning can result in electrical shock.

5. Press the power switch.

See [Hardware Features on page 11](#) for the power switch location.

The computer performs certain actions when it is started or reset. See [Restart the Computer on page 31](#).

If your computer does not start or you notice other anomalies, refer to the [Troubleshooting on page 82](#).

Restart the Computer

Use any of the following methods to restart your computer:

- From the Start menu, choose Restart.
- Press Ctrl+Alt+Delete on an attached keyboard and click Restart.
- Press the reset button.

During a restart, the computer does the following:


- Clears the RAM.
- Starts the POST.
- Initializes peripheral devices such as drives and printers.
- Loads the operating system.

Use an external display to view the progress of the POST, the initialization of accessory devices, and the start-up dialogs for the operating system that is installed.


Restart the Computer with the Reset Button

IMPORTANT Press the reset button only if the system locks up or some other anomaly occurs.


1. If you have a 1450R computer and the front door is locked, complete the following steps:
 - a. Unlock the front door with the provided key.
 - b. Open the door to access the reset button.
2. Lightly press the tip of a stylus or any other pointed device to the reset button.

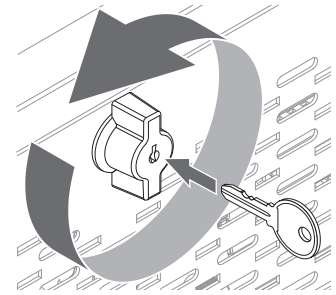

Resetting the 750R Computer

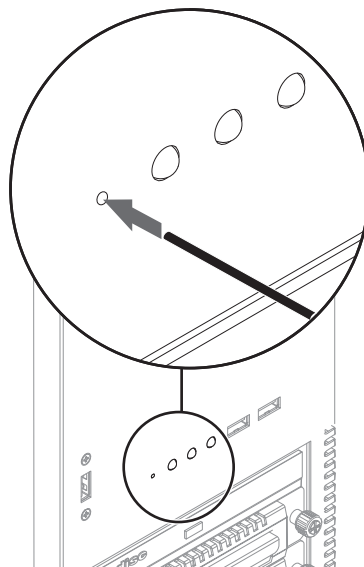

Resetting the 1450R Computer

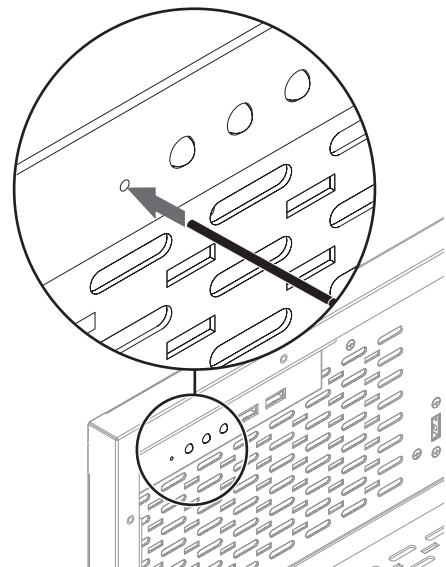

Shut Down the Computer

Use either of the following methods to shut down the computer.

Method	Actions
Windows OS	With an attached mouse, keyboard, and display, do one of the following. <ul style="list-style-type: none">• Press Ctrl+Alt+Delete and click Shut Down.• From the Start menu, click or choose Shut Down from the pull-down menu.
Power switch	Momentarily press the power switch to shut down the computer. See Hardware Features on page 11 for the power switch location.

After you shut down the computer, do not apply power again until shutdown is complete. For computers with an HDD, the HDD must come to a complete stop, which can take up to 30 seconds after shutdown is initiated.

Replace Components

Topic	Page
Accessories and Replacement Parts	33
Voltage Precautions	33
Electrostatic Discharge Precautions	34
Pre-configuration	34
Post-configuration	35
Required Tools	35
Remove the Cover	36
Reinstall the Cover	37
Drive Precautions	38
Replace a Drive	38
Replace or Add Memory Modules	40
Replace the RTC Battery	42
Replace the Power Supply Unit	44

Accessories and Replacement Parts

You can view a list of accessories and replacement parts at <https://ab.rockwellautomation.com/Computers>.

Review the specifications of a new component before you install it to make sure it is compatible with the computer. Record the model, serial number, and any other pertinent information of new components for future reference.

IMPORTANT We recommend that you use only Allen-Bradley® approved accessories and replacement parts.

Voltage Precautions

The computers contain line voltages. Disconnect all power to the computer before you install or remove components.



SHOCK HAZARD: Disconnect all power to the computer before you remove components.

Failure to disconnect power can result in severe electrical shock to an individual or electrostatic discharge (ESD) damage to the computer and components.

Electrostatic Discharge Precautions



ATTENTION: Electrostatic discharge (ESD) can damage static-sensitive devices or microcircuitry.

- Disconnect all power before you work on the computer as detailed in [Voltage Precautions on page 33](#).
- Observe proper packaging and grounding techniques to help prevent damage.

Follow these ESD precautions:

- Transport the computer and replacement parts in static-safe containers, such as conductive tubes, bags, or boxes.
- Keep electrostatic-sensitive parts in their containers until they arrive at the designated static-free work area.
- Cover the designated work area with approved static-dissipating material:
 - Use an anti-static wriststrap that is connected to the work surface.
 - Use properly grounded tools and equipment.
- Keep the designated work area free of nonconductive materials, such as plastic assembly aids and foam packing.
- Avoid contact with pins, leads, or circuitry.
- Always hold components with a printed circuit board (PCB) by its edges and place it with the assembly side down.

Pre-configuration

IMPORTANT

Before you install hardware or perform maintenance procedures that require access to internal components, we recommend that you first back up all computer data to avoid loss.



ATTENTION: Make sure to read and understand all installation and removal procedures before you configure the computer hardware.

Follow these steps before you remove the cover or you replace a hardware component.

1. Shut down the computer and all peripherals that are connected to it.
2. Disconnect all cables from power outlets to avoid exposure to high energy levels.
If necessary, label each cable to expedite reassembly.
3. Disconnect telecommunication cables to avoid exposure to a shock hazard from ring voltages.

Post-configuration

Follow these steps after you install or you remove a hardware component.

1. Verify that all components are installed according to instructions.
2. Make sure that no tools or loose parts are left inside the computer.
3. Reinstall any expansion boards, peripherals, chassis cross members, and system cables that were previously removed.
4. Reinstall the cover according to the instructions on [page 37](#).
5. Reconnect all external cables and power to the computer.
6. Press the power switch to start the computer.

Required Tools

The following tools are required for component replacement:


- #2 cross-head screwdriver
- anti-static wriststrap
- Side cutters (to cut cable ties, if necessary)

Remove the Cover

To install, replace, or upgrade internal computer components, you must first remove the cover.

Follow these steps to remove the side cover for a 750R computer or the top cover for a 1450R computer.

1. Follow the steps for [Pre-configuration on page 34](#).
2. Unfasten the cover from the computer chassis:
 - 750R computers: Remove the three screws on the rear edge of the side cover (A).
 - 1450R computers: Remove the two screws on the rear edge of the top cover (A).
3. Slide the cover back about 1.5 cm (0.5 in.) to release the hinge tabs (B).
4. Tilt the cover up slightly to disengage the hinge tabs from their lock slots.
5. Pull the cover away from the chassis (C).

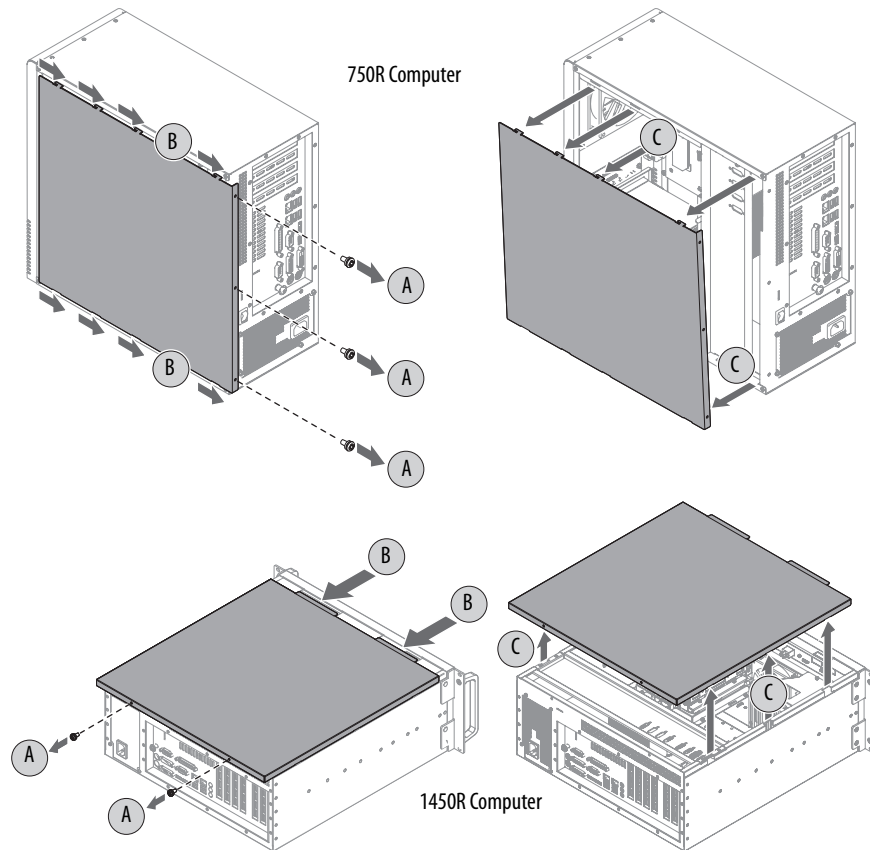

6. After you install, replace, or upgrade internal computer components, reinstall the cover as detailed in [Reinstall the Cover on page 37](#).


Reinstall the Cover

Follow these steps to reinstall the side cover for the 750R computer or the top cover for the 1450R computer.

1. Verify that the computer is in the upright position.
2. Follow [step 1](#) through [step 3](#) of the [Post-configuration on page 35](#).
3. Position the cover so its hinge tabs align and engage the lock slots on the chassis (A).

Tilt the cover slightly to make sure that all hinge tabs are engaged and locked properly.

4. Slide the cover forward to lock the hinge tabs into place (B).
5. Secure the cover to the computer chassis.
 - 750R computers: Reinstall the three screws on the rear edge of the side cover (C).
 - 1450R computers: Reinstall the two screws on the rear edge of the top cover (C).
6. Torque the screws to 0.6 N•m (5.2 lb•in).

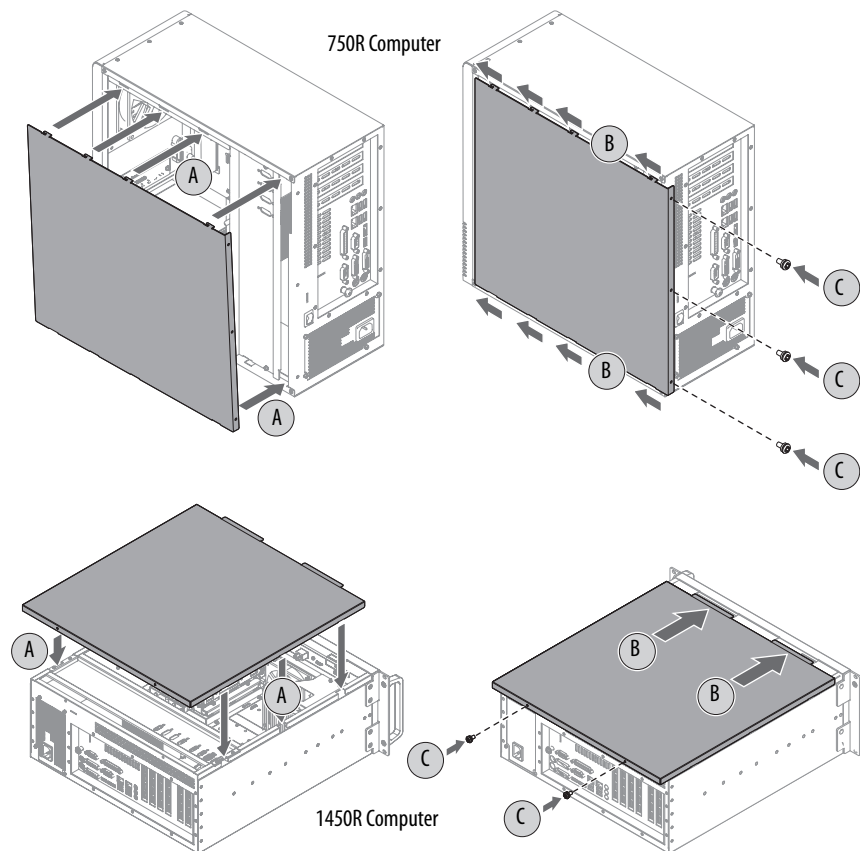

Drive Precautions

Follow these precautions when you work with a drive.

IMPORTANT Back up or clone your computer before you replace a drive.

- Do not touch internal components.
- Always handle the drive by its frame.
- Never remove or install a drive with the power on.
- Store the drive in an anti-static bag when it is not installed.



SHOCK HAZARD: Electrostatic discharge (ESD) can damage the computer and components. Read and follow [Electrostatic Discharge Precautions on page 34](#) before you remove a drive.

Failure to follow proper safety precautions can result in severe electrical shock to an individual or ESD damage to the computer and its components.



ATTENTION: Mechanical shock can damage a drive. Do not drop or bump the drive.


Replace a Drive

You can replace the HDD. All 6177R computers have two drive bays, but only server models have two drives that are pre-installed.

IMPORTANT This section is to replace an HDD in the first drive bay (SATA 0), which is the top drive bay in either computer model. See pages [12](#) and [13](#) for bay location. If you want to install or replace an HDD in the second (bottom) drive bay (SATA 1), see [Install a Second HDD on page 87](#) for further information.


Follow these steps to replace an HDD.

1. Follow the steps for [Pre-configuration on page 34](#).
2. If you have a 1450R computer and the front door is locked, complete the following steps:
 - a. Unlock the front door with the provided key.
 - b. Open the door to access the drive bays.
 - c. Go ahead to [step 3](#).

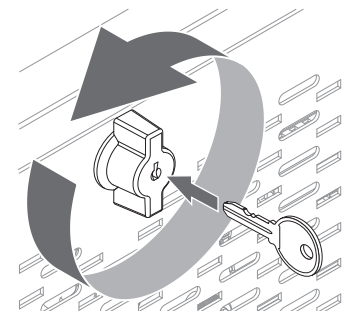


IMPORTANT Use an anti-static wriststrap that is connected to the work surface, and properly grounded tools and equipment.

3. Remove the HDD assembly from its bay.
 - a. Loosen the two captive thumbscrews of the HDD assembly (A).
 - b. Pull the HDD assembly from its bay (B).

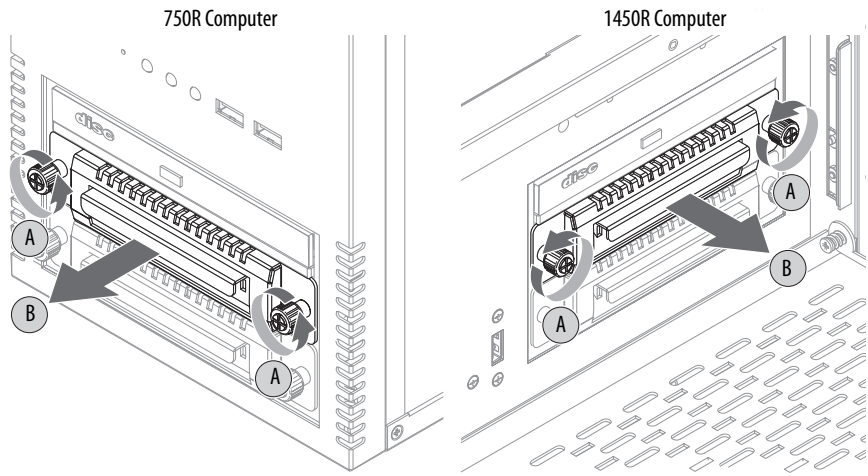

4. Remove the HDD module from its tray.
 - a. Remove the four mounting screws from the bottom of the tray (C).
 - b. Detach the tray from the HDD module to be replaced (D).

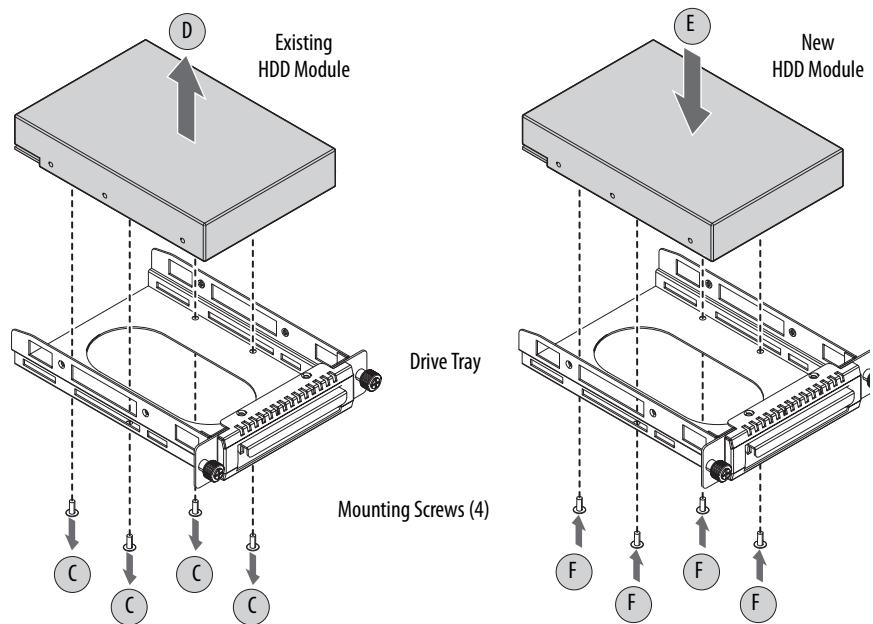

5. Install the new HDD module to the tray.




ATTENTION: Mechanical shock can damage a drive. Do not drop or bump the drive.

- a. Install the new HDD module with the PCB-side down.
- b. Fasten the drive tray over the HDD module (E).
- c. Secure the drive tray to the module with the four mounting screws (F).

Torque the screws to 0.59 N•m (5.2 lb•in).

6. Return the HDD assembly into its bay (G).
7. Tighten the two captive thumbscrews of the drive assembly to secure it to the computer (H).

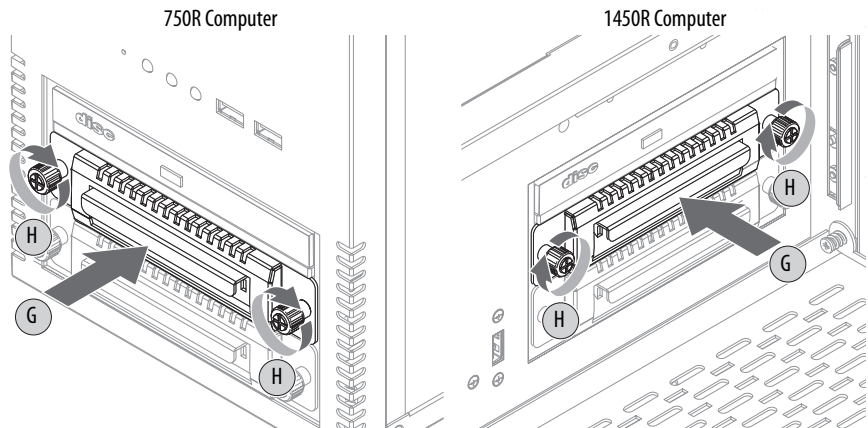


8. Follow the steps for [Post-configuration on page 35](#).

Replace or Add Memory Modules

The motherboard of the 750R and 1450R computers has four DIMM slots that support up to 32 GB maximum system memory.

Figure 11 - Memory Module Slots and Module Alignment

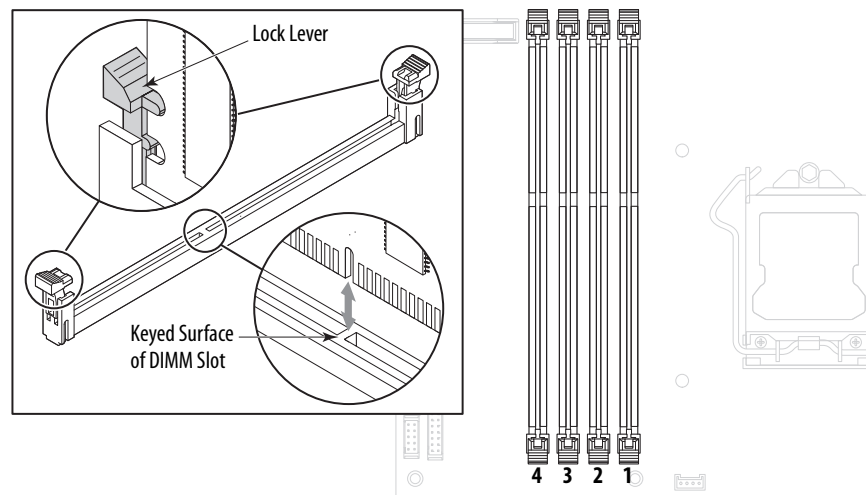

IMPORTANT When you install memory in pairs, install modules in slots 1 and 3 or slots 2 and 4 for optimal performance.

Memory Configuration Guidelines

Follow these guidelines when you replace or add memory to the computers:

- Use only standard unbuffered memory modules that conform to non-ECC 240-pin DDR3 SDRAM (PC3-10600) standards.
- Use only DDR3 type memory modules.
- Use only memory modules with gold-plated contacts.
- Always handle a memory module by its edges.

IMPORTANT We recommend that you use only Allen-Bradley approved memory modules. See <http://ab.rockwellautomation.com/Computers> for qualified replacement parts and accessories.

Replace or Add a Memory Module

Follow these steps to replace or add a memory module.

IMPORTANT Use an anti-static wriststrap that is connected to the work surface, and properly grounded tools and equipment.

1. Follow the steps for [Pre-configuration on page 34](#).
2. Remove the computer cover as detailed in [Remove the Cover on page 36](#).

TIP To install more memory, go ahead to [step 5](#) of this section.

3. Locate the memory module that you want to replace.
See [System Boards on page 15](#) for memory location on the motherboards.
4. Remove the selected memory module.
 - a. Use your thumbs or two fingers to push open the lock levers, which release the memory module from its slot for easy removal.
See [Figure 11 on page 40](#).
 - b. Gently pull out the memory module to remove it from its slot.
 - c. Place the memory module on a static-dissipating work surface or inside an anti-static bag.
5. Install the new memory module.

IMPORTANT When you install memory in pairs, install modules in slots 1 and 3 or slots 2 and 4 for optimal performance.

- a. Hold the memory module by its edges as you remove it from its anti-static bag.
- b. Orient the module so the notch on its bottom edge aligns with the keyed surface of the DIMM slot.
See [Figure 11 on page 40](#).

TIP The keyed surface is off center to assist the correct alignment.

- c. Press the module fully into the slot to engage the lock levers.
See [Figure 11 on page 40](#).
- 6. Reinstall the computer cover as detailed in [Reinstall the Cover on page 37](#).
- 7. Follow the steps for [Post-configuration on page 35](#).

Replace the RTC Battery

The computers use nonvolatile memory that requires an RTC battery to retain system information when power is disconnected. The 3V, 600 mAh, CR2450 cell lithium battery is on the motherboard.

The battery must be replaced during the life of the computer. Battery life depends on the amount of time the computer is on, or on-time.

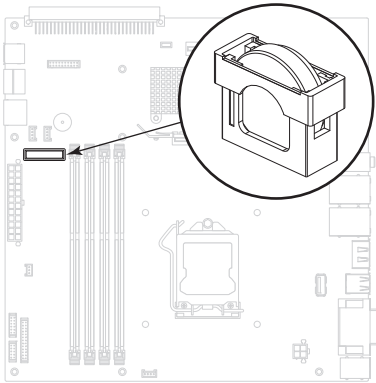


Table 1 - Battery Estimated Life Span

On-time (hrs/wk)	Estimated Battery Life Span (yrs)
0	4
40	5.5
80	7

If the computer does not retain the correct time and date, replace the battery.



ATTENTION: A risk of fire and chemical burn exists if the battery is not handled properly.

- Do not disassemble, crush, puncture, or short external contacts.
- Do not expose the battery to temperatures higher than the rated temperature ranges of 0...50° C (32...113° F).
- Do not dispose of a used battery in water or fire.


For safety information on how to handle lithium batteries, see Guidelines for Handling Lithium Batteries, publication [AG-5.4](#).

Follow these steps to replace the RTC battery.

1. Follow the steps for [Pre-configuration on page 34](#).
2. Remove the computer cover as detailed in [Remove the Cover on page 36](#).
3. For 750R computers, lay the computer on its side (components showing).

4. If necessary, remove any accessory boards or cables that prevent access to the RTC battery socket.
5. Remove the old battery.
 - a. Pull the battery cover straight out of the battery socket.
 - b. Pull the old battery from its socket.
6. Install the new battery.
 - a. Insert the new battery with the positive polarity (+ side) towards the SO-DIMM memory slots.

Verify that the battery is seated completely.

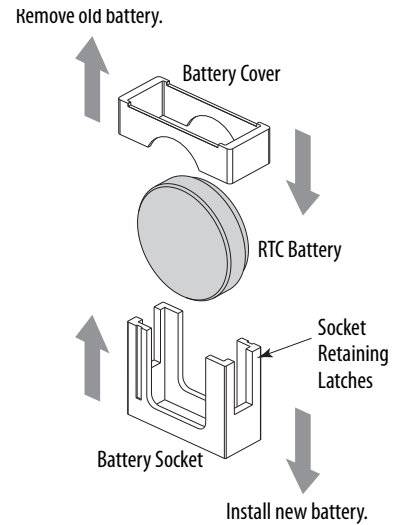

TIP The socket retaining latches allow only one way for the battery to be installed.

- b. Reinstall the battery cover.
7. Follow the steps for [Post-configuration on page 35](#).
8. During POST, press F2 on an attached keyboard to access the UEFI setup and reconfigure settings.

See [Chapter 5](#) for more information on UEFI settings.

IMPORTANT If you replace the battery, then all UEFI settings return to their default settings. UEFI settings other than default must be reconfigured after you replace a battery.



This computer contains a sealed lithium battery that could need replacement during the life of the computer.

At the end of its life, collect the battery that is contained in this computer separately from any unsorted municipal waste.

Replace the Power Supply Unit


Follow these steps to replace the power supply unit (PSU).

IMPORTANT Use an anti-static wriststrap that is connected to the work surface, and properly grounded tools and equipment when you handle internal computer components.


1. Follow the steps for [Pre-configuration on page 34](#).
2. Remove the computer cover as detailed in [Remove the Cover on page 36](#).
3. For 750R computers, lay the computer on its side (components showing).
4. Remove the factory-installed chassis cross member or optional I/O card retention bracket as detailed in [Install I/O Card Retention Bracket on page 90](#).
5. Cut the cable ties with side cutters in the following locations.




ATTENTION: The photo shows a 1450R computer, which has six cable ties to cut. The circle with blue line is the cable tie to the PCI expansion board, which does not apply to 750R computers.

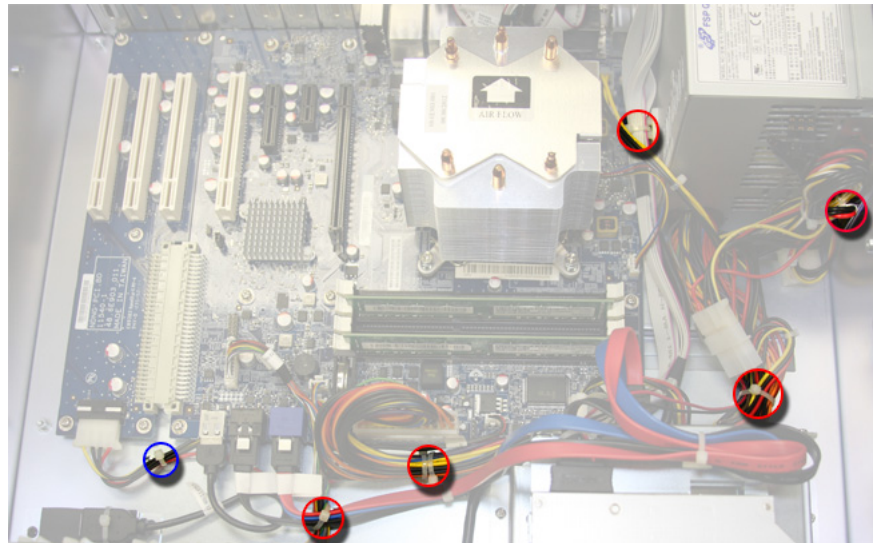


6. For 1450R computers, disconnect the 4-pin power connector from the PCI expansion board.

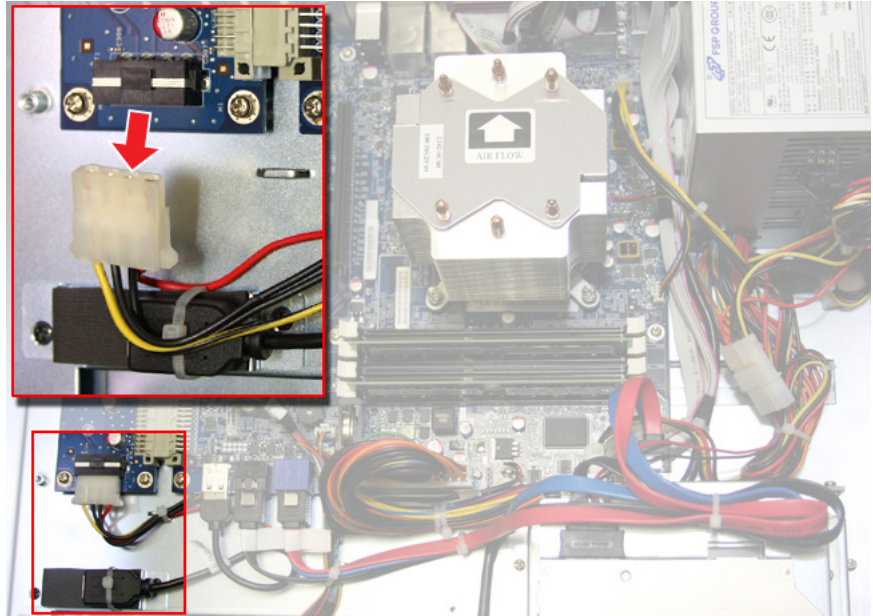


7. Disconnect the ATX 24-pin power connector from the motherboard.

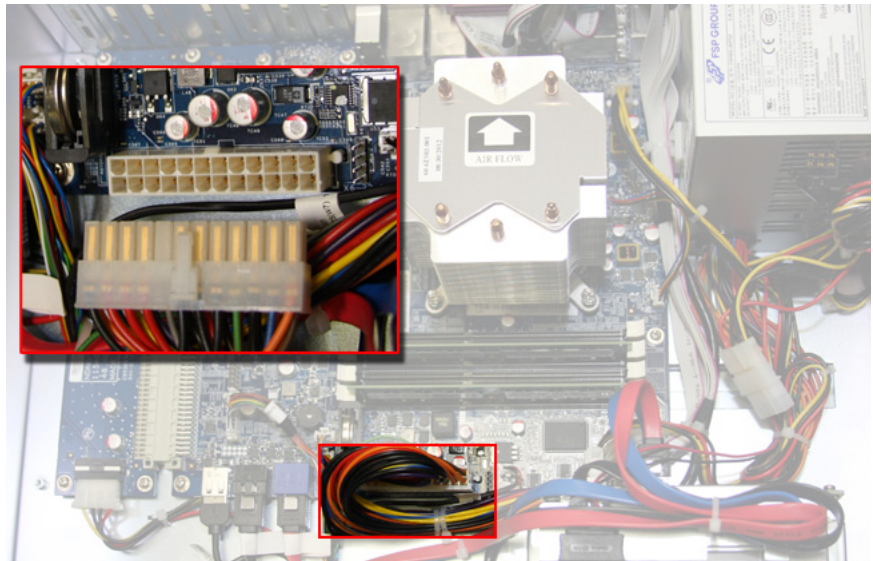


8. Disconnect the 4-pin power connector from the HDD assembly.

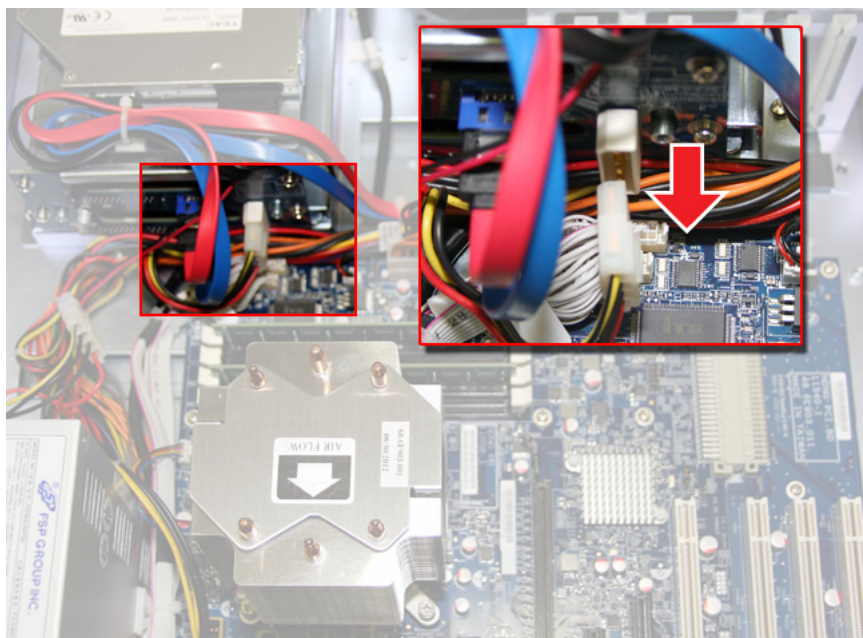


9. Disconnect the 4-pin power connector from the ODD assembly.

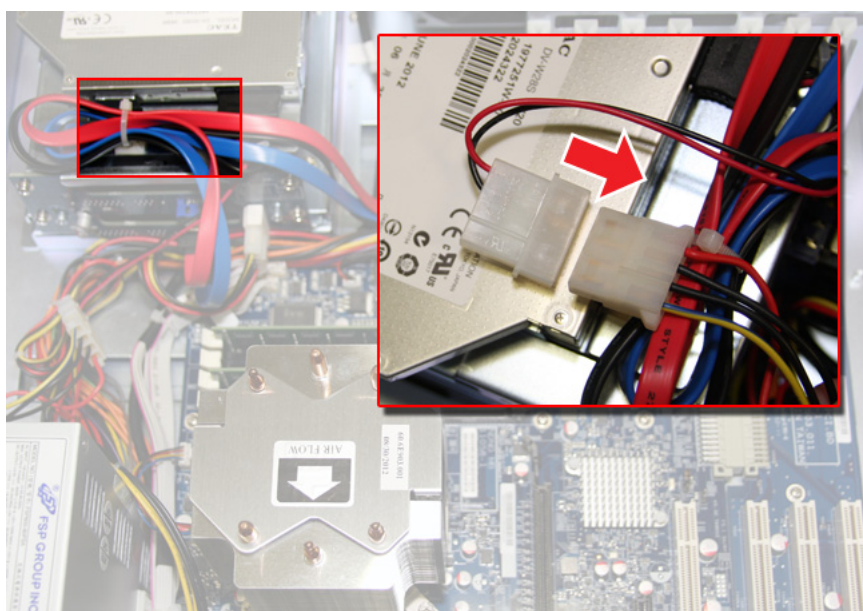

10. Disconnect the +12V 4-pin power connector from the motherboard.

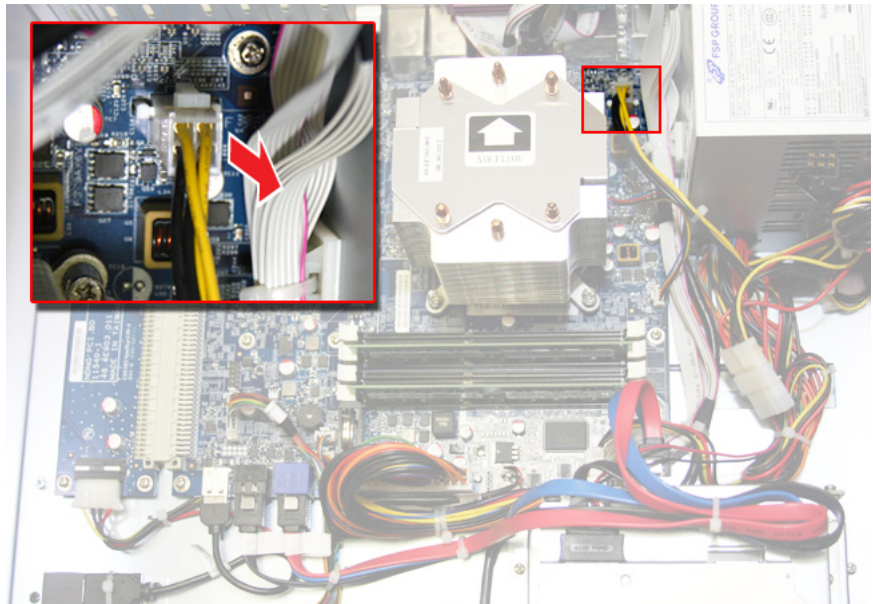


11. Remove the five screws that secure the PSU to the chassis and chassis bracket.

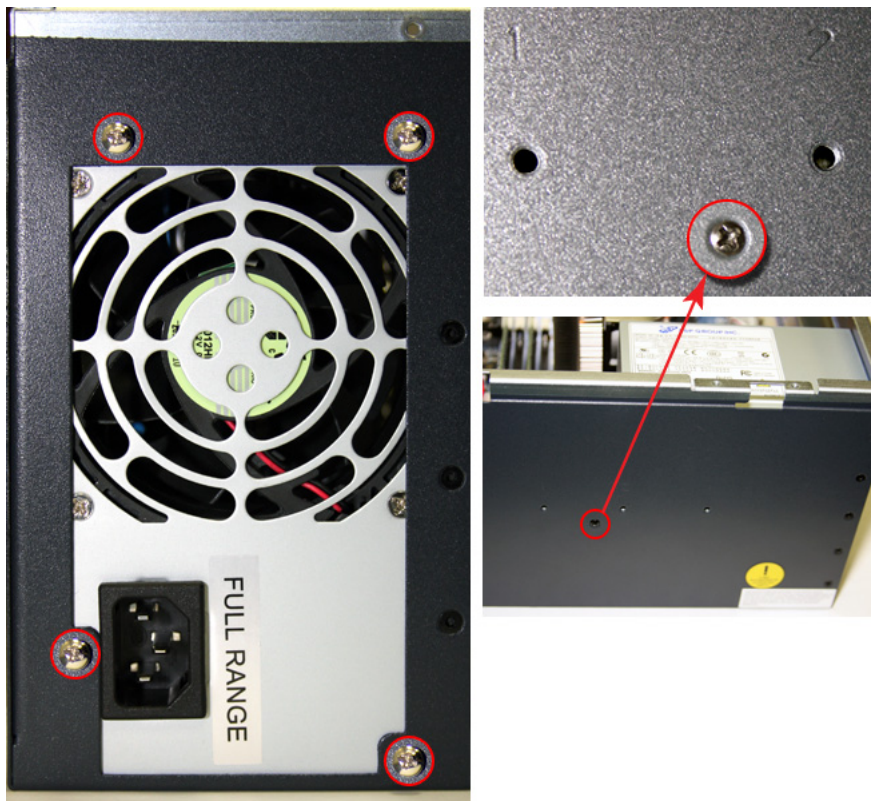

12. Disconnect the two SATA cables from the HDD assembly.

IMPORTANT Mark each SATA cable so that you can reconnect them to the correct port after you install the new PSU.

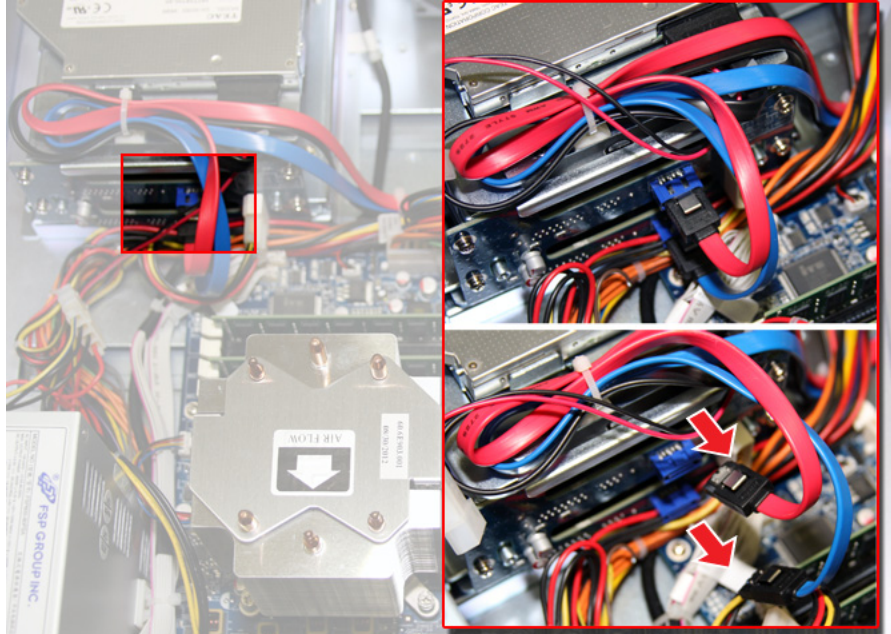

13. Remove the PSU.
14. Install the new PSU in the reverse order of the removal steps.
 - a. **Step 11:** Torque the five screws to 1.4 N•m (12 lb•in) to secure the new PSU.
 - b. **Step 4:** Reinstall the chassis cross member or I/O card retention bracket as detailed in [Install I/O Card Retention Bracket on page 90](#).
 - c. Verify that all cables are properly connected before you reinstall the cover.
 - d. Remove and replace any cut cable ties.
15. Follow the steps for [Post-configuration on page 35](#).

Configure the UEFI (BIOS) Settings

Topic	Page
Set-up Utility Overview	49
Access the Set-up Utility	50
Set-up Screen Overview	50
Firmware Update	51
Firmware Configuration	52
Diagnostics	71
AMI Rescue	73
Exit	80

Set-up Utility Overview

The set-up utility is a hardware configuration program that is built into the universal extensible firmware interface (UEFI). In this chapter, UEFI replaces Basic Input/Output System (BIOS) to describe the system firmware except where BIOS is used, such as on a graphical interface.

The UEFI is already configured and optimized so there is no need to run this utility. However, you can run the set-up utility to do the following:

- Change the system configuration.
- Change the UEFI setup when the system detects a configuration error.
- Redefine communication ports to prevent any conflicts.
- Read the current amount of system memory.
- Change the boot drive order.
- Set or change the password, or make other changes to the security settings.
- Upgrade the system firmware.
- Run the diagnostic utility to determine the cause of system malfunction.
- Restore or back up the operating system.

Access the Set-up Utility

Follow these steps to access the set-up utility in your computer.

IMPORTANT An external keyboard must be connected to the computer to perform these steps.

1. Start or restart your computer.
2. During POST, you have two selections to access the set-up utility.

Press	Result
F2	Accesses a graphical interface of set-up environment. IMPORTANT: Screen shots in this chapter are from the UEFI graphical interface.
DEL (delete)	Accesses a text mode set-up environment.

Set-up Screen Overview

The set-up screen is the main screen for the UEFI graphical interface. On the left are five menu options that are stacked vertically. Each menu button provides access to information, commands, or configurable options for the following topics:


- [Firmware Update](#)
- [Firmware Configuration](#)
- [Diagnostics](#)
- [AMI Rescue](#)
- [Exit](#)



Firmware Update identifies the updatable device firmware images and their versions, updates them with new images.

Firmware Update

You can update your system firmware from the Firmware Update menu.

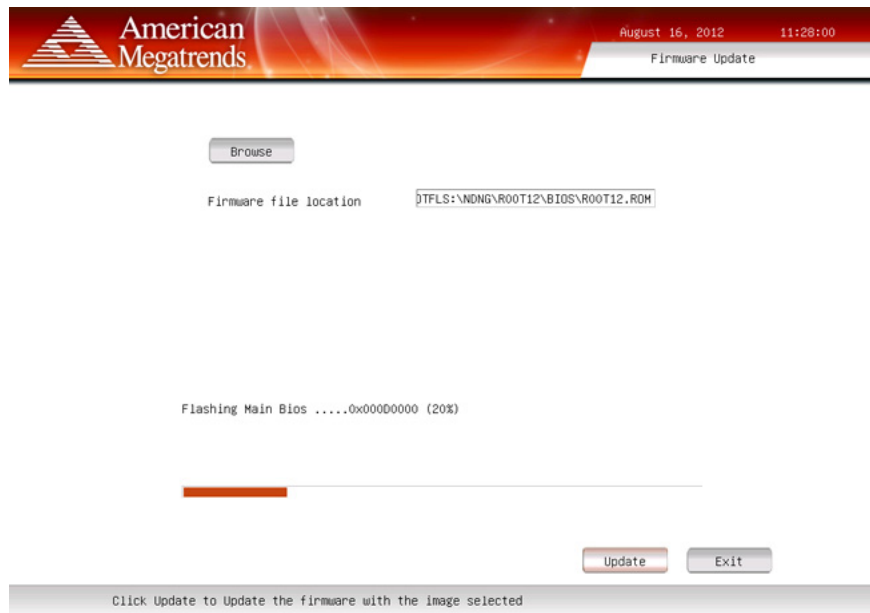

Parameter	Description
Browse	Click to navigate to the firmware file saved onto a media.
Firmware file location	Select or type the file name for the firmware file.
Update	Click to initialize the update process.
Exit	Click to exit the set-up utility.

Follow these steps to update the system firmware.

1. Click the Firmware Update menu.

The Firmware Update screen appears.

2. Click Browse to locate the firmware file.

IMPORTANT The USB mass storage device that contains the firmware file must be FAT, FAT16, or FAT32 formatted to be recognized.

See <https://compatibility.rockwellautomation.com/Pages/home.aspx> for revisions and to download firmware files.

3. Click Update.

Firmware Configuration

You can view and modify the various system parameters from the Firmware Configuration menu. On the left are six menu options that are stacked vertically.



Menu	Description
Main	Use this menu to view general computer information and for basic system configuration.
Advanced	Use this menu to configure information for the PXE, PCI, ACPI, processor, SATA, USB, power, video graphics, super I/O, hardware display, and AMT.
Chipset	Use this menu to configure system chipset information.
Boot	Use this menu to configure boot device priority.
Security	Use this menu to set or change user and administrator passwords.
Save and Exit	Allows you to save changes and reset, discard changes and reset, or restore defaults.

Common Buttons at the Bottom of Screens

Most screens have these common buttons.

Help

Default

Restore

Save

Exit

Button	Description
Help	Click for general help on how to use the set-up utility.
Default	Click to load the default values for all set-up options.
Restore	Click to restore all set-up options to previously saved values.
Save	Click to save configuration changes.
Previous (not shown)	Click to navigate to the previous page.
Exit	Click to close the set-up utility.

Main



August 16, 2012 11:50:34
Firmware Configuration

Main

BIOS Vendor: American Megatrends
 BIOS Version: 000132
 Compliancy: UEFI 2.1
 Build Date and Time: 08/03/2012 08:34:50
 Memory Information:
 Total Memory: 8192 MB (DDR3 1333)
 System Date: 08/16/2012
 System Time: 11:50:34
 Runtime hours: 1057
 Manufacturer: Rockwell Automation/
 Allen-Bradley
 Catalog Number: 6177R-NMFW7 C
 WIN Number: 21GF0FL1GJ
 Version-SYS: 00, 2012/08/03
 Version-Board: A1
 Serial Number: 556C001001G85000028J0A1

Help Default Restore Save Exit

Load Default values for all the setup options. After loading defaults, click save for change to take effect.

Parameter ⁽¹⁾	Description
BIOS Vendor	BIOS manufacturer
BIOS Version	BIOS version information
Compliancy	Unified Extensible Firmware Interface (UEFI) version information
Build Date and Time	Date and time BIOS was created.
Total Memory	Total system memory and memory type (in parentheses)
System Date	Set the system date. Format: Weekday MM:DD:YYYY (Weekday Month:Day:Year)
System Time	Set the system time. Format: HH:MM:SS (Hour:Minute:Second)
Runtime Hours	Records the total hours of computer runtime.
Manufacturer	System manufacturer
Catalog Number	Allen-Bradley® catalog number with series letter
WIN Number	Warranty information number
Version-SYS	System revision, manufacture date
Version-Board	System board version information
Serial Number	Unique system serial number

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

Advanced



Legacy OpROM Support

Parameter ⁽¹⁾	Description
Enable PXE Boot	Enables or disables boot option for legacy network devices. Options: Enabled or Disabled (default)

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

PCI Subsystem Settings

American
Megatrends

August 16, 2012 12:32:56
Firmware Configuration

Main

Advanced

Chipset

Boot

Security

Save & Exit

PCI Subsystem Settings

PCI Bus Driver Version V 2.04.00

PCI Common Settings

PERR# Generation Disabled

SERR# Generation Disabled

Help

Previous

Exit

Enables or Disables PCI Device to Generate PERR#.

Parameter ⁽¹⁾	Description
PCI Bus Driver Version	Displays the PCI bus driver version information.
PERR# Generation	Enables or disables PCI Device to Generate PERR#. Options: Enabled or Disabled (default)
SERR# Generation	Enables or disables PCI Device to Generate SERR#. Options: Enabled or Disabled (default)

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

ACPI Settings

American
Megatrends

August 16, 2012 12:33:53

Firmware Configuration

Main

Advanced

Chipset

Boot

Security

Save & Exit

ACPI Settings

ACPI Settings

ACPI Sleep State

S3 (Suspend to RAM)

Help


Previous

Exit

Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.

Parameter ⁽¹⁾	Description
ACPI Sleep State	Select the highest ACPI sleep state the system enters when the SUSPEND button is pressed. Options: Suspend Disabled, S1 (CPU Stop Clock), or S3 (Suspend to RAM [default])

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

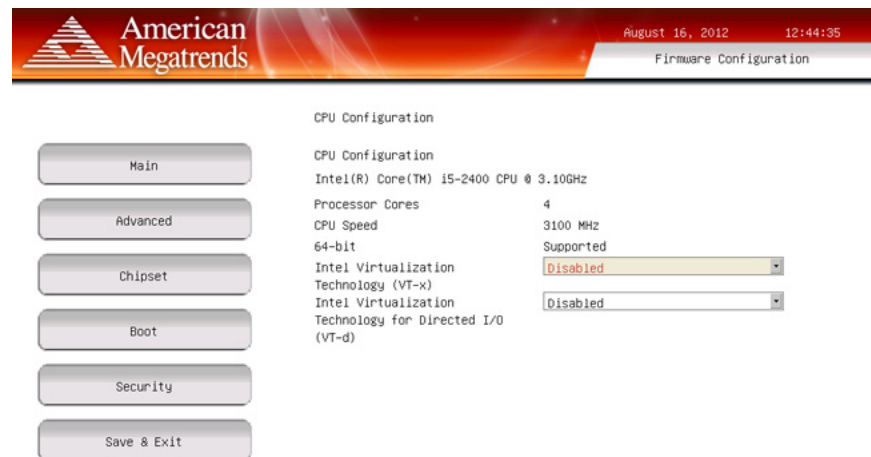CPU Configuration


When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology	
Parameter ⁽¹⁾	Description
CPU Configuration	Displays processor type and maximum speed.
Processor Cores	Displays processor core count.
CPU Speed	Displays maximum speed of the processor.
64-bit	Displays 64-bit support status.
Hyper-threading ⁽²⁾	Enables or disables the hyper-threading technology. Options: Enabled (default) or Disabled
Intel Virtualization Technology (VT-x)	When enabled, a Virtual Memory Manager (VMM) can use the additional hardware capabilities from Vanderpool Technology. Options: Enabled or Disabled (default)
Intel Virtualization Technology for Directed I/O (VT-d) ⁽³⁾	Enables or disables VT-d. Options: Enabled or Disabled (default)

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

(2) Supported on systems with i3-2120 processors.

(3) Supported on systems with i5-2400 processors.


SATA Configuration (for computers with Windows 7, 8.1, or 10 operating systems)

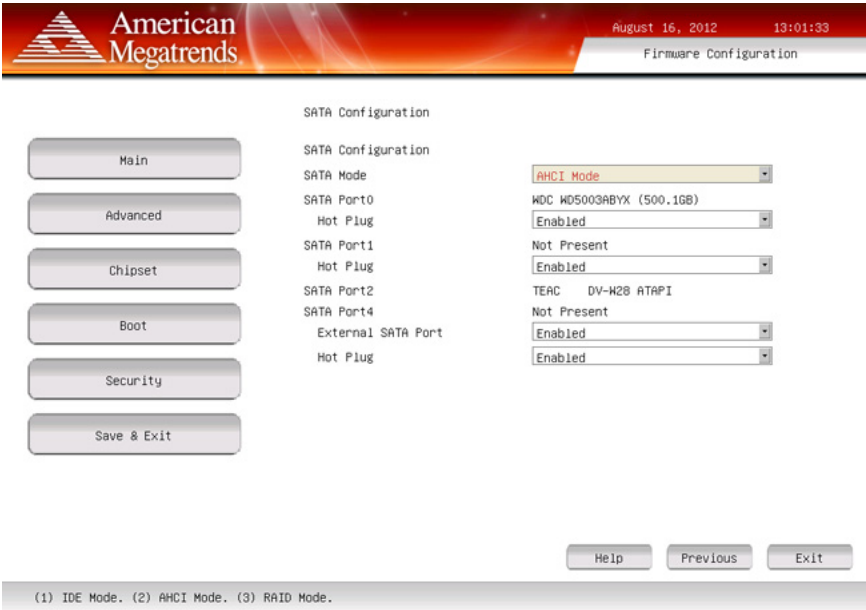

Parameter ⁽¹⁾	Description
SATA Mode	Select an operation mode for the onboard SATA controller. Options: Disabled, IDE Mode, AHCI Mode (default), or RAID Mode ⁽²⁾
SATA Port (0, 1, 2, 4)	Indicates the SATA HDD connected to the SATA connector.
Hot Plug	Enables or disables hot plug support for the SATA port. Options: Enabled (default) or Disabled IMPORTANT: Make sure all writes to HDD are complete before your remove the HDD from the system to avoid risk of data corruption.
External SATA Port	Enables or disables eSATA port. Options: Enabled (default) or Disabled

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

(2) Applies only to computers that ship with Windows Server operating systems. For computers that ship with two HDDs but no operating system, the HDDs are in AHCI mode instead of RAID and each drive acts independently.

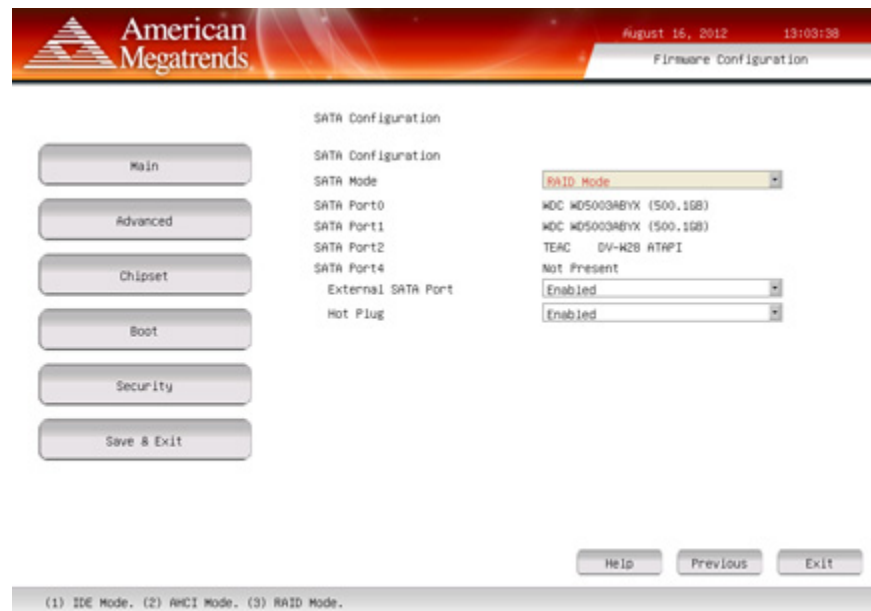SATA Configuration (for computers with Windows Server operating systems)

Parameter ⁽¹⁾	Description
SATA Mode	Select an operation mode for the onboard SATA controller. Options: Disabled, IDE Mode, AHCI Mode, or RAID Mode (default) ⁽²⁾
SATA Port (0, 1, 2, 4)	Indicates that the SATA HDD is connected to the SATA connector.
Hot Plug	Enables or disables hot plug support for the SATA port. Options: Enabled (default) or Disabled
External SATA Port	Enables or disables eSATA port. Options: Enabled (default) or Disabled

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

(2) Applies only to computers that ship with Windows Server operating systems. For computers that ship with two HDDs but no operating system, the HDDs are in AHCI mode instead of RAID and each drive acts independently.

USB Configuration

Main

Advanced

Chipset

Boot

Security

Save & Exit

USB Configuration

USB 2.0 Configuration

Front USB 2.0 Ports

USB 3.0 Configuration

USB 3.0 Controller

Enabled

Enabled

Help

Previous

Exit

Enabled/Disabled Front USB 2.0 Ports

Parameter ⁽¹⁾	Description
Front USB 2.0 Ports	Enables or disables the front USB 2.0 ports. Options: Enabled (default) or Disabled
USB 3.0 Controller	Enables or disables the USB 3.0 controller. Options: Enabled (default) or Disabled

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

Power Configuration

American
Megatrends

August 16, 2012 13:09:38
Firmware Configuration

Main

Advanced

Chipset

Boot

Security

Save & Exit

Power Configuration

Power Configuration

Restore AC Power Loss

Power On

Help

Previous

Exit

Specify what state to go to when power is re-applied after a power failure (G3 state).

Parameter ⁽¹⁾	Description
Restore AC Power Loss	Specify what state to go to when power is reconnected after a power failure (G3 state). Options: Power off, Power on (default), Last State

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

Intel Integrated Graphics

American
Megatrends

August 16, 2012 13:10:50

Firmware Configuration

Intel Integrated Graphics

Intel Integrated Graphics Configuration

DVMT Memory 256MB

Main

Advanced

Chipset

Boot

Security

Save & Exit

Help

Previous

Exit

Select DVMT Mode Memory size used by Internal Graphics Device

Parameter ⁽¹⁾	Description
DVMT Memory	Select a video memory size that can be allocated as graphics memory in the DVMT mode. Options: 128 MB, 256 MB (default), Maximum

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

Super I/O Configuration

American
Megatrends

August 16, 2012 13:11:44

Firmware Configuration

Main

Advanced

Chipset

Boot

Security

Save & Exit

Super I/O Configuration

Super I/O Configuration

Super I/O Chip IT8728

[Serial Port 1 Configuration](#)

[Serial Port 2 Configuration](#)

[Parallel Port Configuration](#)

Help

Previous

Exit

Set Parameters of Serial Port 1

Parameter ⁽¹⁾	Description
Super I/O Chip	Displays the Super I/O chipset information.
Serial Port 1 Configuration	Select to set parameters for serial port 1.
Serial Port 2 Configuration	Select to set parameters for serial port 2.
Parallel Port Configuration	Select to set parameters for the parallel port.

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

Table 2 - Serial Port 1 Configuration

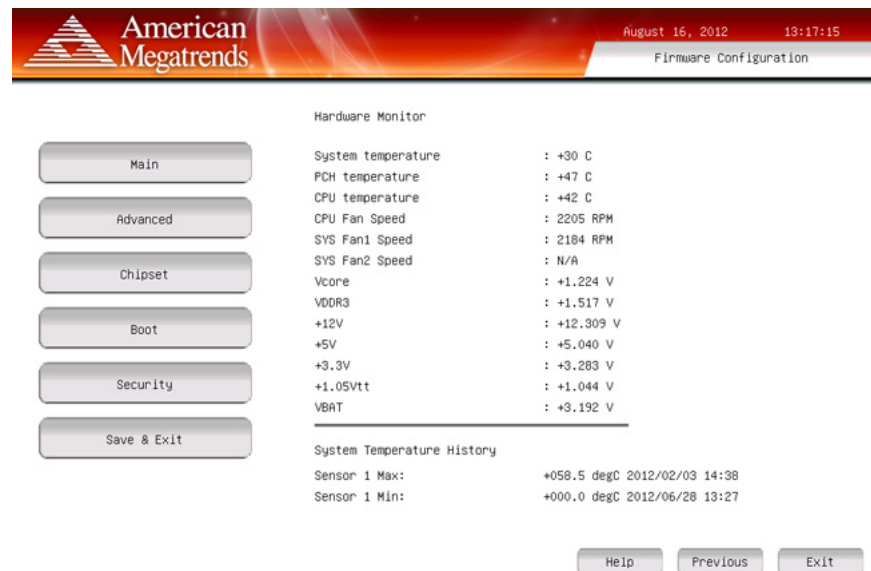
Parameter	Description
Serial Port 1	Enables or disables the serial (COM1) port. Options: Enabled (default) or Disabled
Device Settings	Displays the Base I/O address and IRQ setting of serial port 1.
Change Settings	Select an optimal setting for the super I/O device. Options: Auto (default), I/O=3F8h; IRQ=4, I/O=2F8h; IRQ=4, I/O=3E8h; IRQ=4, I/O=2E8h; IRQ=4

Table 3 - Serial Port 2 Configuration

Parameter	Description
Serial Port 2	Enables or disables the serial (COM2) port. Options: Enabled (default) or Disabled
Device Settings	Displays the Base I/O address and IRQ setting of serial port 2.
Change Settings	Select an optimal setting for the super I/O device. Options: Auto (default), I/O=2F8h; IRQ=3, I/O=3F8h; IRQ=3, I/O=3E8h; IRQ=3, I/O=2E8h; IRQ=3

Table 4 - Parallel Port Configuration

Parameter	Description
Parallel Port	Enable or disables the parallel (LPT/LPTE) port. Options: Enabled (default) or Disabled
Device Settings	Displays the Base I/O address and IRQ setting of the parallel port.
Change Settings	Select an optimal setting for the super I/O device. Options: Auto (default), I/O=378h; IRQ=5, I/O=278h; IRQ=5, I/O=3BCh; IRQ=5
Device Mode	Select a printer mode. Options: Standard Parallel Port Mode (default), EPP Mode, ECP Mode, EPP Mode, and ECP Mode

Hardware Monitor

Advanced	
Parameter ⁽¹⁾	Description
Hardware Monitor System temperature PCH temperature CPU temperature SYS Fan1 Speed SYS Fan2 Speed ⁽²⁾ Vcore VDDR3 +12V +5V +3.3V +1.05Vtt VBAT	Displays the current readings for temperatures (°C), fan speeds, and core voltages of various hardware components. All values are read-only.
System Temperature History Sensor 1 Max Sensor 1 Min Sensor 2 Max Sensor 2 Min Sensor 3 Max Sensor 3 Min	Displays the minimum and maximum temperatures (°C) for applicable sensors over a 24-hour time period (time stamp is 24-hour clock). <ul style="list-style-type: none"> • Sensor 1 is near the front intake fan. • Sensor 2 is near the CPU. • Sensor 3 is near the PCH. All values are read-only.

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

(2) Applies only to rack-mounted computers.

AMT Configuration

Main

Advanced

Chipset

Boot

Security

Save & Exit

AMT Configuration

Intel Management Engine Version7.1.40.1161Execute MEBxDisabled

Help

Previous

Exit

Enabled/Disabled MEBx (Ctrl+P)

Parameter ⁽¹⁾	Description
Intel Management Engine Version	Displays the Intel Management Engine version.
Execute MEBx	Enables the Management Engine BIOS Extension (MEBx), which is accessed by pressing Ctrl+P at POST. This function is used to configure AMT. Options: Enabled or Disabled (default)
Unconfigure AMT/ME	Lets you unconfigure any provisioned management settings for AMT/ME. Options: Enabled or Disabled (default) IMPORTANT: 'Unconfigure AMT/ME' appears only when 'Execute MEBx' is enabled. <div><div>Intel Management Engine Version7.1.40.1161Execute MEBxEnabledUnconfigure AMT/MEDisabled</div></div>

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

Chipset

American
Megatrends

August 16, 2012 13:48:15

Firmware Configuration

Main

Advanced

Chipset

Boot

Security

Save & Exit

Chipset

Initate Graphic AdapterPEG/IGD

LAN Configuration

LAN 1Enabled

LAN 2Enabled

Audio Configuration

Azalia HD AudioEnabled

Help

Default

Restore

Save

Exit

Select which graphics controller to use as the primary boot device.

Parameter ⁽¹⁾	Description
Initiate Graphic Adapter	Select which graphics controller to use as the primary boot device. Options: PCI/PEG, PEG/IGD (default), PEG/PCI
LAN 1	Enables or disables onboard LAN 1 controller. Options: Enabled (default) or Disabled
LAN 2	Enables or disables onboard LAN 2 controller. Options: Enabled (default) or Disabled
Azalia HD Audio	Enables or disables Azalia HD audio. Options: Enabled (default) or Disabled

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

Boot

American Megatrends

August 16, 2012 13:50:52

Firmware Configuration

Boot

Bootup NumLock State: On

Quiet Boot: Disabled

Boot Option Priorities

[Boot Priority List](#)

[CD-DVD ROM Boot Priorities](#)

[Hard-Drive Boot Priorities](#)

Main

Advanced

Chipset

Boot

Security

Save & Exit

Help Default Restore Save Exit

Select the keyboard NumLock state


Parameter ⁽¹⁾	Description
Bootup NumLock State	Enables or disables the Num Lock key on boot. Option: On (default), Off
Quiet Boot	Enables or disables Quiet Boot option. Option: Enabled or Disabled (default) IMPORTANT: When enabled, this option hides the POST screen messages at computer startup.
Boot Priority List	Change the boot order. By default, these devices are the boot priority: 1. USB key 2. CD-ROM 3. HDD 4. PXE 5. UEFI Shell 6. PCI/PCIe RAID/SCSI/SAS card Follow instructions in the dialog box to change the boot order, and to enable or disable options.
USB Boot Priorities ⁽²⁾	Change the USB boot order through a dialog box. Follow instructions to change the boot order, and to enable or disable options.
CD-DVD ROM Boot Priorities ⁽³⁾	Change the CD-DVD ROM boot order through a dialog box. Follow instructions to change the boot order, and to enable or disable options.
Hard-Drive Boot Priorities	Change the hard drive boot order through a dialog box. Follow instructions to change the boot order, and to enable or disable options.

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

(2) This data field is visible only when a USB device is connected to the computer during startup.

(3) This data field is visible only on computers with CD-DVD ROM devices.


Security

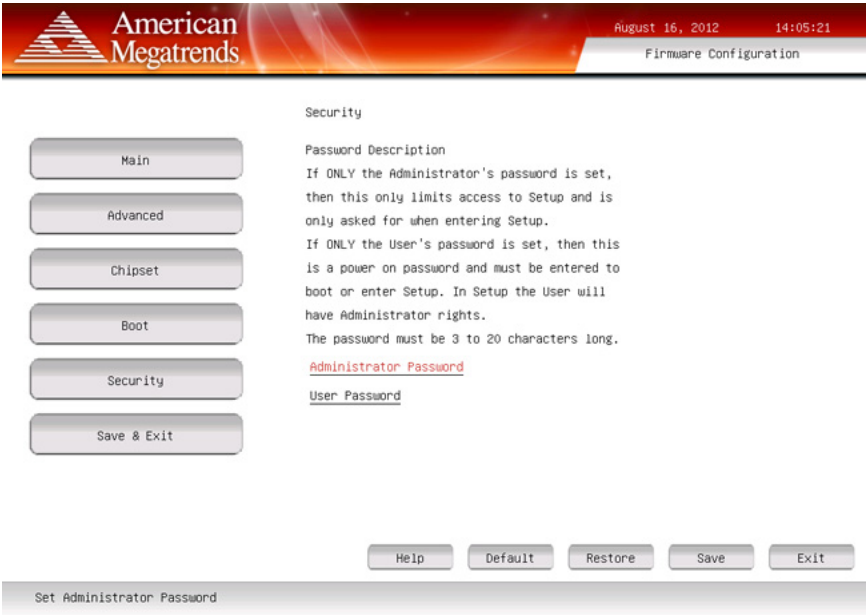

Parameter ⁽¹⁾	Description
Administrator Password	<p>Sets the administrator password. Use this password to reduce access risk from unauthorized or malicious sources.</p> <p>IMPORTANT: If you forget the administrator password, there are two ways to reset it:</p> <ul style="list-style-type: none">Remove and replace the battery; see Replace the RTC Battery on page 42 for more information.Clear the UEF; see Clear the UEFI on page 85 for more information.
User Password	<p>Sets the user password. Use this password to reduce access risk from unauthorized or malicious sources.</p> <p>IMPORTANT: If you forget the user password, there are two ways to reset it:</p> <ul style="list-style-type: none">Remove and replace the battery; see Replace the RTC Battery on page 42 for more information.Clear the UEF; see Clear the UEFI on page 85 for more information.

(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

Save and Exit

 American
Megatrends

August 16, 2012 14:06:15

Firmware Configuration

Save & Exit

Main

Advanced

Chipset

Boot

Security

Save & Exit

[Save Changes and Reset](#)

[Discard Changes and Reset](#)

[Restore Defaults](#)

Help

Default

Restore

Save

Exit


Reset the system after saving the changes.

Parameter ⁽¹⁾	Description
Save Changes and Reset	Saves changes that are made and closes the set-up utility.
Discard Changes and Reset	Discards changes that are made and closes the set-up utility.
Restore Defaults	Loads the optimal defaults in the set-up menu.


(1) See [page 52](#) for an explanation of common buttons near the bottom of screen.

Diagnostics

The Diagnostics menu lets you run the diagnostics utility to determine the cause of the system malfunction by testing computer components, such as the processor, memory, HDD, ODD, video, and other hardware.

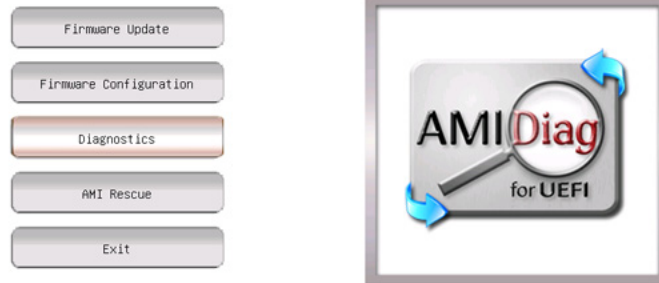

Diagnostics detects problems with the memory, IO devices, CPU, physical disks, and other hardware.

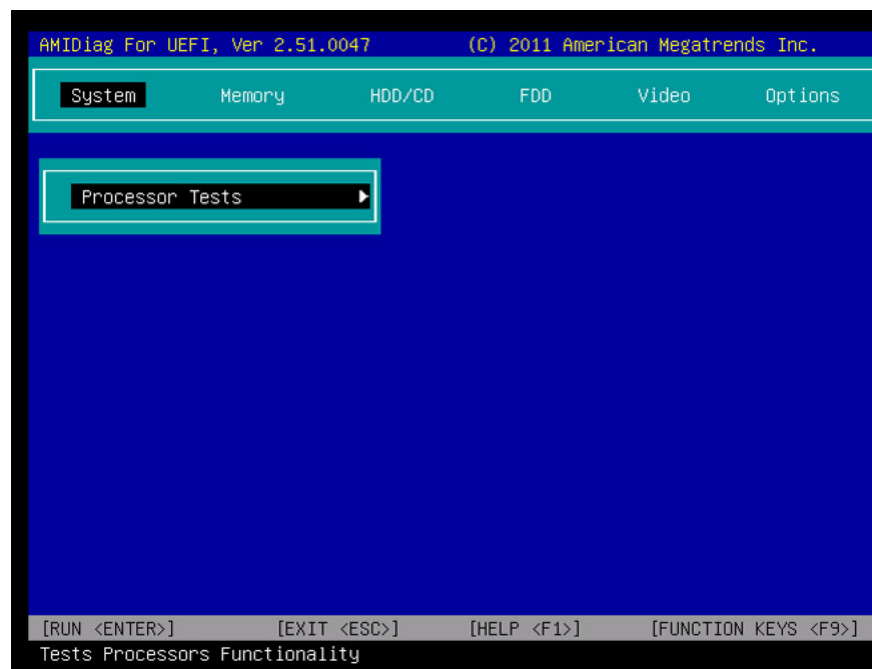

Select a menu option by pressing the up ↑ or down ↓ arrow keys and pressing Enter when a menu is highlighted. Press the left ← or right → arrow keys to toggle between the six Diagnostics menu selections.

The following table lists the shortcut options in the Diagnostics menu.

Button	Description
Esc	Stops a test in progress or exits Diagnostics from any of the six menu options.
Enter	Runs the highlighted test or option.
F1	Displays the Help screens.
F2	Edits batch parameters.
F3	Loads batch parameters.
F4	Saves batch parameters.
F5	Selects or deselects the current test.
F6	Selects or deselects all tests in menu.
F7	Selects or deselects all tests.
F8	Selects or deselects all quick tests.
F9	Displays a list of the Diagnostic function keys.
F10	Runs the selected tests.

AMI Rescue

The AMI Rescue menu lets you back up the system image on your computer and restore that image.



IMPORTANT

The following instructions are for the built-in backup and restore utility, AMI Rescue. You can also use third party utility or software to create an image backup and restore.

System images are also available from the Rockwell Automation® Product Compatibility and Download Center:

<https://compatibility.rockwellautomation.com/Pages/home.aspx>.

The AMI Backup function does the following:

- Overwrites any data that is stored in a hidden partition.
- Saves any data as a new image file stored in a hidden partition.
- Saves any data on a mass storage device.

The AMI Restore function overwrites any data on the primary operating system partition on the HDD.

Parameter	Description
AMI Backup	Click to take you through the steps to back up the desired data.
AMI Restore	Click to take you through the steps to restore the desired data.
Select Volume	Select the volume where to export the backed-up data. Or, select the volume from which the backed-up data is imported.
Next	Click to go ahead to the next step.
Exit (F4)	Click to close AMI Rescue. Or, press F4 to close AMI Rescue.

AMI Backup

Follow these steps to back up the system image.

1. Click the AMI Rescue menu to access the AMI Rescue screen.
2. Click AMI Backup.
3. Select the appropriate volume from the list.

'Recovery' is the volume name where the default backup of factory images is stored.

IMPORTANT Computers with the Windows Embedded 8.1 Industry Pro operating system do not contain a factory image backup in the Recovery partition.



IMPORTANT Any USB mass storage drive or eSATA hard disk drive must be formatted as FAT32, have a drive label other than 'Recovery,' and be non-blank.

4. Click Next.

5. Enter a name for the back-up volume.

A default back-up name is provided.

American Megatrends August 16, 2012 14:46:54
AMI Rescue - Backup

Disk Backup - Step 2 of 2

Enter Backup Label

08162012_00

Advanced

Click Backup to start backup

Backup Cancel Previous Exit (F4)

Backups to the selected partitions

6. Click Advanced.
7. Select which disk partition you want.

American Megatrends August 16, 2012 14:48:26
AMI Rescue - Backup

Select Partition

☒ Disk 0, MBR

☒ Disk 0, Partition 0

☒ Disk 0, Partition 1

Disk size: 476940(MB), Partition size: 456400(MB), Type: NTFS, Active: No

OK

This option enables you to choose your desired partition to backup

TIP All checkboxes must be selected for a complete backup of the drive.

IMPORTANT A recovery (25000 MB) partition is visible on computers with the Windows Embedded 8.1 Industry Pro operating system.

Do not select this partition for backup.

8. Click OK.

9. Click Backup to start the back-up process.

The screenshot shows the 'Disk Backup - Step 2 of 2' screen of the American Megatrends AMI Rescue utility. The header bar is red and contains the American Megatrends logo, the date 'August 16, 2012', the time '15:05:58', and the title 'AMI Rescue - Backup'. The main area is white and contains the following elements:

- The text 'Disk Backup - Step 2 of 2' centered at the top.
- The label 'Enter Backup Label' above a text input field containing '08162012_00'.
- A button labeled 'Advanced'.
- The text 'Disk 0, Partition 1: (56MB / 16170MB) 0 %'.
- Four buttons at the bottom: 'Backup' (highlighted in red), 'Cancel', 'Previous', and 'Exit (F4)'.
- A footer bar with the text 'Backups to the selected partitions'.

AMI Restore


Perform the following steps to restore your computer from a system image backup.

IMPORTANT When you restore from a back-up image, all data on the target drive is replaced. Verify that all data is backed up before you proceed with the following steps.

1. Click the AMI Rescue menu to access the AMI Restore screen.
2. Click AMI Restore.
3. Select the appropriate volume from the list.

'Recovery' is the volume name where the default backup of factory images is stored.

IMPORTANT Computers with the Windows Embedded 8.1 Industry Pro operating system do not contain a factory image backup in the Recovery partition.

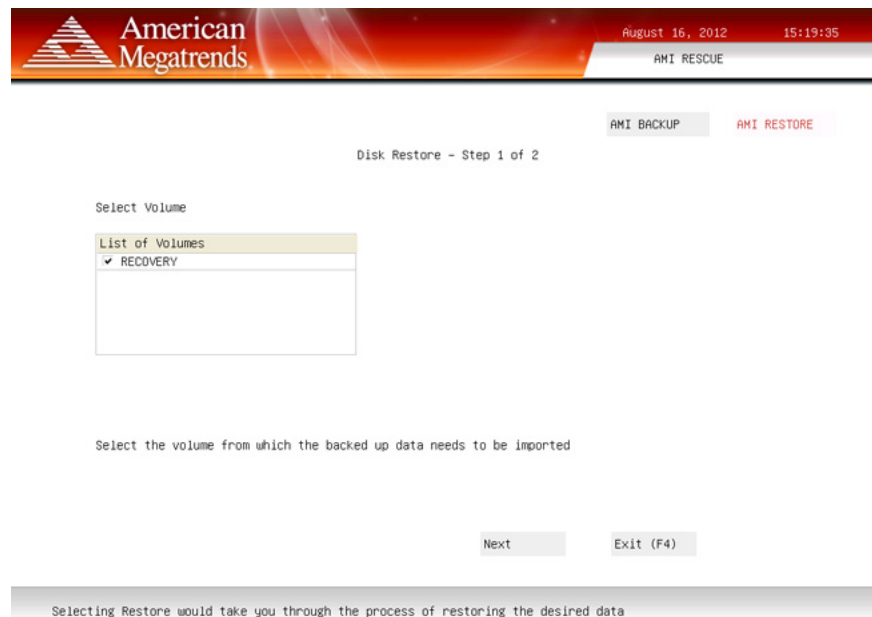


IMPORTANT Any USB mass storage drive or eSATA hard disk drive must be formatted as FAT32, have a drive label other than 'Recovery,' and be non-blank.

4. Click Next.


5. Select the volume label from which you want to restore.

Default OS image backups begin with an eight character prefix such as 'NNGR80XF'.

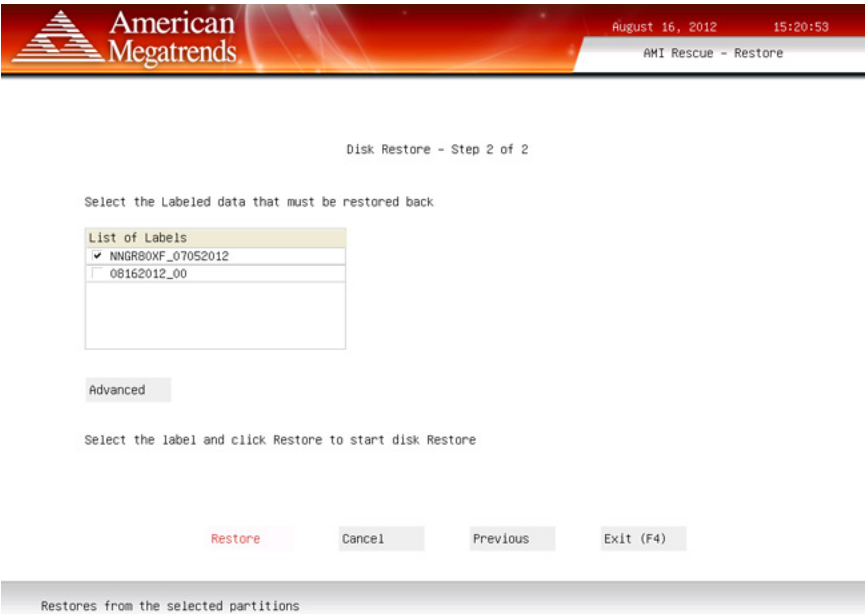

6. Click Advanced.

7. Select to which disk partition you want to restore.

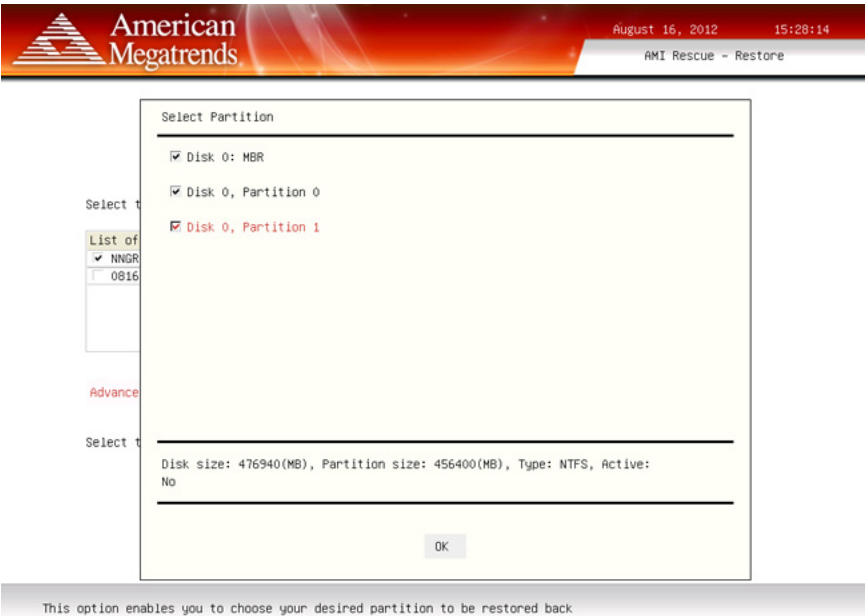


TIP All checkboxes must be selected for a complete restore of factory OS images.

8. Click OK.

9. Click Restore to start the restoration process.


10. An alert window appears ('Target partitions will be overwritten. Continue?'). Click Yes.

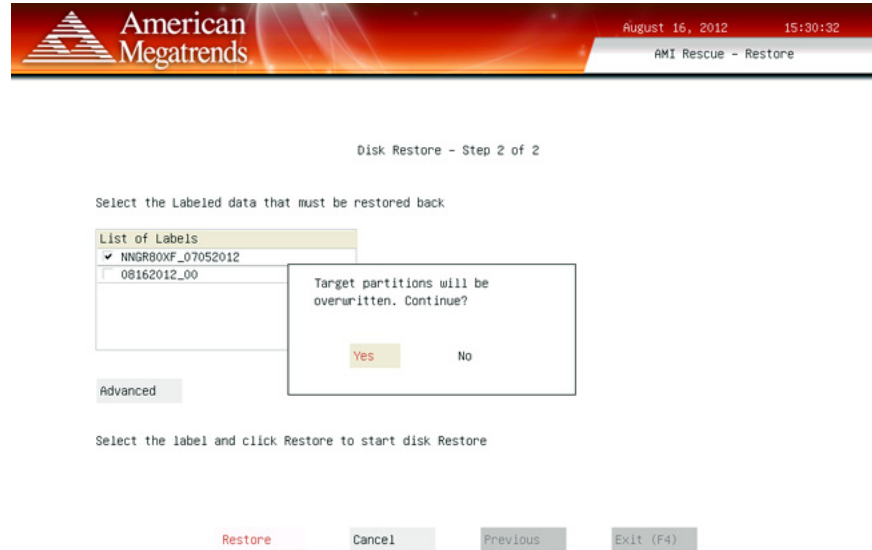

11. A second alert window appears ('Do you want to keep the current partition table?'). Click No.



12. A third alert window appears (‘The current partition table will be restored to previous state. Continue?’). Click Yes.

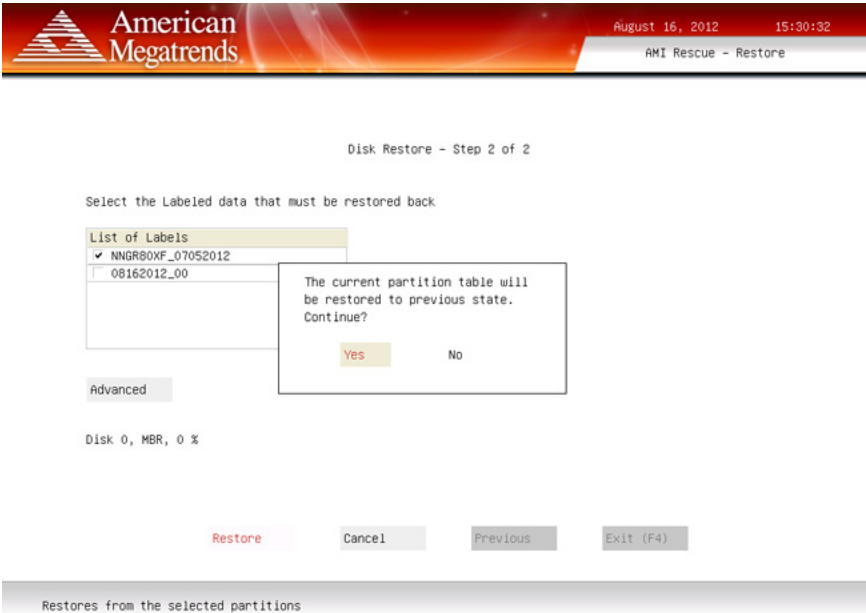

13. The restoration process starts.

Exit

The Exit menu closes the set-up utility.

Troubleshoot the System

Topic	Page
Hardware Monitoring	81
Troubleshooting	82
Diagnostics	83
Diagnostics	83
Load the System Defaults	84
Clear the UEFI	85
Ship or Transport the Computer	86
Dispose of the Computer	86


Hardware Monitoring

The built-in hardware monitor of the computer tracks the operating threshold levels of the voltage and temperature sensors.

Follow these steps to determine whether an operating threshold has been reached.

1. Shut down the computer by using the appropriate method for the installed operating system.
See [Shut Down the Computer on page 32](#) for more information.
2. Apply power to the computer.
3. During POST, press F2 to access the UEFI set-up utility.
4. Click Firmware Configuration on the Main Menu screen.
5. Click Advanced on the Firmware Configuration main screen.

6. Click Hardware Monitor on the Advanced screen.

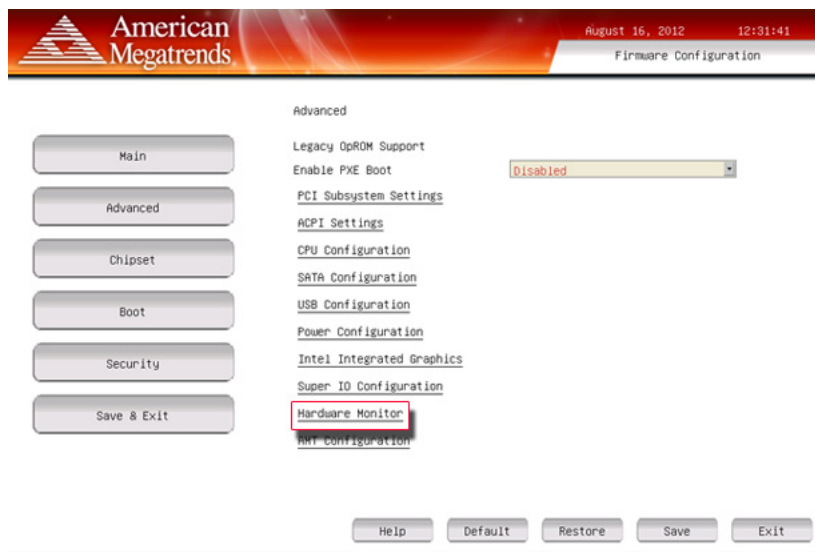

See [Hardware Monitor on page 65](#) for what information is shown.

Use this menu to determine if there is an issue with internal voltages or component temperatures.

Troubleshooting

Follow these steps to identify and isolate an issue with computer operation.

1. Shut down the computer by using the appropriate method for the installed operating system.
See [Shut Down the Computer on page 32](#) for more information.
2. Disconnect power to the computer.
3. Disconnect all peripheral devices from the computer.
4. If a keyboard and mouse are used, verify that they are properly connected.
5. If an external display is used, verify that it is properly connected.
6. Connect power to the computer. During POST, one of three events occurs:
 - The start-up process is completed.
 - A nonfatal error occurs and the related error message is displayed.
 - A fatal error occurs and the start-up process terminates.

If	Then
The computer starts	Reconnect all peripheral devices one at a time until the issue occurs.
The issue is with a specific software or driver	Reinstall the software or driver.
The issue is not related specifically to software, a driver, or a peripheral device	Proceed to Diagnostics on page 83 .

TIP Some computers emit beeps. These audible alerts only signal that an error is detected. The beeps can apply to nonfatal and fatal errors.

Diagnostics

If you completed the troubleshooting steps and issues remain, use the Diagnostics menu in the UEFI set-up utility to isolate the issue. Diagnostics tests computer components to determine the cause of a malfunction.

IMPORTANT An external keyboard and monitor must be connected to the computer to perform these steps.

Press F2 during POST or press F10 at any time to access the UEFI set-up utility:

- F2 during POST accesses the main menu of the UEFI set-up utility.
Select Diagnostics on the main menu.
- F10 directly accesses the Diagnostics menu of the UEFI set-up utility.

See [Diagnostics on page 71](#) for more information.

Follow these steps to save diagnostic reports.

1. From the Options menu, select Generate Report and press Enter.
2. Select Report destination and press Enter.
3. Select File and press Enter.
4. Select the device path to generate the log report and press Enter.
If you must generate the report in the current file system, press Enter.
Otherwise, select Continue and press Enter.
5. Enter log file details (file name and heading) for the report.
The default file name is AMIDdiag.LOG.
6. Set the report parameters, such as log errors, log test activities, log test start time, log test end time, log errors only, log errors only with time, Append to old log file, Log device info on fail, Log device info on abort.
7. To exit the submenu, select Continue and press Enter.

You do not need to disconnect or move your computer to perform an initial diagnosis. The selected test affects the process, which can take as little as 5 minutes or as long as 8 hours. After Diagnostics has run, you can generate a report for analysis by a technical support representative, which expedites any necessary repair process.

Load the System Defaults

If the computer fails after you change the set-up menus, load the system default settings to correct the error. These default settings have been selected to optimize computer performance.

Follow these steps to load the system defaults.

IMPORTANT An external keyboard and mouse must be connected to the computer to perform these steps.

1. Restart the computer as specified in [Restart the Computer on page 31](#).
2. During POST, press F2 on an attached keyboard to access the UEFI set-up utility.
3. Click Firmware Configuration on the set-up screen.
4. Click Default (A) on the Main screen.
5. Click Save (B) to save your changes.
6. Click Exit (C) to close the UEFI set-up utility.



Clear the UEFI

You must clear the system configuration values that are stored in the UEFI if the following conditions are present:


- The system configuration has been corrupted
- An incorrect setting has caused error messages to be unreadable
- You cannot access the UEFI set-up utility to load the system defaults

Follow these steps to clear the UEFI.

1. Back up all system data and then shut down the computer.
2. Follow the steps for [Pre-configuration on page 34](#).
3. Remove the cover as detailed in [Remove the Cover on page 36](#).

IMPORTANT Use an anti-static wriststrap that is connected to a grounded surface.

4. Locate the Clear UEFI (CMOS1) jumper on the motherboard.
See [Figure 5 on page 15](#) for its location.
5. Remove the jumper block from its default position (over pins 1 and 2).
6. Place the jumper block over pins 2 and 3 **for 10 seconds**.
7. Return the jumper block to its default position.

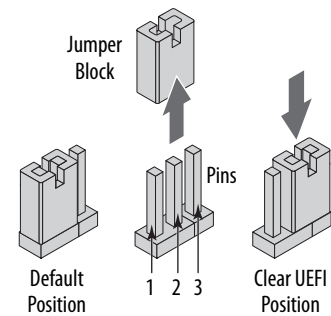

IMPORTANT The jumper block must be returned to its default position over pins 1 and 2. The computer does not start if you leave the jumper block over pins 2 and 3.

8. Reinstall the cover as detailed in [Reinstall the Cover on page 37](#).
9. Follow the steps for [Post-configuration on page 35](#).

IMPORTANT When you clear the UEFI, all UEFI settings return to their defaults. Settings other than default must be reconfigured after the UEFI is cleared.

10. During POST, press F2 on an attached keyboard to access the UEFI set-up utility and reconfigure settings.

Ship or Transport the Computer

If you must ship the computer via common carrier or otherwise transport it to another location for service or any other reason, then you must first uninstall the computer and place it in its original packing material.



ATTENTION: Do not ship or transport the computer when it is installed in a machine, panel, or rack. To avoid damage to the computer, you must uninstall the computer and place it in its original packing material before you ship it. Rockwell Automation is not responsible for any damage to a computer that is shipped or transported while installed in a machine, panel, or rack.

Dispose of the Computer



At the end of its life, collect the computer separately from any unsorted municipal waste.

You cannot dispose of computer equipment like other waste material. Most computers and monitors contain heavy metals that can contaminate the earth. Therefore, check with local health and sanitation agencies for ways to dispose of computer equipment.

When a storage drive is part of what you plan to dispose, then permanently erase any data on it or destroy the drive before it is disposed.

Install Accessories

Topic	Page
Pre-installation Checklist	87
Install a Second HDD	87
Install I/O Card Retention Bracket	90
Install an Add-in Card	92
Install Rack Slides (1450R Computer)	94
Install More Memory	96

You can view a current list of accessories at this Rockwell Automation website at <http://ab.rockwellautomation.com/Computers>.



ATTENTION: To avoid voiding your computer warranty, we recommend that you use only Allen-Bradley® approved accessories.

Pre-installation Checklist

Review the following information before you install any accessories:

- [Voltage Precautions on page 33](#)
- [Electrostatic Discharge Precautions on page 34](#)

Install a Second HDD


You can install another HDD in the secondary bay (SATA 1). All 6177R computers have two HDD bays but only server models have two HDDs that are pre-installed.

Follow these steps to install a second HDD.


1. Follow the steps for [Pre-configuration on page 34](#).
2. 1450R computers: perform [step 2](#) on [page 38](#) before proceeding to [step 3](#).

TIP Use an anti-static wriststrap that is connected to the work surface, and properly grounded tools and equipment.

3. Remove the HDD assembly from the secondary bay.
 - a. Loosen the two captive thumbscrews of the HDD assembly (A).
 - b. Pull out the HDD assembly from its bay (B).

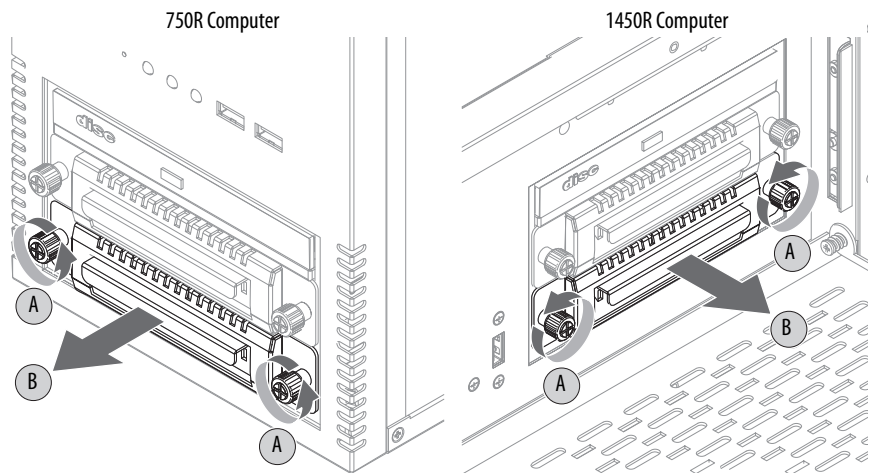

4. Remove the weight from the drive tray.
 - a. Remove the four mounting screws from the bottom of the weight (C).
 - b. Detach the tray from the weight (D).

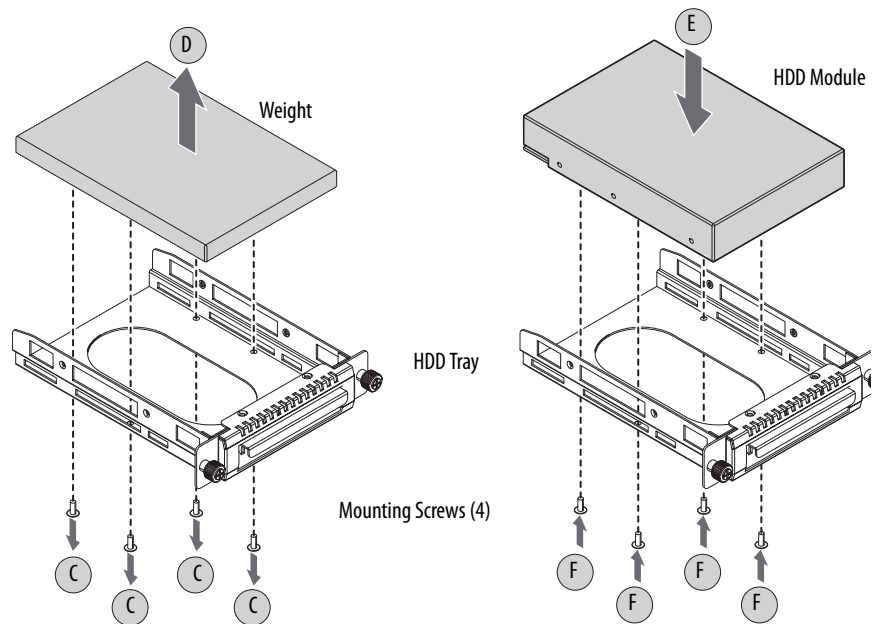

5. Install the new HDD module to the tray.




ATTENTION: Mechanical shock can damage an HDD module. Do not drop or bump the HDD module.

- a. Install the new HDD module with the PCB-side down.
- b. Fasten the tray over the HDD module (E).
- c. Secure the tray to the HDD module with the four mounting screws (F).

Torque the screws to 0.59 N•m (5.2 lb•in).

6. Return the HDD assembly into its bay (G).
7. Tighten the two captive thumbscrews of the HDD assembly to secure it to the computer (H).

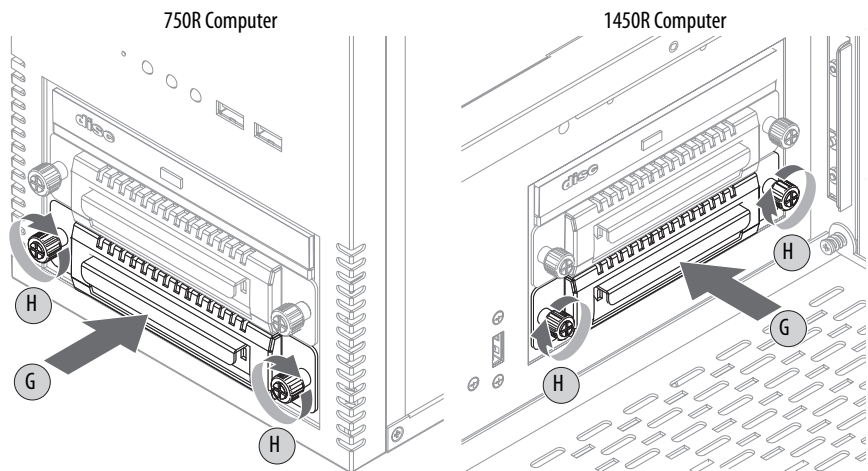


8. Follow the steps for [Post-configuration on page 35](#).

Install I/O Card Retention Bracket

All 750R and 1450R computers have a factory-installed chassis cross member. An I/O card retention bracket (catalog number 6189V-PCIBARMM for 750R computers and catalog number 6189V-PCIBARRM for 1450R computers) provides extra support to seat I/O cards in applications where shock and vibration are issues.

Follow these steps to install the I/O card retention bracket.

1. Follow the steps for [Pre-configuration on page 34](#).
2. Remove the computer cover as detailed in [Remove the Cover on page 36](#).
3. Remove the factory-installed chassis cross member.
 - a. 750R computers: Remove the two screws that secure the chassis cross member (A).
 - 1450R computers: Remove the four screws that secure the chassis cross member (A).
 - Save all screws to install the I/O card retention bracket.
 - b. 750R computers: Slide the chassis cross member to the right to release the seating slots (B).
 - c. Detach the cross member from the chassis (C).

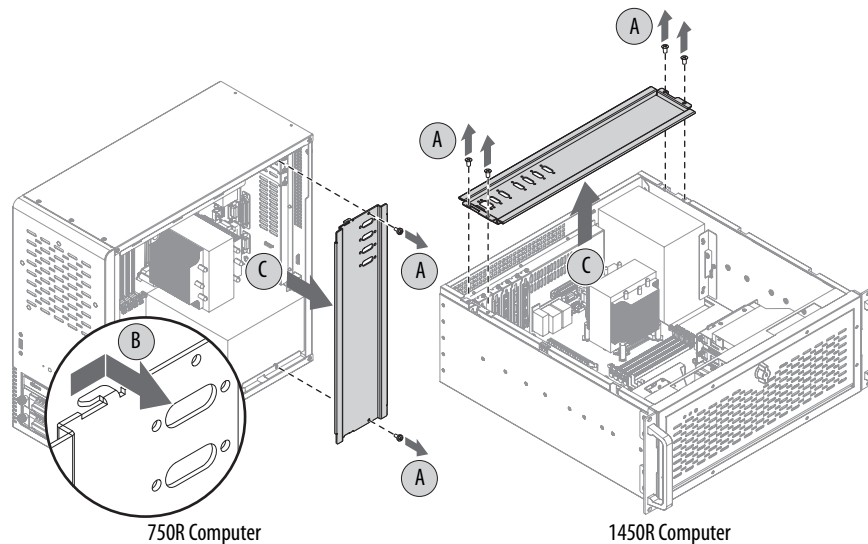


4. Install the I/O card retention bracket.

IMPORTANT Verify that each sleeve of the I/O card retention bracket is properly aligned with its add-in card before you perform step 4a for 750R computers and step 4c for 1450R computers.

- a. 750R computers: Slide the I/O card retention bracket to the left to secure the seating slots (D).
- b. Align the I/O card retention bracket with the mounting holes (E).
- c. 750R computers: Secure the I/O card retention bracket to the chassis with the two screws from the factory-installed chassis cross member (F).

1450R computers: Secure the I/O card retention bracket to the chassis with the four screws from the factory-installed chassis cross member (F).

- d. Torque the screws to 0.6 N•m (5.2 lb•in).

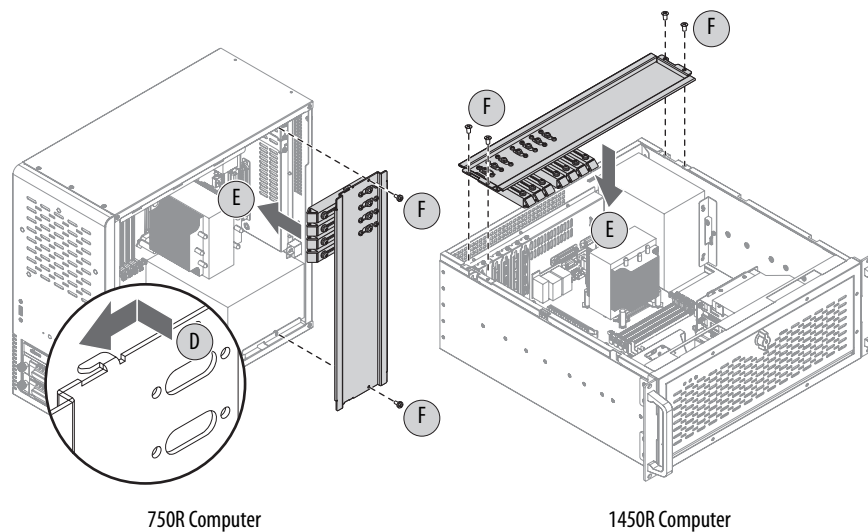


5. Reinstall the computer cover as detailed in [Reinstall the Cover on page 37](#).
6. Follow the steps for [Post-configuration on page 35](#).

Install an Add-in Card

The motherboard of the 750R and 1450R computers has four PCI slots that support installation of half-length PCI add-in cards.

- One PCI slot
- Three PCI-express (PCIe) slots

Besides these four PCI slots, the 1450R computer has a slot expansion board that provides another three PCI slots.

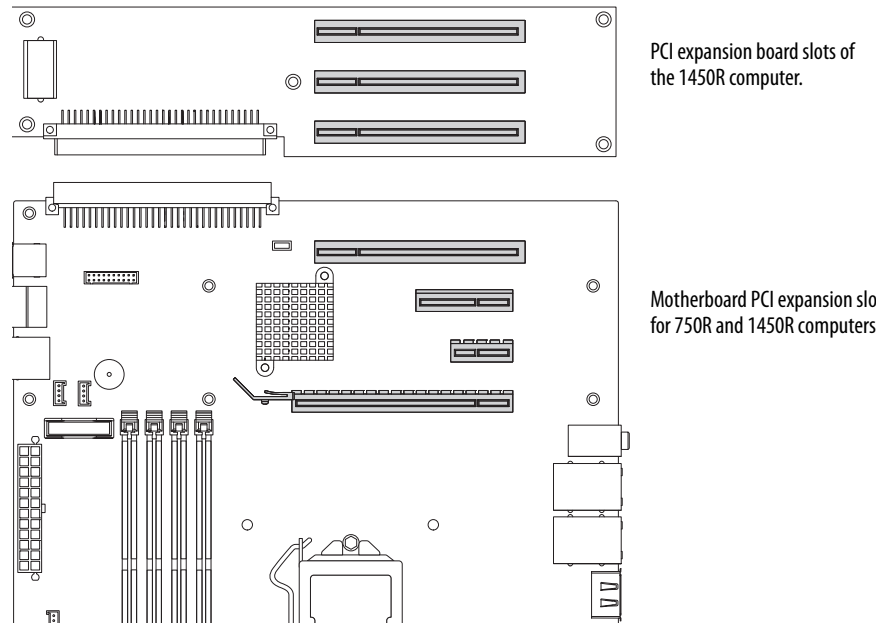

ATTENTION: Add-in cards are sensitive to ESD; handle with care.

- Hold cards only by the edges.
- Do not touch the card connectors, components, or circuits.
- After you remove an add-in card, place it on a flat, static-free surface, with the component side up.
- Do not slide the card over any surface.

IMPORTANT

Use an anti-static wriststrap that is connected to the work surface, and properly grounded tools and equipment.




Follow these steps to install an add-in card.

1. Follow the steps for [Pre-configuration on page 34](#).
2. Remove the cover as detailed in [Remove the Cover on page 36](#).
3. Remove the chassis cross member or I/O card retention bracket as detailed in [Install I/O Card Retention Bracket on page 90](#).
4. Locate an empty PCI slot.


5. Remove the screw that secures the slot cover of the selected PCI slot (A).
6. Pull out the slot cover (B) and store it.

IMPORTANT Do not discard the slot cover. If the add-in card is removed in the future, the slot cover must be reinstalled to maintain proper cooling.

7. Remove the add-in card from its protective packaging.
8. Slide the add-in card into the selected PCI slot (C).
Press to verify that it is firmly seated.
9. Secure the add-in card bracket to the chassis with its screw (D).

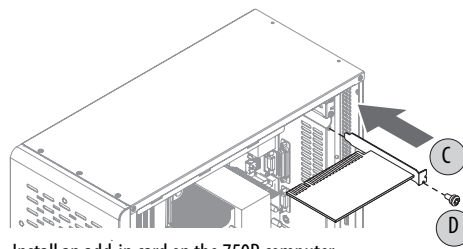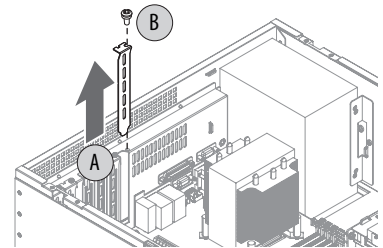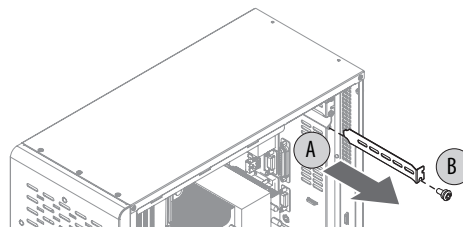

Install an add-in card on the 750R computer.

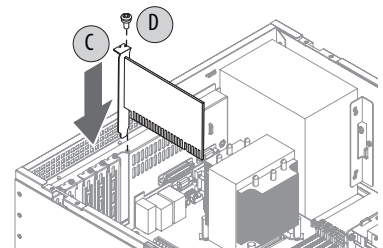

Install an add-in card on the 1450R computer.

10. Connect any necessary cables to the card.
11. Reinstall the chassis cross member or I/O card retention bracket as detailed in [Install I/O Card Retention Bracket on page 90](#).

IMPORTANT The chassis cross member or I/O card retention bracket must be installed for vibration and shock purposes.


12. See any installation instructions that came with the add-in card to verify that all installation steps are followed.
13. Follow the steps for [Post-configuration on page 35](#).

Install Rack Slides (1450R Computer)

You can install the 1450R computer in a rack cabinet. The computer must be supported by rack slides or fastened to a shelf.


Follow these steps to install the rack slides and mount the 1450R computer in a rack cabinet.

1. Remove the inner rails from each rack slides.
 - a. Extend the inner rail from the rack slide until the rail-release latch clicks (A).
 - b. Depress the inner rail-release latch and slide the inner rail out (B).

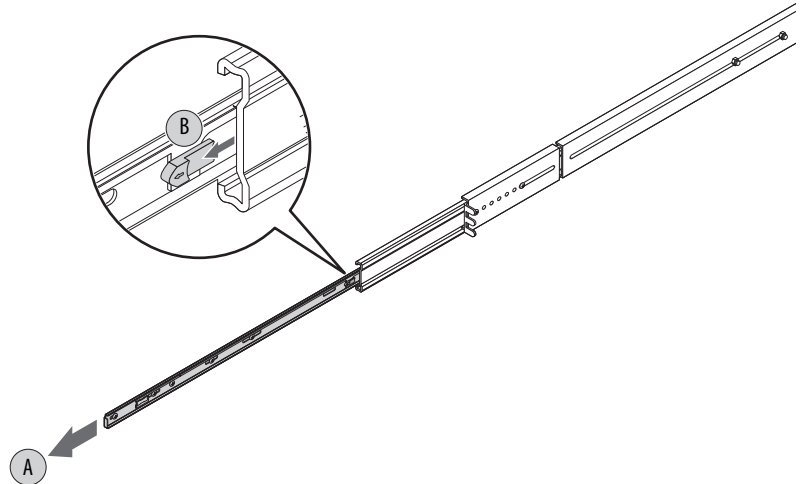

2. Attach each rack slide to the computer by using five screws in the holes marked '2.'

Torque the screws to 1.3 N•m (12.1 lb•in).

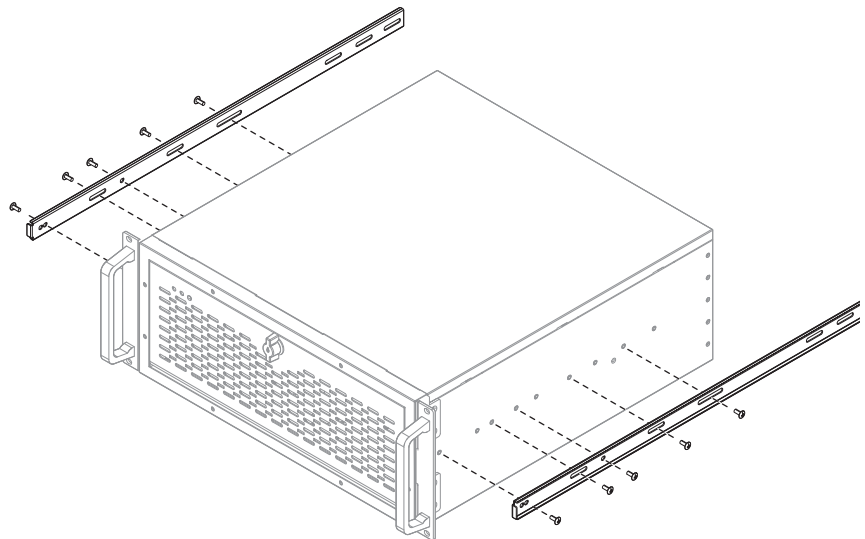

3. Attach the left and right mounting rails at the desired U position in the rack cabinet by using four screws (C), two adapter plates (D), and four nuts (E) for each mounting rail (F).
4. Extend the middle sliding piece of each mounting rail forward until you hear an audible click (G).

5. Align the rack slides to the corresponding slides inside the cabinet, and insert the rack slides attached to the server into the mounting rails (H).


TIP For ease of installation, make sure two or more people help to install the computer.

6. Depress the locking latch and push the computer completely into the rack until you hear a click sound (G).

See [step 1](#) on [page 94](#) for further information.

7. Secure the computer to the front of the rack cabinet by using four screws (H).

Torque the screws to 1.3 N•m (12.1 lb•in).

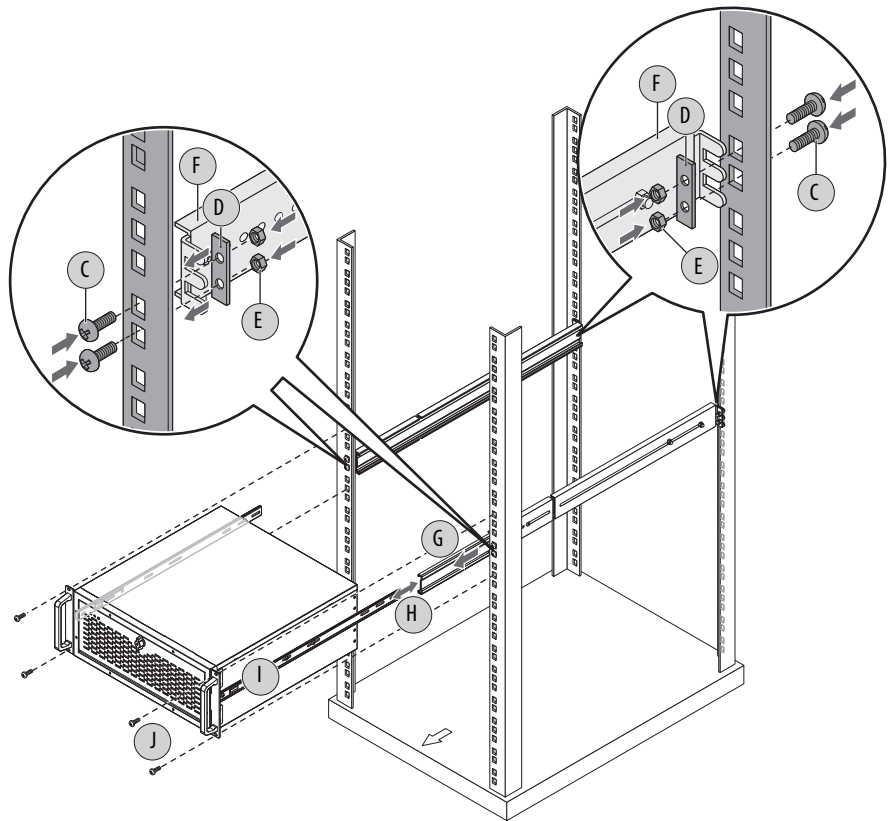

8. Align the rack slides to each slide inside the cabinet, and insert the rack slides attached to the server into the mounting rails (H).
9. Depress the locking latch and push the computer completely into the rack until you hear a click sound (I).

See [step 3](#) on [page 94](#) for further information.

10. Secure the computer to the front of the rack cabinet by using four screws (J).

Torque the screws to 1.3 N•m (12.1 lb•in).

11. Follow the steps for [Post-configuration on page 35](#).

Install More Memory

The motherboard of the 750R and 1450R computers has four DIMM slots that support up to 32 GB maximum system memory.

See [Replace or Add Memory Modules on page 40](#) for further information on installing more memory.

Numerics

1450R
product dimensions 21
rack mounting 24, 94
rear panel 13

750R
front panel 12
machine mounting 22
product dimensions 21
rear panel 12

A

accessories 33

add-in cards
install 92

audio jacks 25

B

BIOS Setup utility 49
access 50
Setup screen 50

C

CMOS clear 85
configuration tools
installation 21

D

diagnostic utility
usage 71
DIMM slots
install memory 41, 44
location 40
disk drive access indicator 12, 13

F

features
hardware 11
system boards 15
Firmware Configuration
Advanced 54
Boot 68
Chipset 67
Main 53
Save & Exit 70
Security 69
front panel
750R 12
front panel board 16
functional ground screw lug
usage 27

H

hard disk drive
precautions 38
removal 38
replace 38, 87
hardware diagnostics 81
hardware features
1450R exterior 13
750R exterior 12
status indicators 14
system boards 15
hardware monitor 81
HDD board 16
hold-down bar
reinstall 93
remove 90

I

installation
environment and enclosure notice 18
functional ground connection 27
guidelines 19
machine mounting 22
mounting hardware 20
network connection 28
power connection 27
product dimensions 21
rack mounting 24, 94
required tools 21

M

machine mounting 22
memory
install 40
installation guidelines 41
motherboard 15
mounting hardware 20

N

network connection
LAN cable reminder 18
specification 28

O

operating
guidelines 29

P

- parts list** 11
- PCI expansion board** 16
- PCI slots**
 - install add-in cards 90, 92
- peripheral connections**
 - I/O ports
 - 1450R 13
 - 750R 12
 - illustration 25
- POST, see Power On Self Test**
- power connection**
 - notices 27
 - specification 27
- Power On Self Test**
- product options** 10

R

- rack mounting** 24, 94
- RAID operation** 12, 13
- rear panel**
 - 1450R 13
 - 750R 12
- replace components**
 - add-in cards 92
 - memory module 40
 - post-configuration procedure 35
 - pre-configuration procedure 34
 - remove side cover 36
 - RTC battery 42
- replacement parts** 33, 87
- RTC battery**
 - disposal reminders 42
 - estimated life span 42
 - location 42
 - replace 42

S

- Setup menu** 50
 - AMI Rescue 73
 - Diagnostics 71
 - Exit 80
 - Firmware Configuration 52
 - Firmware Update 51
- shut down procedure** 32
- side cover**
 - reinstall 37
 - remove 36
- system**
 - defaults 84
 - start 30
- system boards**
 - front panel board 16
 - HDD board 16
 - motherboard 15
 - PCI expansion board 16

T

- troubleshooting**
 - clearing CMOS 85
 - diagnostic utility 83
 - hardware monitor 81
 - load system defaults 84
 - procedure 50, 82

U

- unpacking reminders** 10

Rockwell Automation Support

Use the following resources to access support information.

Technical Support Center	Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates.	https://rockwellautomation.custhelp.com/
Local Technical Support Phone Numbers	Locate the phone number for your country.	http://www.rockwellautomation.com/global/support/get-support-now.page
Direct Dial Codes	Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer.	http://www.rockwellautomation.com/global/support/direct-dial.page
Literature Library	Installation Instructions, Manuals, Brochures, and Technical Data.	http://www.rockwellautomation.com/global/literature-library/overview.page
Product Compatibility and Download Center (PCDC)	Get help determining how products interact, check features and capabilities, and find associated firmware.	http://www.rockwellautomation.com/global/support/pcdc.page

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002_-en-e.pdf.

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>.

Allen-Bradley, Rockwell Automation, and Rockwell Software are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 6177R-UM002F-EN-P - May 2018

Supersedes Publication 6177R-UM002E-EN-P - March 2017

Copyright © 2018 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.