



Circuit Breaker
Accessory

For PDG1
Frame

PDG1 Padlockable Handle Lock Hasp
Cat. No. PDG1XPLKT
Style No. 66A1597G12
Quantity - 1

Package contents:
1 Hasplock Plate
1 Hasplock Base
2 Machine Screws

Secondary
Cover

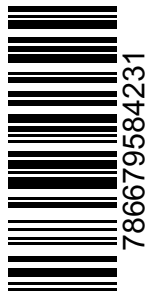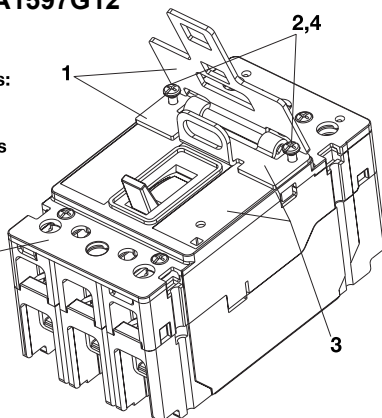

786679584231

- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 – 8 Lb-In.

IL012225EN H01


Circuit Breaker
Accessory

For PDG1
Frame

PDG1 Padlockable Handle Lock Hasp
Cat. No. PDG1XPLKT
Style No. 66A1597G12
Quantity - 1

Package contents:
1 Hasplock Plate
1 Hasplock Base
2 Machine Screws

Secondary
Cover

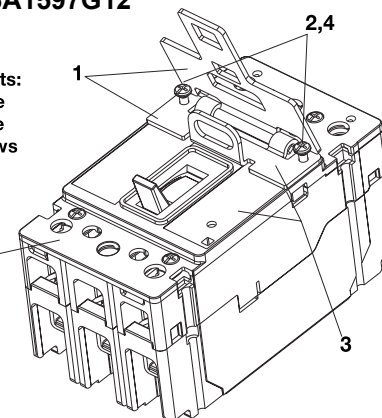

786679584231

- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 – 8 Lb-In.

IL012225EN H01



Circuit Breaker
Accessory

For PDG1
Frame

PDG1 Padlockable Handle Lock Hasp
Cat. No. PDG1XPLKT
Style No. 66A1597G12
Quantity - 1

Package contents:
1 Hasplock Plate
1 Hasplock Base
2 Machine Screws

Secondary
Cover

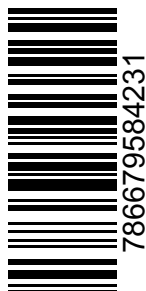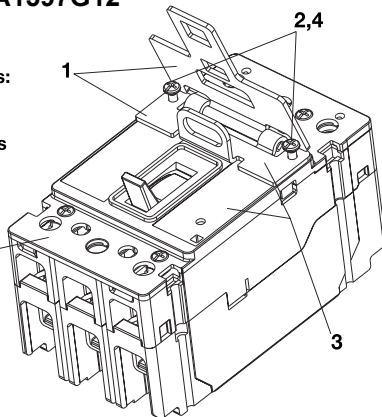

786679584231

- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 – 8 Lb-In.

IL012225EN H01

 

Circuit Breaker
Accessory

For PDG1
Frame

PDG1 Padlockable Handle Lock Hasp
Cat. No. PDG1XPLKT
Style No. 66A1597G12
Quantity - 1

Package contents:
1 Hasplock Plate
1 Hasplock Base
2 Machine Screws

Secondary
Cover

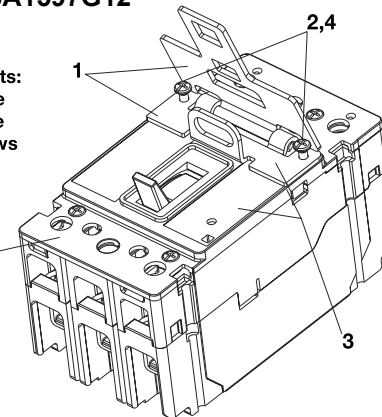

786679584231

- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 – 8 Lb-In.

IL012225EN H01