
 


PDG1 Padlockable Handle Lock Hasp
Cat. No. PDG1XPLKTOFF
Style No. 66A1597G11
Quantity - 1

Package contents:
1 Hasplock Plate
1 Hasplock Base
2 Machine Screws

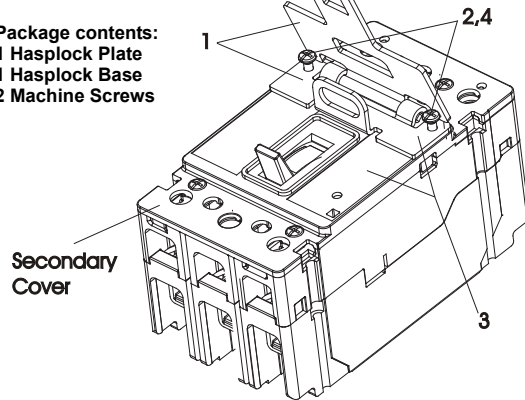


- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 — 8 Lb-In.




786679584590

PDG1 Padlockable Handle Lock Hasp
Cat. No. PDG1XPLKTOFF
Style No. 66A1597G11
Quantity - 1

Package contents:
1 Hasplock Plate
1 Hasplock Base
2 Machine Screws

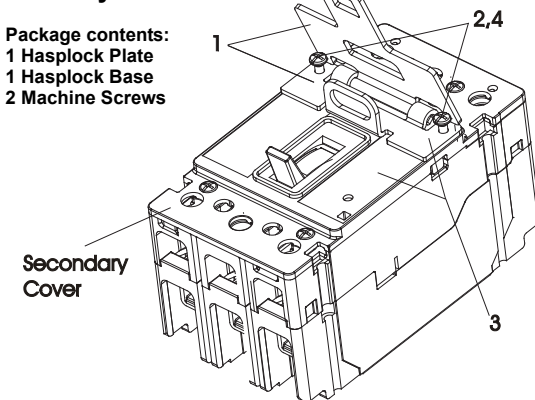

 
- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 — 8 Lb-In.



786679584590

PDG1 Padlockable Handle Lock Hasp
Cat. No. PDG1XPLKTOFF
Style No. 66A1597G11
Quantity - 1

Package contents:
1 Hasplock Plate
1 Hasplock Base
2 Machine Screws

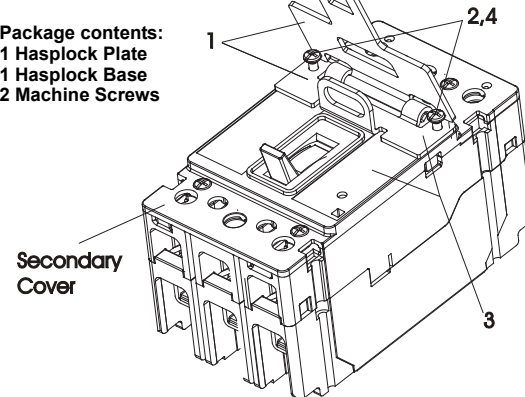


- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 — 8 Lb-In.



786679584590

PDG1 Padlockable Handle Lock Hasp
Cat. No. PDG1XPLKTOFF
Style No. 66A1597G11
Quantity - 1

Package contents:
1 Hasplock Plate
1 Hasplock Base
2 Machine Screws

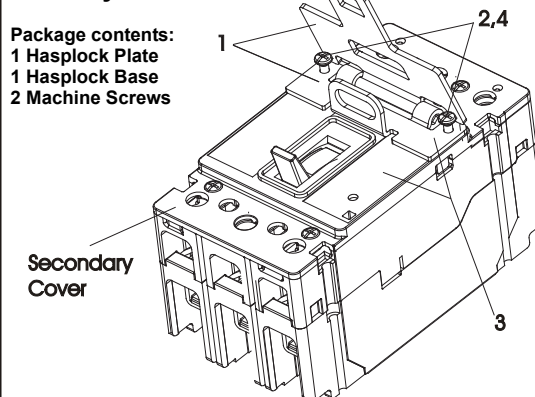

- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 — 8 Lb-In.



786679584590