30 AMP LINKOSITY™ POWER SUPPLY CORDS & TEES

INSTALLATION INSTRUCTIONS


GENERAL INFORMATION

- NOTICE: For installation by a qualified electrician in accordance with national and local electrical codes and the following instructions.
- 2. CAUTION: RISK OF ELECTRIC SHOCK. Disconnect power before installing. Never wire energized components.
- 3. NOT FOR INTERRUPTING CURRENT. DO NOT CONNECT OR DISCONNECT UNDER LOAD.
- 4. CAUTION: To ensure seal of enclosure to Type ratings, tighten coupling nut firmly against mating connector. This connector is rated Enclosure Types 4, 4X, 12, 13 when fully connected to a mating Linkosity™ connector or receptacle having an equivalent Enclosure Type rating.
- 5. Check that the devices' Enclosure Type Rating and electrical ratings are suitable for the application.


INSTALLATION & USE

- Do not connect to power before conducting the following electrical tests:
- Test continuity of wiring to verify correct polarity and phasing.
- Measure insulation resistance to be sure the system does not have any short circuits or unwanted grounds.
- 2. CAUTION: If any parts of the connector or cable appear to be missing, broken or show signs of damage: DISCONTINUE USE IMMEDIATELY! Replace damaged component. Failure to could cause serious injury or equipment damage.
- 3. Coupling nuts to be hand tight.
- 4. For fixed installations coupling nut must be wrench tight-1/4 turn beyond hand-tight.

WIRING CODE FOR LINKOSITY™ CONNECTORS MALE FACE VIEW

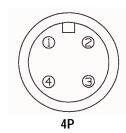

WIRING CODE FOR LINKOSITY™ CONNECTORS FEMALE FACE VIEW

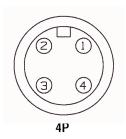

Linkosity™ is a trademark of Lockheed Martin.

Wiring Device-Kellems Hubbell Incorporated (Delaware) 185 Plains Road Milford, CT 06460-8897 (203) 882-4800

PD2034