



# KILLARK®

## INSTALLATION, OPERATION & MAINTENANCE DATA SHEET

MOUNTING PAN HOLE KEY- COMBINATION ENCLOSURE  
NEMA SIZE 0 AND 1; CATALOG NO. B7021



## MOUNTING PAN HOLE KEY - COMBINATION ENCLOSURE

### CAUTION:

Before installing, make sure you are compliant with area classifications, failure to do so may result in bodily injury, death and property damage. Do not attempt installation until you are familiar with the following procedures. All installation must comply with the applicable Electrical Code.

Make sure that the circuit is de-energized before starting installation or maintenance.

Verify that the installation is grounded. Failure to ground will create electrical shock hazards, which can cause serious injury and or death.

Technical information, advice and recommendations contained in these documents is based upon information that Killark believes to be reliable. All the information and advice contained in these documents is intended for use only by persons having been trained and possessing the requisite skill and know-how and to be used by such persons only at their own discretion and risk. The nature of these instructions is informative only and does not cover all of the details, variations or combinations in which this equipment may be used, its storage, delivery, installation, check out, safe operation and maintenance. Since conditions of use of the product are outside of the care, custody and control of Killark, the purchaser should determine the suitability of the product for his intended use, and assumes all risk and liability whatsoever in connection therewith.

**KILLARK®**

**Chalmit**

**Victor**  
Lighting

**Vantage**  
Technology

**RIG POWER**

**HAWKE**  
International

3940 Dr. Martin Luther King Drive  
St. Louis, MO 63113

P/N 00911624 FORM NO. K1057 R12/15 ECO 4-004-15

Page 1 of 3

STARTER MANUFACTURER	CATALOG SERIES	USE MOUNTING HOLE NOS.
ALLEN-BRADLEY	509	14, 27, 30
CUTLER-HAMMER	AN16, A10	14, 21, 22
FURNAS	14	17, 23, 24
GENERAL ELECTRIC	CR306	14, 21, 22
SQUARE D	8536	16, 25, 26
TELEMECANIQUE	A20	15, 19, 20
WESTINGHOUSE	A200	18, 28, 29
WESTINGHOUSE	W200	33, 34, 35

MCP/CIRCUIT BREAKER MANUFACTURER	CATALOG SERIES	MAXIMUM CONTINUOUS AMP. RATING	USE MOUNTING HOLE NOS.
SQUARE D	FA, FH, FC	100	2, 12
WESTINGHOUSE	EHD, FD, FDB, FDC, HFD, HMCP	150	3, 13
GENERAL ELECTRIC	TEC	150	31, 22

TRANSFORMER MANUFACTURER	CATALOG SERIES	VA* RATING	USE MOUNTING HOLE NOS.
ALLEN-BRADLEY	1497	75	4, 5, 10, 11
SQUARE D	9070	50	6, 7, 8, 9
TELEMECANIQUE	3785	50	

\* Larger Transformers (150VA Max.) may be installed;  
Additional mounting holes (11/64" Dia.) may be  
required.


#### **NOTES:**

1. Mount Starters, using #10-24 thread-forming screws, as indicated in above chart and as follows:  
FURNAS (Qty. 2) 5/8" long  
(Qty. 1) 3/8" long  
ALL OTHERS (Qty. 3) 3/8" long
2. Mount Circuit Breakers, using 8-32 screws, in indicated holes.
3. Mount Transformers, using 10-24 x 3/8" thread-forming screws.
4. Mount Optional Ground Lug in Hole No. 1, using a 1/4-20 screw. (Order Killark Cat. No. KIT-345.)
5. Optional Control Circuit Fuse Block (Buss No. 3792) and Terminal Block (Westinghouse TBABT3) may be installed on pan as space permits.  
**CAUTION:** Maintain 1/2" (12.7mm) minimum electrical clearance to all live points.


**NOTE:** Westinghouse (Cutler-Hammer) W200 Series Starters are electrically reset and do not use this manual reset.

STARTER MANUFACTURER	CATALOG SERIES	SPACER		RESET PLATE HOLE NUMBERS
		LENGTH	QTY.	
ALLEN-BRADLEY	509	NONE REQUIRED	—	—
CUTLER-HAMMER	A10	5/8"	1	4
FURNAS	14	1-3/8"	1	7
GENERAL ELECTRIC	CR306	5/8"	1	1
SQUARE D	8536	5/8"	2	6, 7
TELEMECANIQUE	A20	5/8"	3	2, 3, 4
WESTINGHOUSE	A200	NONE REQUIRED	—	—
CUTLER-HAMMER	AN16	5/8"	1	9



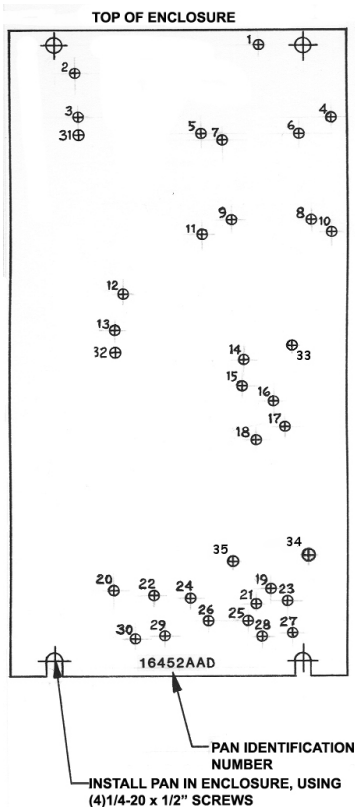

RESET PLATE HOLE KEY  
STARTER ONLY AND COMBINATION SIZE 0 AND 1  
CATALOG NUMBERS B7011 & B7021

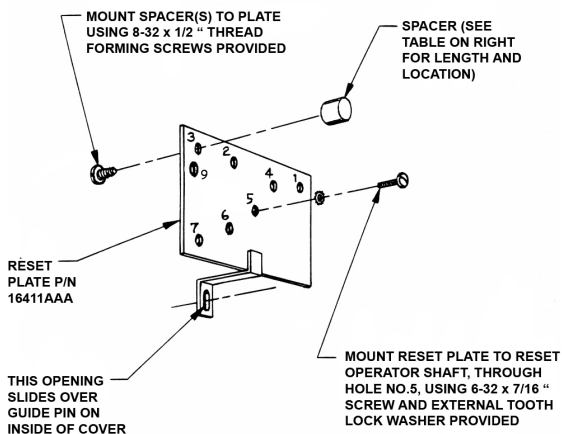

3940 Dr. Martin Luther King Drive  
St. Louis, MO 63113

P/N 00911624 FORM NO. K1057 R12/15 ECO 4-004-15

Page 3 of 3