



**KILLARK®**

## INSTALLATION, OPERATION & MAINTENANCE DATA SHEET

FOR EZGS1, EZGS2, EMGS1 & EMGS3  
GLOBE SUPPORT ASSEMBLIES



## EZGS1, EZGS2, EMGS1 & EMGS3 GLOBE SUPPORT ASSEMBLIES

### **CAUTION:**

Before installing, make sure you are compliant with area classifications, failure to do so may result in bodily injury, death and property damage. Do not attempt installation until you are familiar with the following procedures. All installation must comply with the applicable Electrical Code.

Make sure that the circuit is de-energized before starting installation or maintenance.

Verify that the installation is grounded. Failure to ground will create electrical shock hazards, which can cause serious injury and or death.

Technical information, advice and recommendations contained in these documents is based upon information that Killark believes to be reliable. All the information and advice contained in these documents is intended for use only by persons having been trained and possessing the requisite skill and know-how and to be used by such persons only at their own discretion and risk. The nature of these instructions is informative only and does not cover all of the details, variations or combinations in which this equipment may be used, its storage, delivery, installation, check out, safe operation and maintenance. Since conditions of use of the product are outside of the care, custody and control of Killark, the purchaser should determine the suitability of the product for his intended use, and assumes all risk and liability whatsoever in connection therewith.


**KILLARK®**



3940 Dr. Martin Luther King Drive  
St. Louis, MO 63113

P/N 00911763 FORM NO. K1089 R12/07 ERO-I-008-07

Page 1 of 2

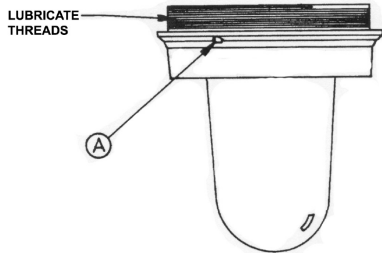

**NOTE:** Disconnect the supply circuit before starting installation.

## **1. DIRECTIONS FOR INSTALLATION**

1. Loosen the locking screw 'A' on the globe ring.
2. Unscrew the globe support assembly and remove it from the ballast tank.
3. Lightly lubricate the threaded area of the new globe support assembly with "LUBT" lubricant.
4. Thread the globe support assembly into the ballast tank firmly and tighten the locking screw 'A'.

**CAUTION:** This is an explosion proof globe, handle carefully. Protect globe from impact and scratches. Damaged globes must be replaced with a new globe assembly. Do not disassemble the globe assembly.

**NOTE:** Join or "lap" marks may form during the pouring of molten glass in the globe manufacturing process. It is not unusual for these marks to become visible. This is a common and normal occurrence for explosion proof globes and does not affect performance.

**NOTE: SAVE THIS SHEET FOR MAINTENANCE PERSONNEL.**

**KILLARK®** 

**Victor**  
Lighting

**Vantage**  
Technology

**RIG POWER**

**HAWKE**  
International

3940 Dr. Martin Luther King Drive  
St. Louis, MO 63113

P/N 00911763 FORM NO. K1089 R12/07 ERO-I-008-07

Page 2 of 2