

radiant[®] Tru-Universal

SETUP QUICKSTART GUIDE



HOW TO:

- Run Autocalibration
- Change to Reverse Phase
- Adjust High End Trim
- Adjust Low End Trim
- Disable Autocal
- Set to MLV Mode

AUTOCALIBRATION

TO RUN AUTO CALIBRATION FEATURE ON DIMMER:

Press Calibration Button

Dimmer will Auto Configure

Dimmer is now Calibrated

REVERSE PHASE

TO CHANGE TO REVERSE PHASE:


Set F/R Switch to R*

Press and Release
Calibration Button

Dimmer will Auto Configure

Dimmer is now Calibrated

*To switch back to forward phase move the switch to F and recalibrate.

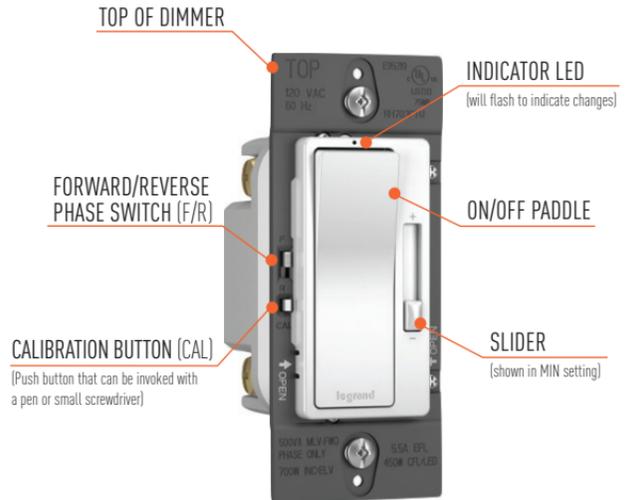

LOW END TRIM

TO ADJUST LOW END TRIM:

Move Slider Down to MIN

Press and Hold CAL for ~ 5 Seconds

LED will Blink, Release CAL

Adjustment Saved

Move Slider Up when at Desired Setting

Push CAL 12x to Cycle through Adjustments*

*Some LED's should not be set at their lowest setting. While they may be able to dim to that level after being on, they may not turn on to that level.

HIGH END TRIM

TO ADJUST HIGH END TRIM:

Move Slider up to Full On


Press and Hold CAL for ~ 5 Seconds

LED will Blink, Release CAL

Adjustment Saved

Move Slider Down when at Desired Setting

Push CAL 12x to Cycle through Adjustments

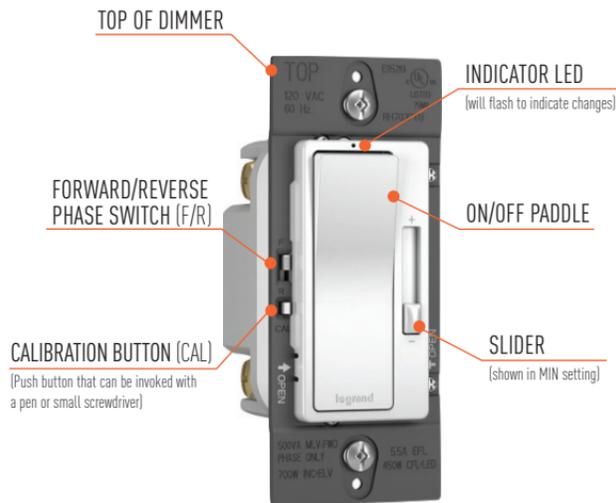

DISABLE AUTOCAL

TO DISABLE AUTOCAL AT POWER UP:

Move Slider Down to MIN — Press and Hold CAL for ~ 5 Seconds — LED will Blink, Release CAL

LED will STOP Blinking — Press and Hold CAL for ~10 Seconds at Desired Setting** — Push CAL 12x to Cycle through Adjustments*

Autocal Disabled

* See low end trim.

** Low end trim adjustments must be made before disabling autocal, at least one adjustment needs to be made.

MLV MODE

TO PUT DIMMER INTO MLV MODE:

Move Slider up to Full On — Press and Hold CAL for ~ 5 Seconds — LED will Blink, Release CAL

Move Slider Down — LED Blink will Change to 2x per Second — Press and Hold CAL for ~ 10 Seconds

Dimmer now in MLV Mode***

***To switch out of MLV mode repeat these steps.

