 
 
Dist. between fitting bases 5/16

 
Raceway Length

For Proper Installation:









Remove proper cover

twistout inward.















Bushing protects wires

at raceway entrance.

Insert bushing