



PEHF2

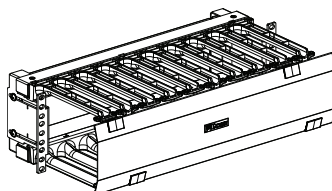

PEHF3

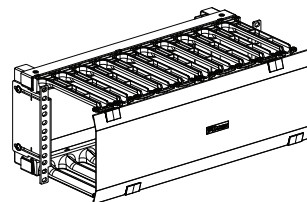

PEHF4

PatchRunner™ Enhanced Horizontal Front-Only Managers include (1) Manager, (1) Door, and #12-24 Screws for Mounting to Vertical Equipment.

### Prior to Installation

**Step 1 (all configurations):** Loosen mounting screws on both sides of part. See Figure 1 for locations.

AND

**Step 2 (mounting with PatchRunner™ Enhanced Vertical Manager):**

Slide both side mounting brackets as far back as possible. See Figure 2.1.

OR

**Step 2 (mounting with PatchRunner™ Vertical Manager):** Align marking on both mounting brackets with center of screws. See Figure 2.2.

OR

**Step 2 (mounting with cabinet):** Slide mounting brackets as far forward as possible. See Fig. 2.3.

AND

**Step 3 (all configurations):** Tighten mounting screws on both sides of part.

Loosen screws  
(both sides of part)

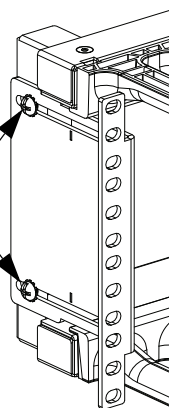


Figure 1

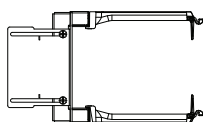


Figure 2.1

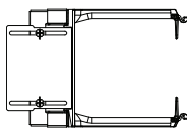


Figure 2.2



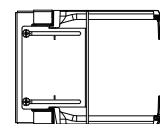


Figure 2.3



### Installation with PatchRunner™ Enhanced Vertical Manager (PEV) on 2 or 4 Post Rack

Attach PatchRunner™ Enhanced Horizontal Front-Only Manager to desired location on Vertical Equipment using #12-24 Screws.

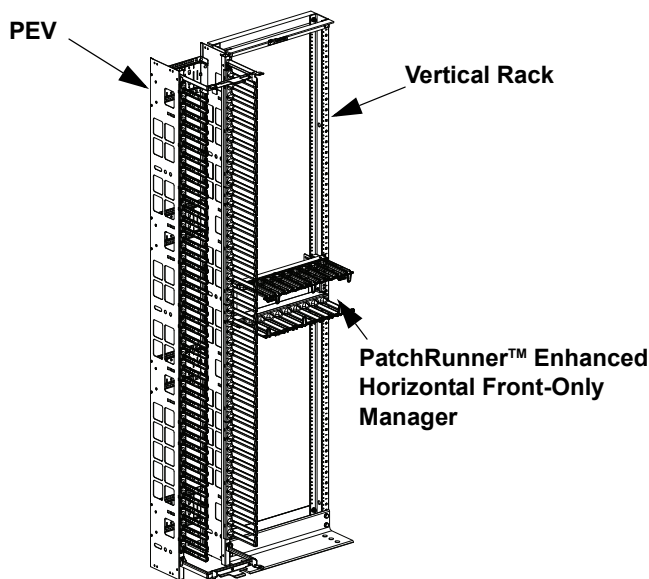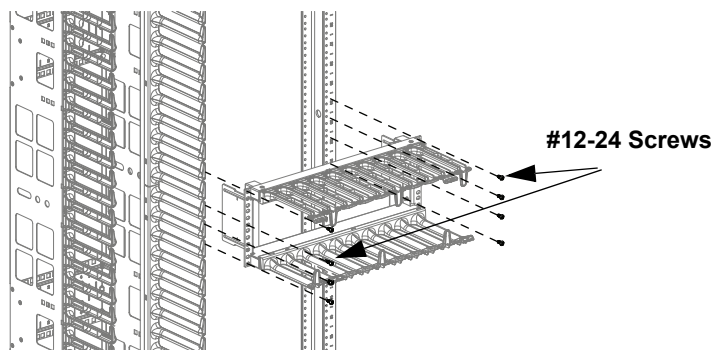


## Installation with PatchRunner™ Vertical Manager (PRV) on 2 or 4 Post Rack

Attach PatchRunner™ Enhanced Horizontal Front-Only Manager to desired location on Vertical Equipment using #12-24 Screws.

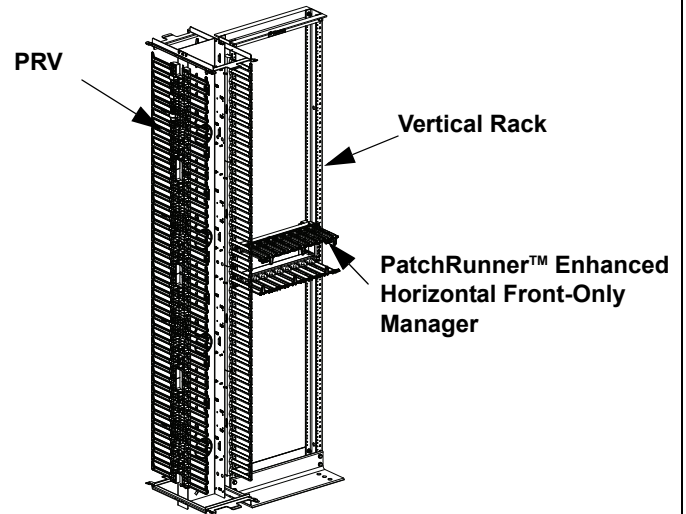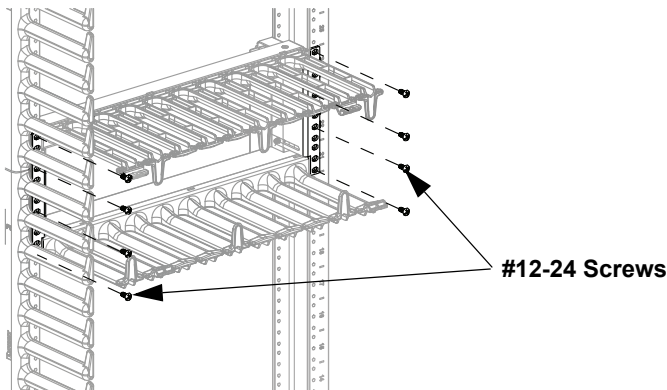


## Installation with Cabinet

Attach PatchRunner™ Enhanced Horizontal Front-Only Manager to desired location on Vertical Equipment using #12-24 Screws.

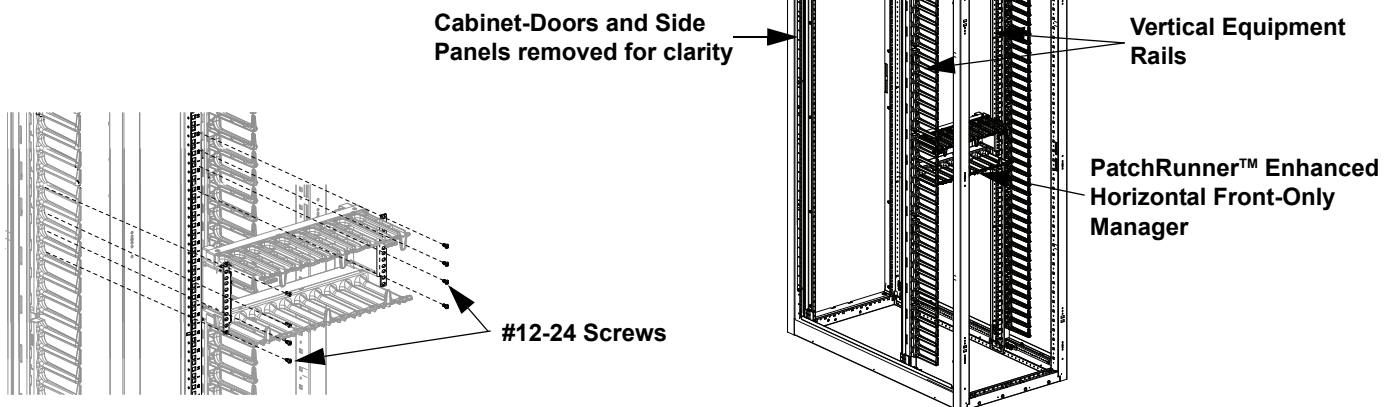


## Door Installation


Install Doors to PatchRunner™ Enhanced Horizontal Front-Only Manager by aligning the door hinges with knuckles on the fingers and press until door snaps into place. Door may be opened up or down by pulling on opposite side of door.

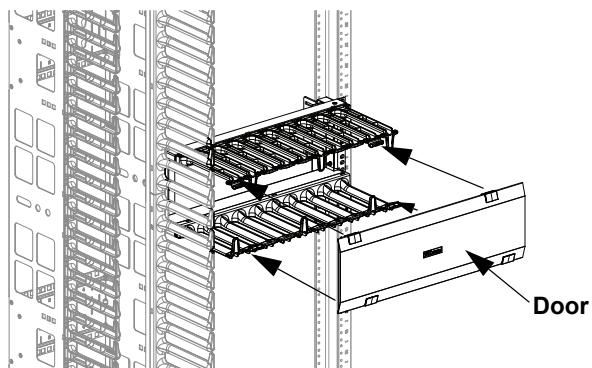

Door Opening Up

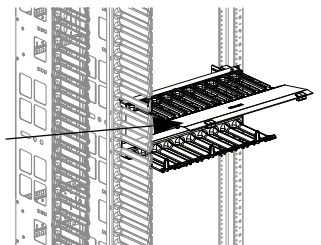

Door Opening Down

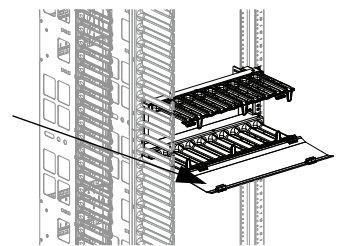

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**  
www.panduit.com

E-mail:  
[cs@panduit.com](mailto:cs@panduit.com)

Fax:  
(708) 444-6448