



LC Industrial Bulkhead Adapter

IAEF7JMA

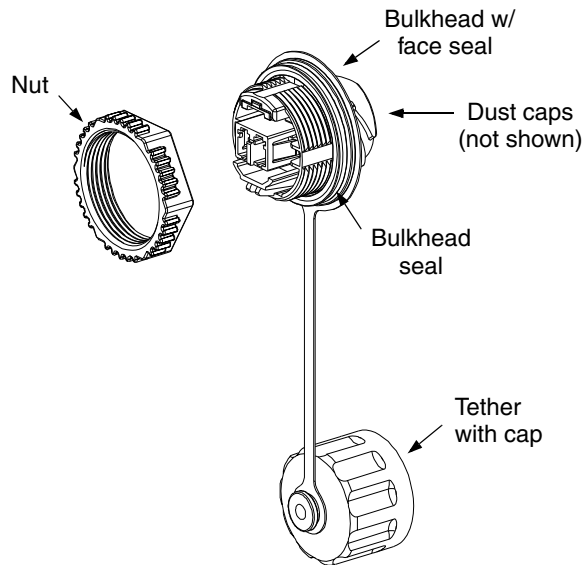

LC Industrial Patch Cord

IAEF617P-7PM*, IAEF617P-NM*

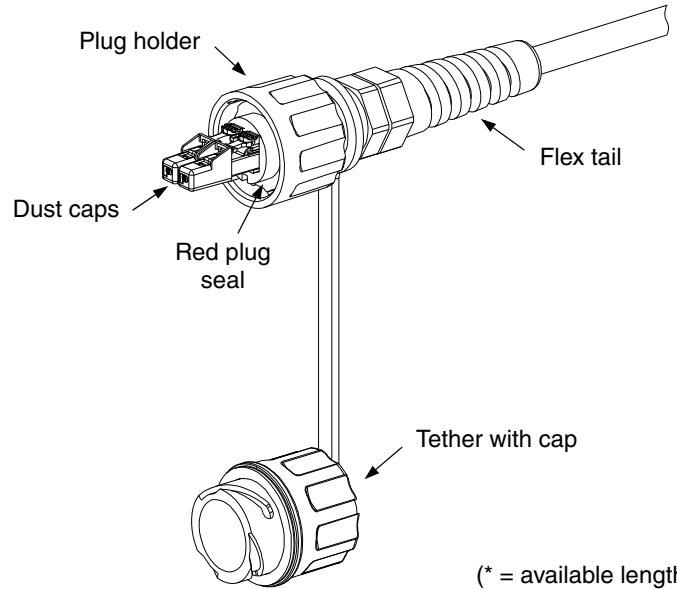


(* = available lengths)

Installation of Industrial Bulkhead

Note: Remove dust caps on bulkhead and plug sides prior to installation.

1


Bulkhead Opening Requirements

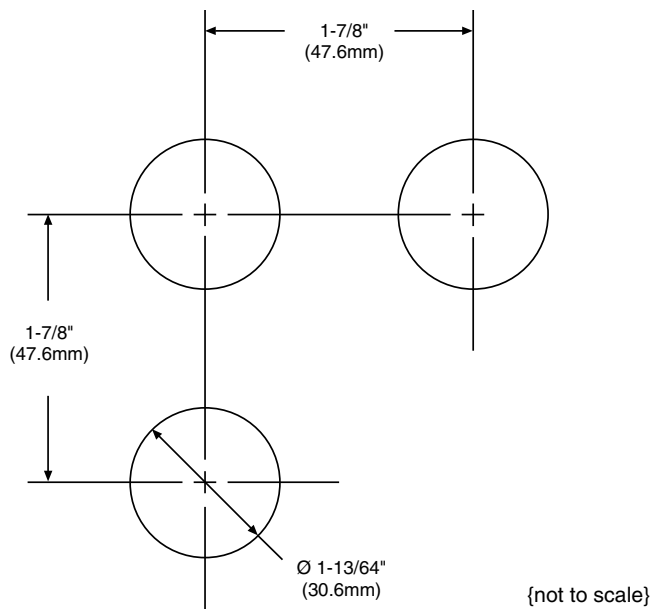

2

Inside of Enclosure


Outside of Enclosure

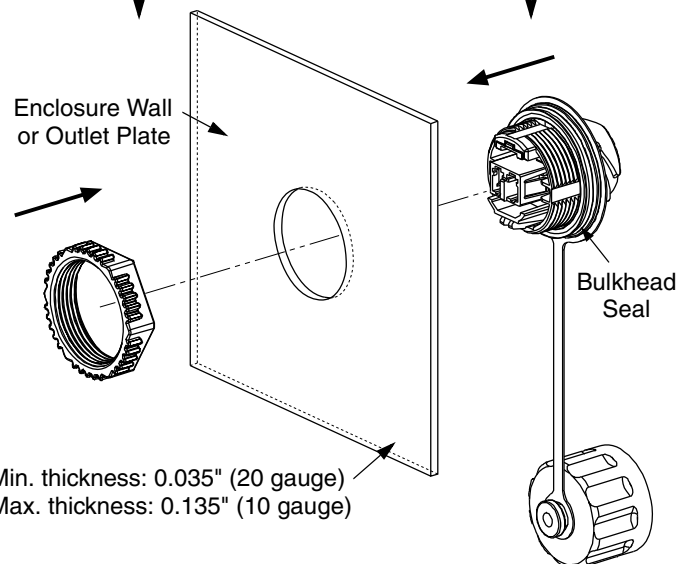

Insert bulkhead into prepared opening from outside of enclosure. While holding bulkhead in place, secure with nut on inside of enclosure. Hand turn nut 4-1/4 to 5 full turns. Be careful not to tighten to the point the bulkhead seal is over compressed and displaced from the enclosure wall and the bulkhead.
Note: If using wrench, flats on nut should be on the outside.

Installation of Industrial Patch Cord to Industrial Bulkhead

Note: Bulkhead combination must be used on a flat surface of a NEMA Type 12 enclosure to maintain rating.

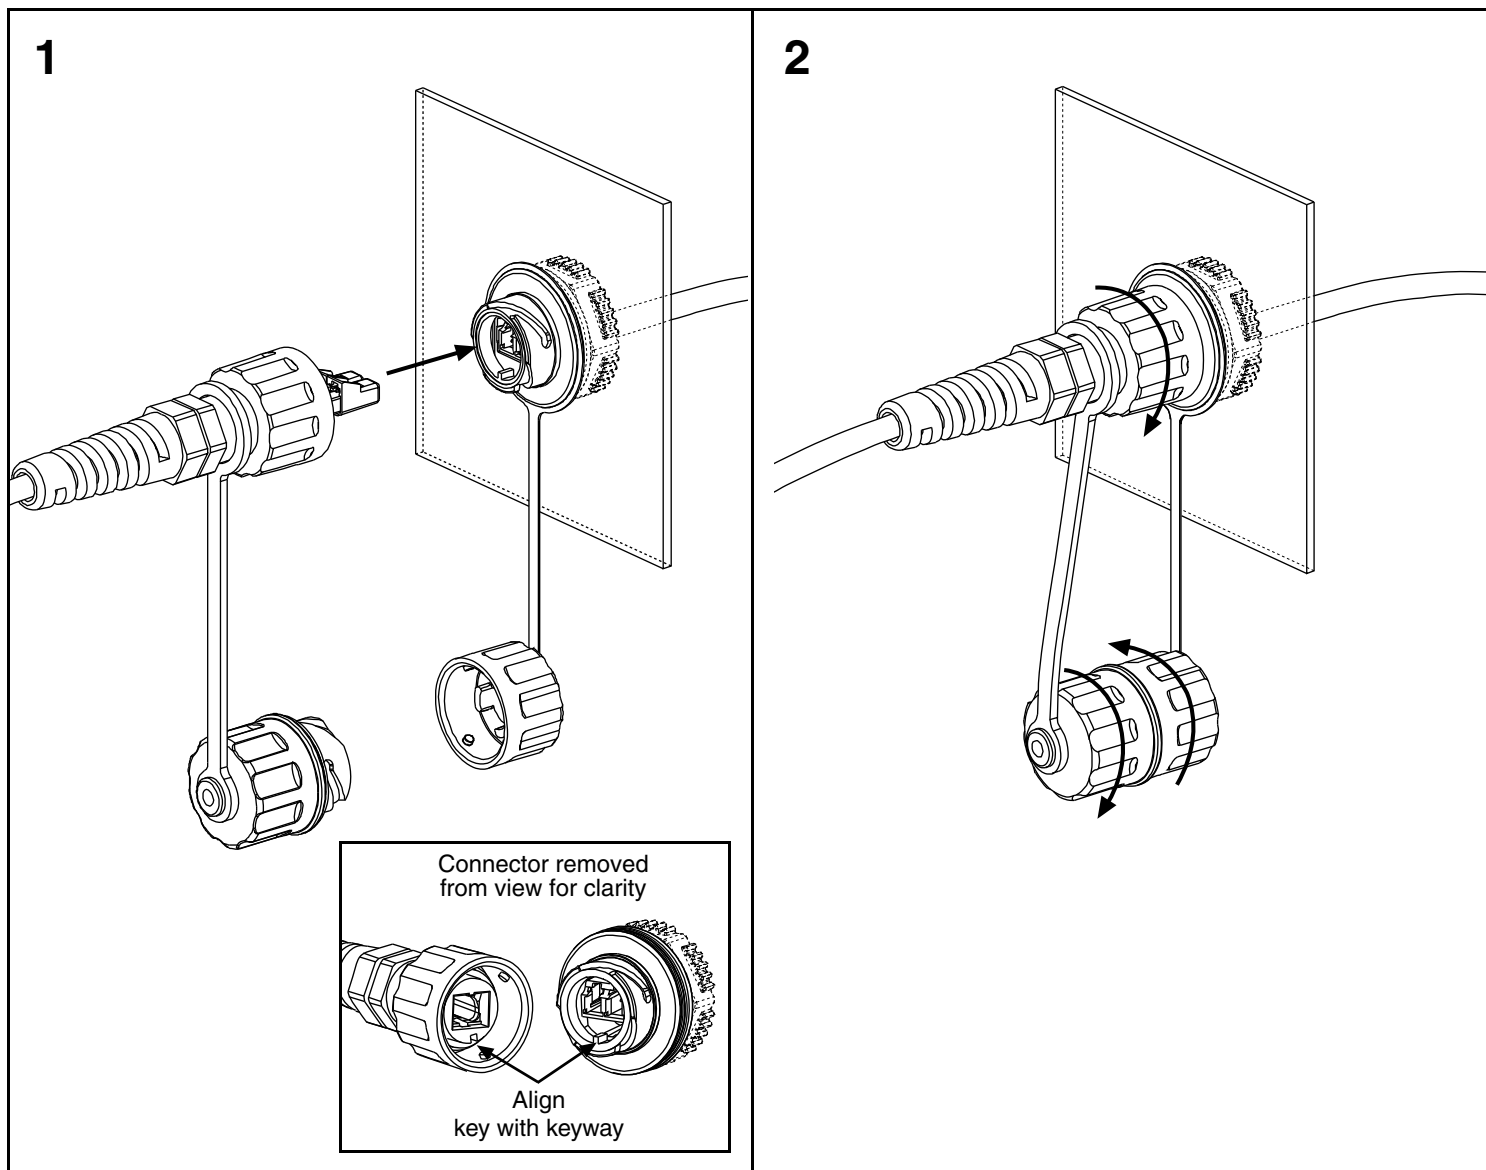

Note: Clean plug connector end faces and red plug seal with each connector mating cycle.

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT

www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654