


Installation Instructions-Mounting Door to PEV Manager-7FT Sizes


Step 1: Using a flat object, remove the grommets from the rear of the door. The door brackets can now be installed.

Remove grommets

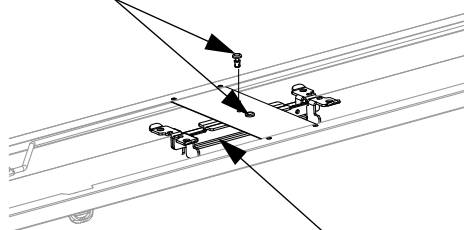


Door brackets

Step 2: Install door brackets to manager as shown using #12-24 screws. Tighten screws to 15 in-lbs.

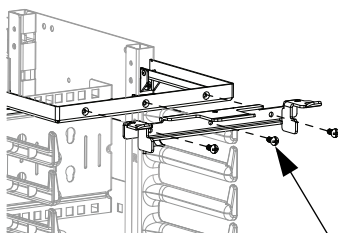

Top of manager


#12-24 Screws

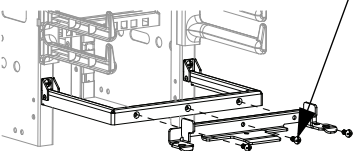

Bottom of manager


Step 3: Ensure that both handles are in the disengaged position.

Handles disengaged

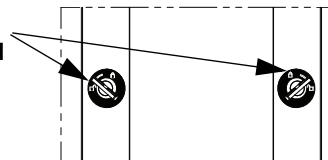

Step 4: Set door onto ends of door bracket located on the bottom of the manager. Then ensure that activation tabs on the door bracket fit into windows on the door.


Activation Tabs

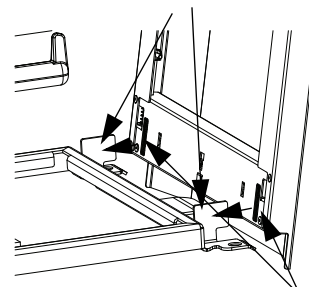

Windows on door



Step 5: Fit activation tabs located on the top door bracket into the windows located on top of the door.

Activation Tabs

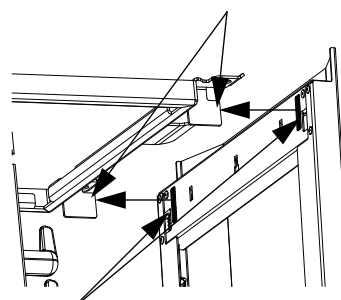

Windows on door

Step 6: Grasp fingers of manager with fingers and apply thumb to door face. Then squeeze together until handles pop into engaged position.

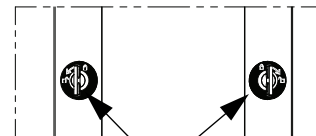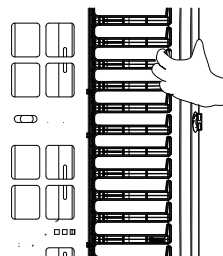


Handles engaged

Door Part Number	Corresponding Vertical Manager	
	Single Sided	Dual Sided
PED6B1	PEVF6	PEV6
PED8B1	PEVF8	PEV8
PED10B1	PEVF10	PEV10
PED12B1	PEVF12	PEV12

Installation Instructions-Mounting Door to PRV Manager-7ft Sizes

Step 1: Using a flat object, remove the grommets from the rear of the door. The door brackets can now be installed.


Remove grommets

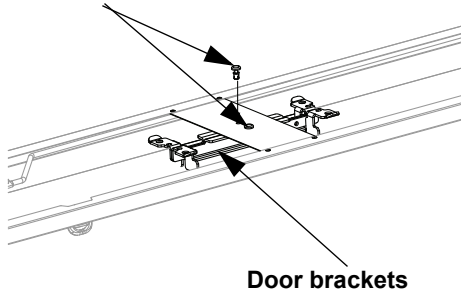

Door brackets


Step 2: Install door brackets to manager as shown using #12-24 screws. Use holes closest to the front of the manager. Tighten screws to 15 in-lbs.

Top Bracket

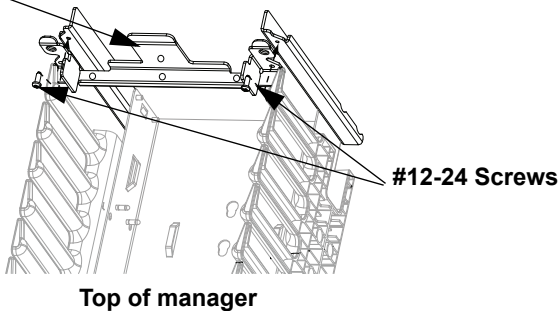

Top of manager


Bottom Bracket

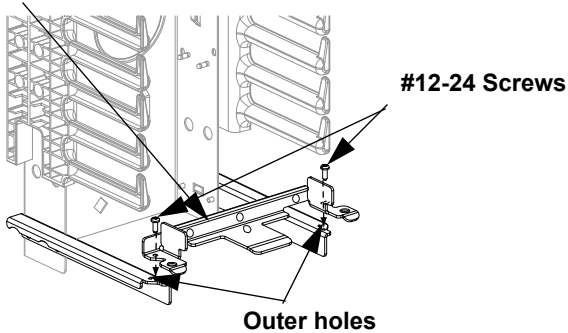

Outer holes

Bottom of manager


Step 3: Ensure that both handles are in the disengaged position.

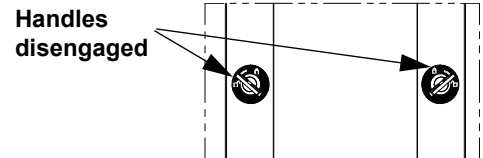

Handles disengaged

Step 4: Set door onto ends of door bracket located on the bottom of the manager. Then ensure that activation tabs on the door bracket fit into windows on the door.


Activation Tabs

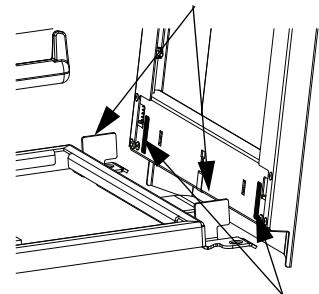

Windows on door



Step 5: Fit activation tabs located on the top door bracket into the windows located on top of the door.

Activation Tabs

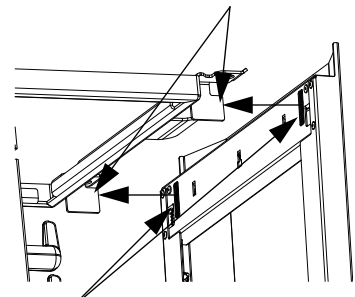

Windows on door

Step 6: Grasp fingers of manager with fingers and apply thumb to door face. Then squeeze together until handles pop into engaged position.

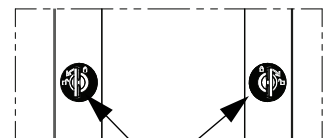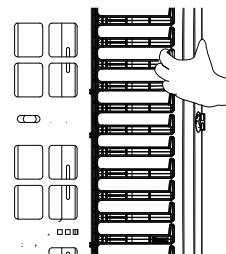


Handles engaged

Door Part Number	Corresponding Vertical Manager	
	Single Sided	Dual Sided
PED6B1	PRVF6	PRV6
PED8B1	PRVF8	PRV8
PED10B1	PRVF10	PRV10
PED12B1	PRVF12	PRV12

Installation Instructions-Mounting Door to PEV Manager-8ft Sizes


Step 1: Remove all brackets from the door. Identify proper brackets for application and discard others.

Bracket used for mounting to PEV Manager (2 places)

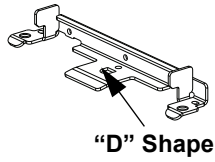


Common Bracket with "D"

Brackets used for mounting to PRV Manager


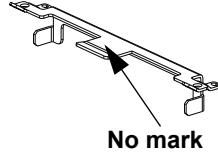


Top Bracket

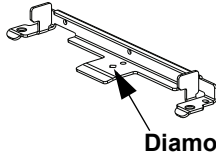


Bottom bracket

Step 2: Install door brackets to manager as shown using #12-24 screws. Use common brackets with "D" cutout on the tongue. Tighten screws to 15 in-lbs.

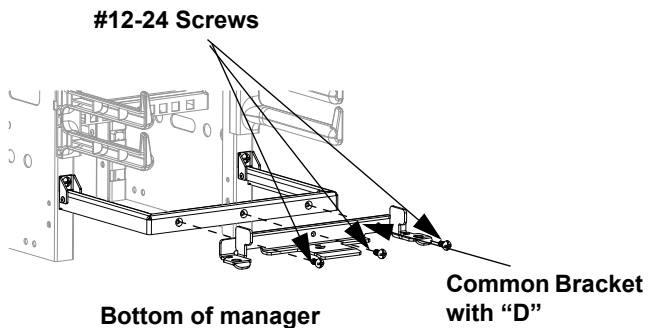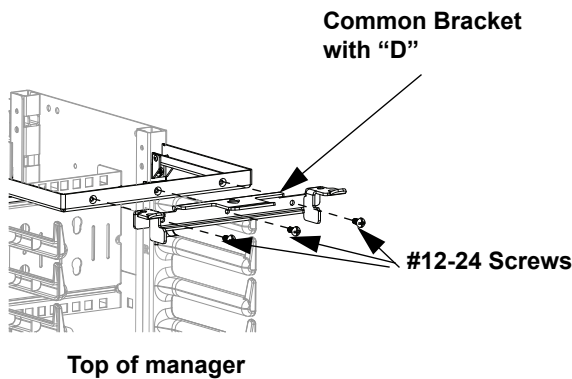


Door Part Number	Corresponding Vertical Manager	
	Single Sided	Dual Sided
PED696B1	PEVF696	PEV696
PED896B1	PEVF896	PEV896
PED1096B1	PEVF1096	PEV1096
PED1296B1	PEVF1296	PEV1296

Step 3: Ensure that both handles are in the disengaged position.

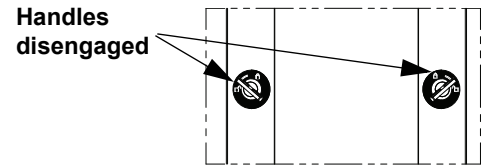


Step 4: Set door onto ends of door bracket located on the bottom of the manager. Then ensure that activation tabs on the door bracket fit into windows on the door.

Activation Tabs


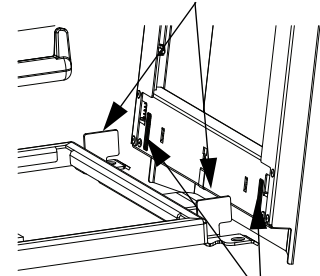


Step 5: Fit activation tabs located on the top door bracket into the windows located on top of the door.

Activation Tabs

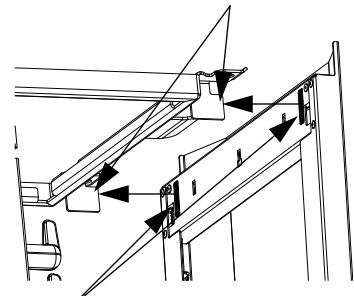

Step 6: Grasp fingers of manager with fingers and apply thumb to door face. Then squeeze together until handles pop into engaged position.

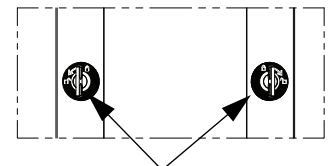
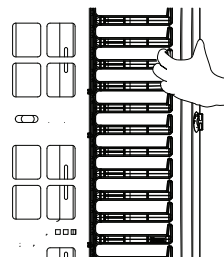


Installation Instructions-Mounting Door to PRV Manager-8ft Sizes


Step 1: Identify the top and bottom brackets to be used only for mounting PED*96B1 to PRV managers. The bottom bracket has a diamond on the tongue. See Page 3, Step 1.

Step 2: Install door brackets to manager as shown using #12-24 screws. Use holes closest to the front of the manager. Tighten screws to 15 in-lbs.

Top Bracket

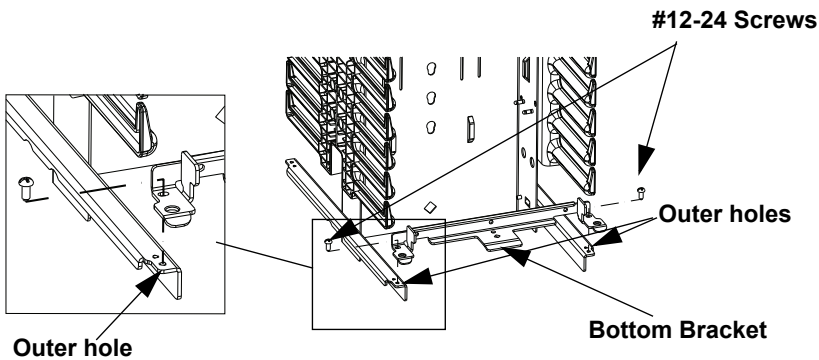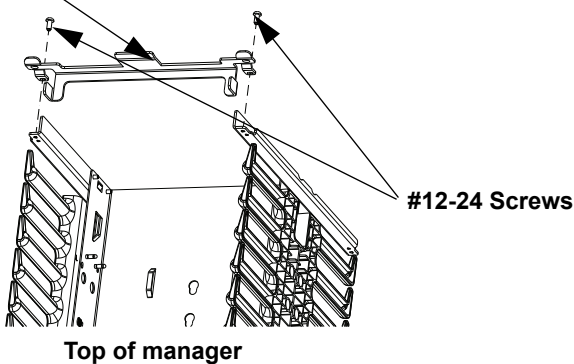


Step 3: Ensure that both handles are in the disengaged position.

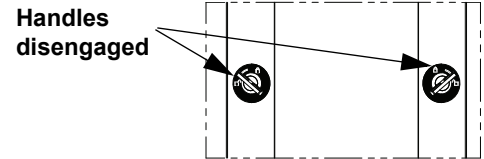


Step 4: Set door onto ends of door bracket located on the bottom of the manager. Then ensure that activation tabs on the door bracket fit into windows on the door.

Activation Tabs


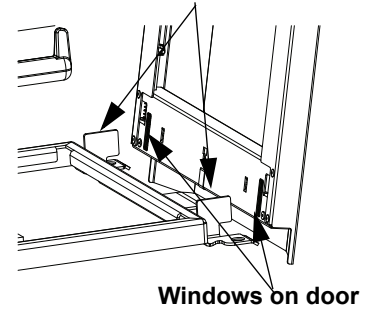


Step 5: Fit activation tabs located on the top door bracket into the windows located on top of the door.

Activation Tabs

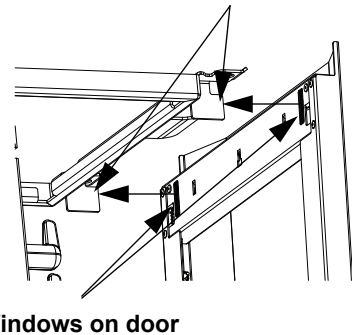


Step 6: Grasp fingers of manager with fingers and apply thumb to door face. Then squeeze together until handles pop into engaged position.

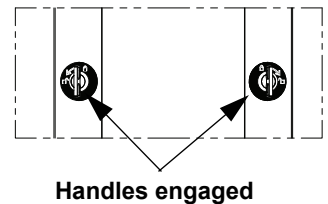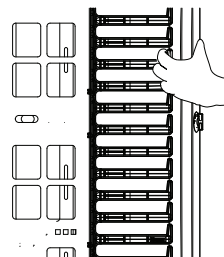

Door Part Number	Corresponding Vertical Manager	
	Single Sided	Dual Sided
PED696B1	PRVF696	PRV696
PED896B1	PRVF896	PRV896
PED1096B1	PRVF1096	PRV1096
PED1296B1	PRVF1296	PRV1296


Door Opening Instructions

Opening door to left: Disengage right-hand latch side of door by turning handle in clockwise direction to disengage position, then swing door open to left. Push door to close.

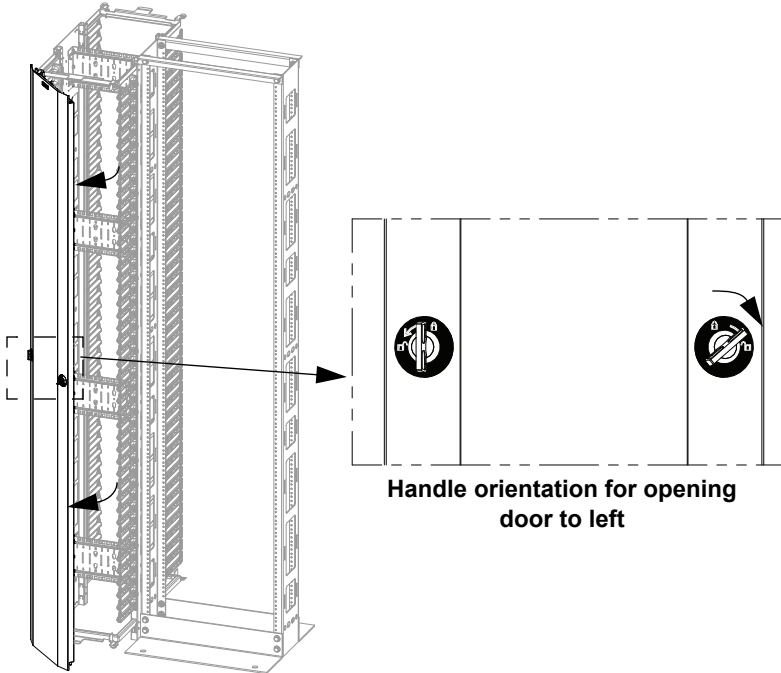

Handle orientation for opening door to left


Opening door to right: Disengage left-hand side of door only by turning handle in counterclockwise direction to disengage position, then swing door open to right. Push door to close.

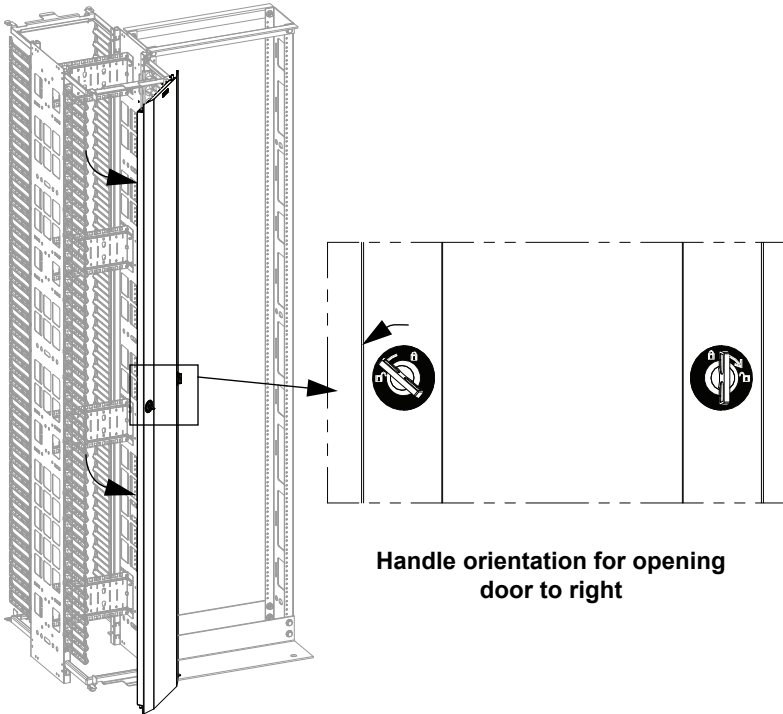

Handle orientation for opening door to right

Door Removal Instructions

Removing door: Place both handles in disengage position, then remove door.

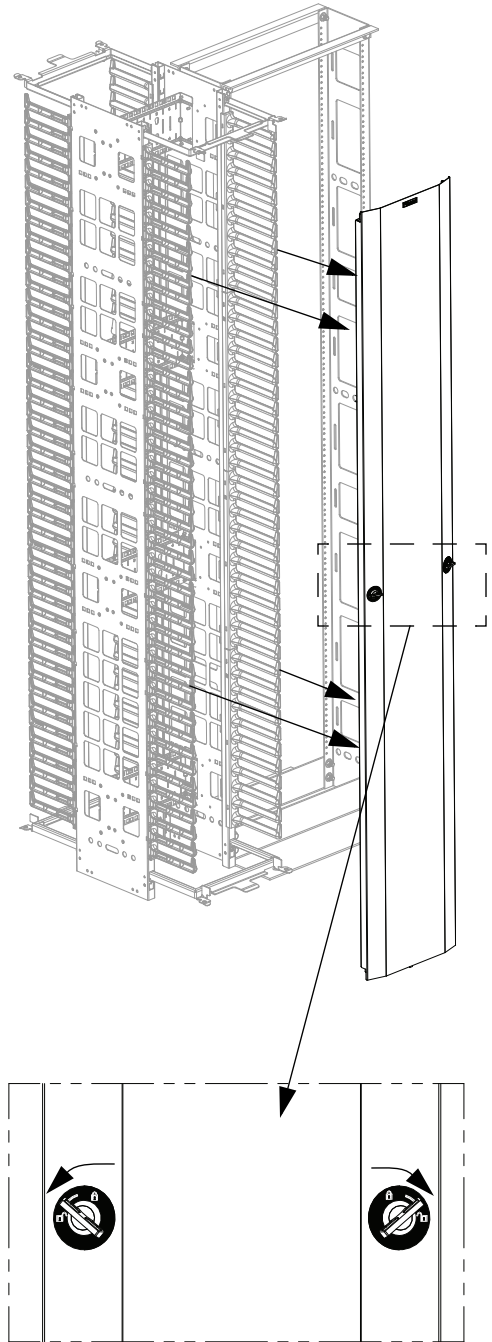

Handle orientation for removing door

For instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT

www.panduit.com

E-mail:
techsupport@panduit.com
Fax:
(866)405-6654

This page intentionally left blank