


READ ALL OF THE FOLLOWING INSTRUCTIONS BEFORE REMOVING CABINET FROM CARTON

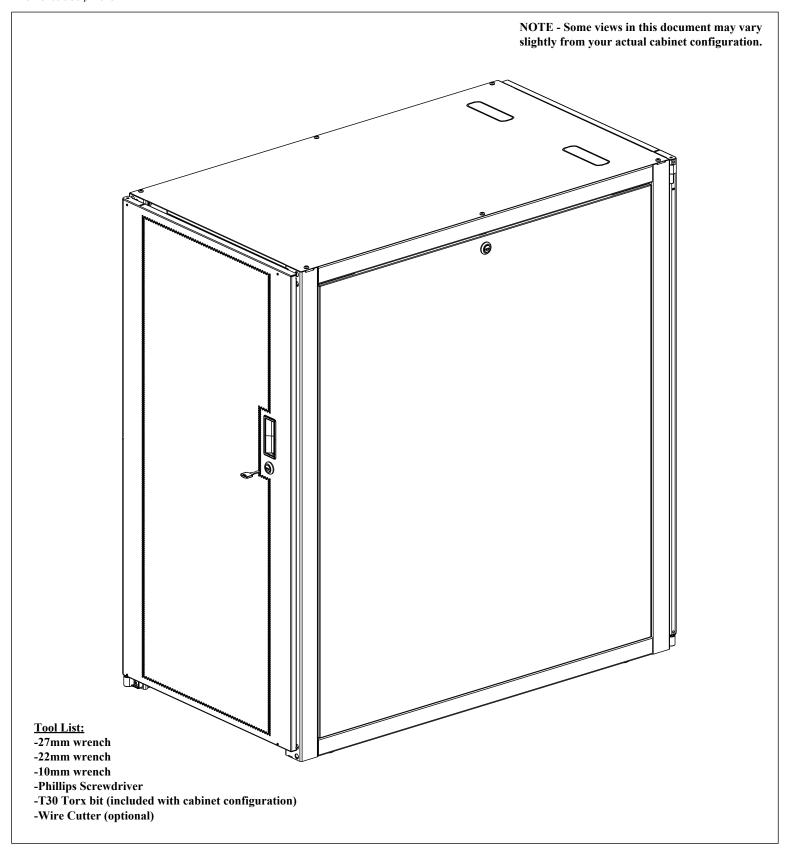


© Panduit Corp. 2013



FOR TECHNICAL SUPPORT www.panduit.com/resources/install\_maintain.asp

# **Table of Contents**


Cabinet Operation	Page
Frame Assembly	4
Leveling Leg and Caster Installation	5
Leveling	6
Equipment Rail Adjustment	7
Top Cap Installation and Overhead Cable Openings	8
Grounding	9
Door & Side Panel Bumper Installation	10
Front & Rear Doors (Installation and Removal)	11
Side Panels (Installation and Removal)	12

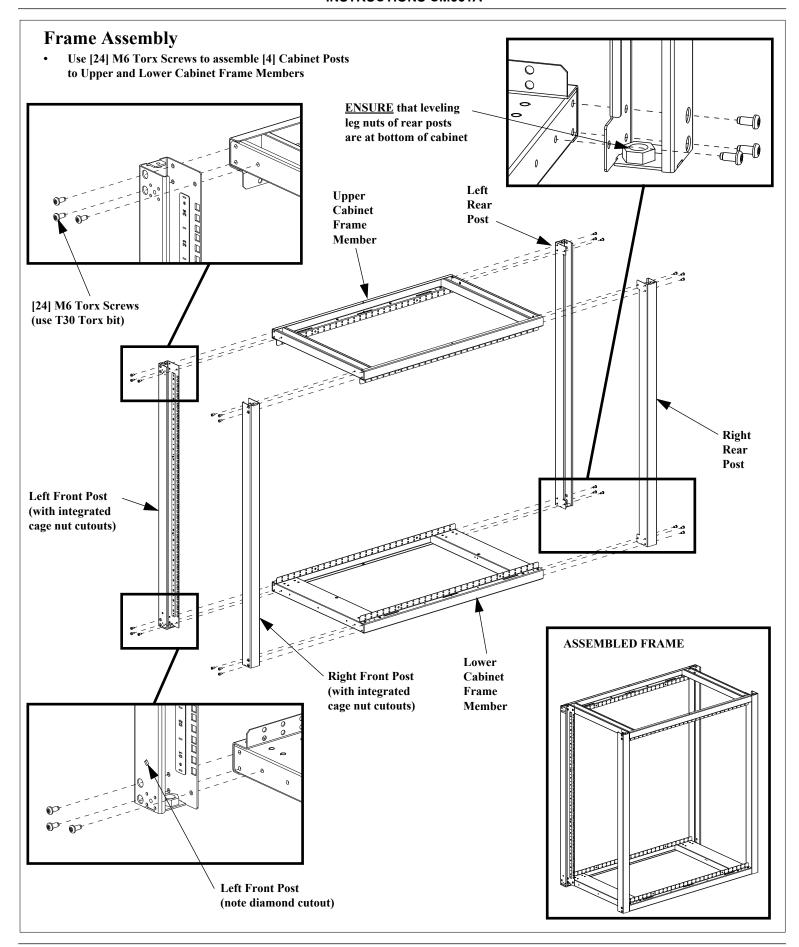

For Technical Support: www.panduit.com/resources/install\_maintain.asp


# **Leveling Leg and Caster Installation**


- Install [4] Leveling Legs into cabinet frame to fully retracted position Install [4] Caster Assemblies with [4] Hex Nuts per caster

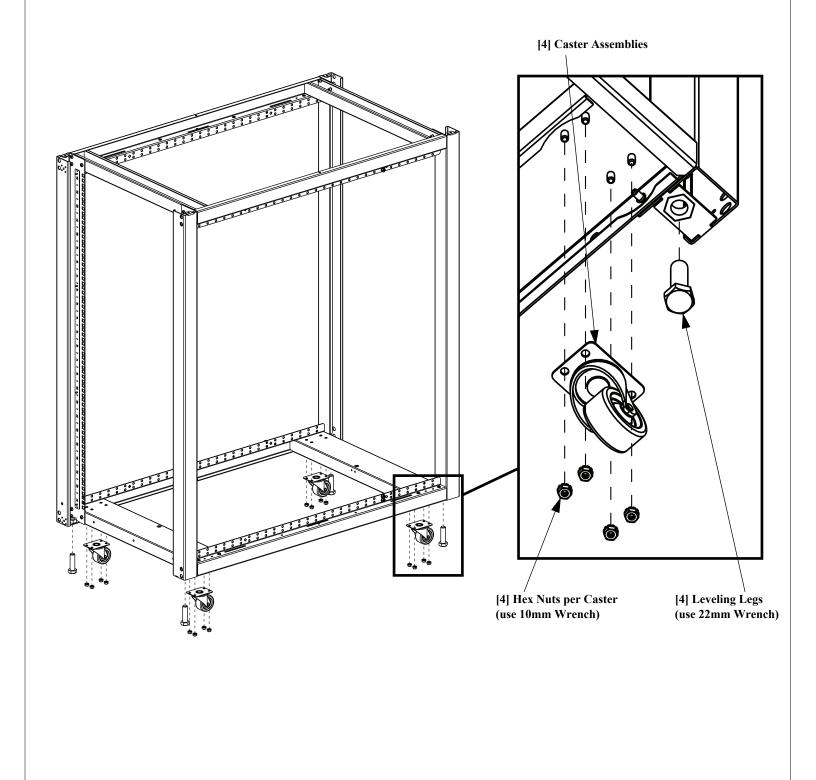

# Leveling


- Ensure that [4] Leveling Legs are fully retracted
- Roll Cabinet into final position
- Lower the [4] Leveling Legs until the cabinet weight is fully supported
- Adjust the [4] Leveling Legs so that the cabinet is level front-to-back and side-to-side

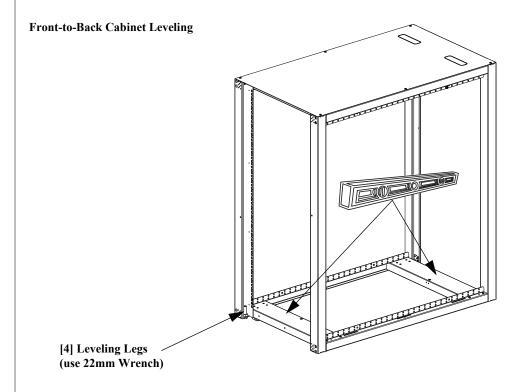

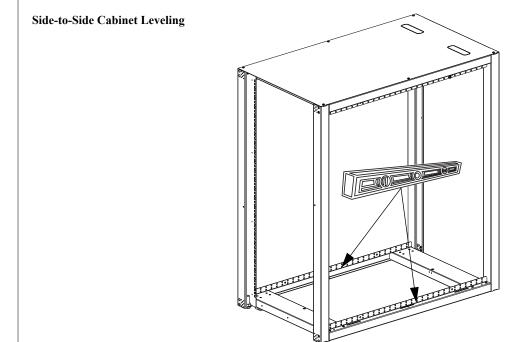

## **Equipment Rail Installation**


- Move equipment rail to desired positon
- Secure equipment rail to cabinet with [4] Torx screws and [4] hex nuts per rail
- NOTE: Front equipment rails are integral to the cabinet frame and are in a fixed position
- NOTE: Diamond cutouts on cabinet frame indicate mounting holes to allow for 742mm industry standard
  equipment rail spacing. Mount equipment rails to mounting holes immediately in front of diamond cutouts.

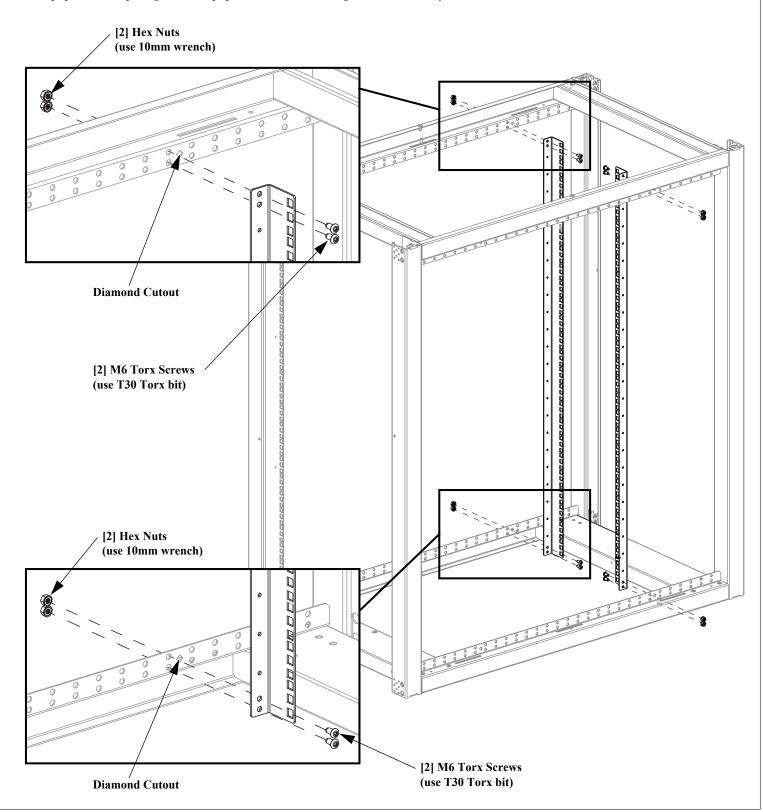

For Technical Support: www.panduit.com/resources/install\_maintain.asp


# **Top Cap Installation and Overhead Cable Openings**

- Install Top Cap with [6] M6 Torx Screws
- Cut [4] tabs of each Cutout with wire cutter to open each cable opening OPTIONAL
- NOTE: If Cutouts are removed, Panduit recommends installing CTCN1X5 Bezel and Cover (not included) for cable protection.

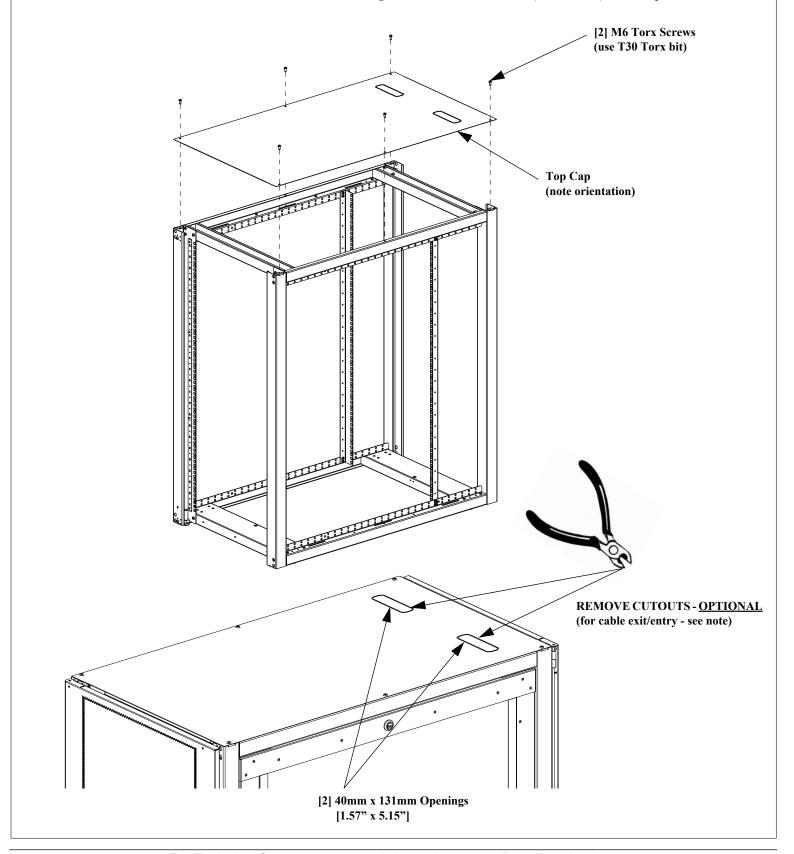

# Grounding


- Attach Grounding Lug or Grounding Bar at any of the [2] location(s) shown below
- Grounding location is indicated by universal ground symbol
- Use M5 bonding screws (not included)

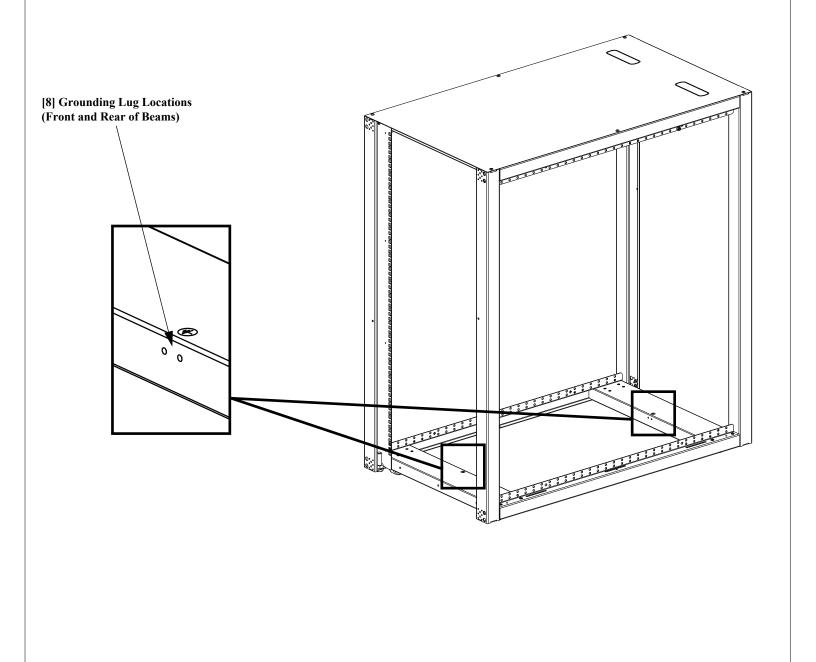

# **Door & Side Panel Bumper Installation** Install [4] Rubber Bumpers on each side panel Install [5] Rubber Bumpers (for 24 RU doors) or [3] Rubber Bumpers (for 12 RU doors) on each door **NOTE** - Front Door is indicated by PANDUIT label **Rubber Bumper Rubber Bumper** [installed] [installed] -24 RU **ONLY** [5] Rubber Bumpers (24 RU Doors) -or-[3] Rubber Bumpers 24 RU (12 RU Doors) **ONLY** PANDUIT Label [4] Rubber indicates front **Bumpers** door


### Front & Rear Doors (Installation and Removal)

- Install [2] Door Handles and [2] Quarter-turn Lock Assemblies (as shown below)
- · Align [4] Locating Pins of each Hinge Bracket with matching hole pattern of cabinet frame
- Secure [4] Hinge Brackets to cabinet frame ([2] left-front / [2] right-rear) with [1] M6 Torx Screw per bracket
- Open Door(s) to approximately 90°
- Lift Door(s) up and insert hinge pins of door(s) into hinge brackets
- REVERSE STEPS to remove split doors
- IMPORTANT Use M6 x 12.0mm screws with nylon patch for mounting hinge brackets ([4] screws packed with hinge brackets)

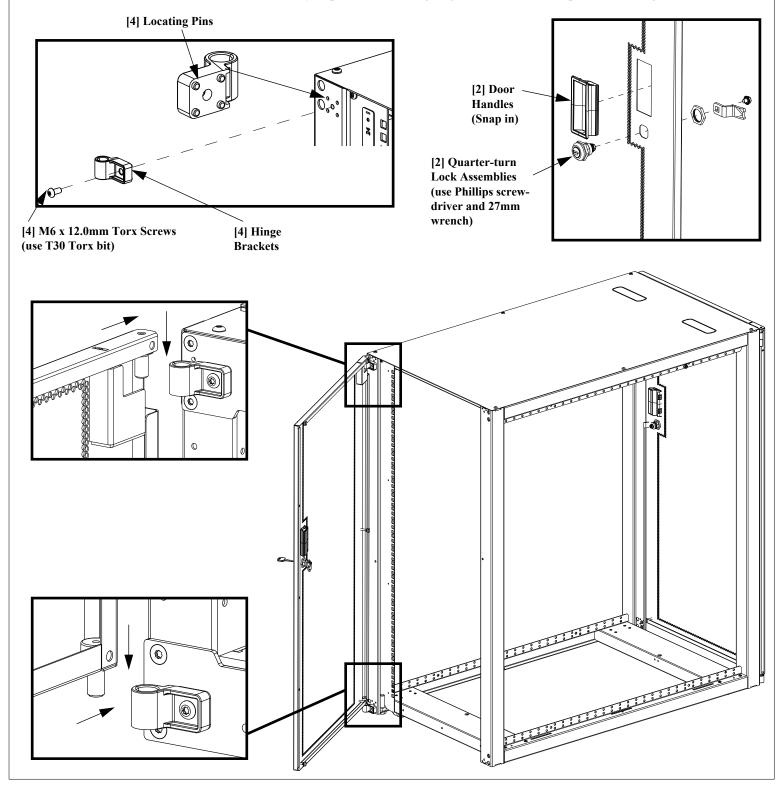

For Technical Support: www.panduit.com/resources/install\_maintain.asp

# Side Panels (Removal and Installation) Install [2] Quarter-turn Lock Assemblies (as shown below) Move Side Panel into place and insert tabs of panel into slots in beam of cabinet frame Push top of Side Panel towards cabinet frame Lock Side Panels REVERSE STEPS to remove Side Panel

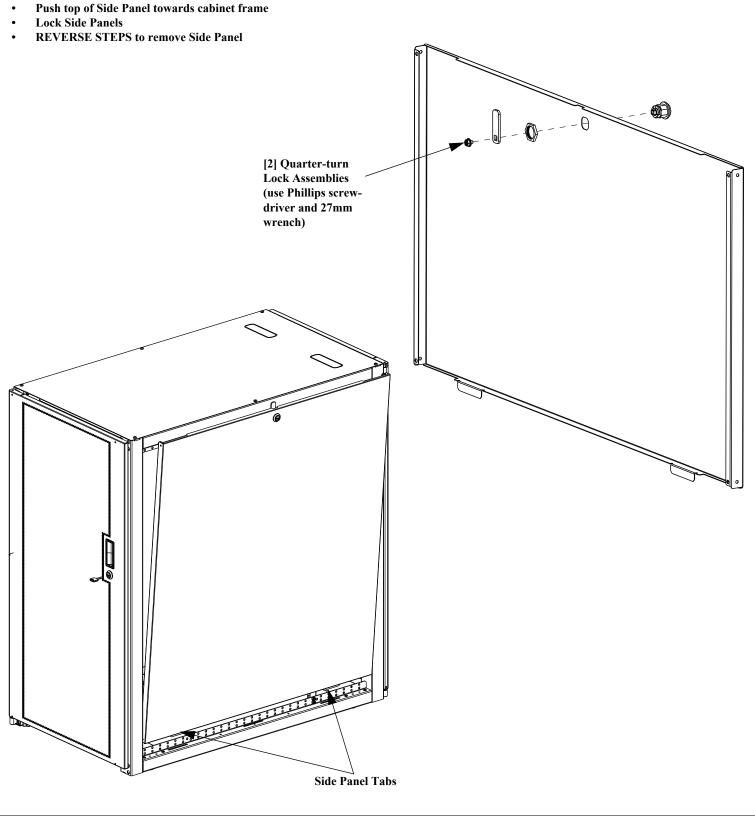

For Instructions in Local Languages and Technical Support:

www.panduit.com

www.panduit.com/resources/install\_maintain.asp

E-mail: techsupport@panduit.com Phone: 866-405-6654