




# INSTRUCTION SHEET

September 2003

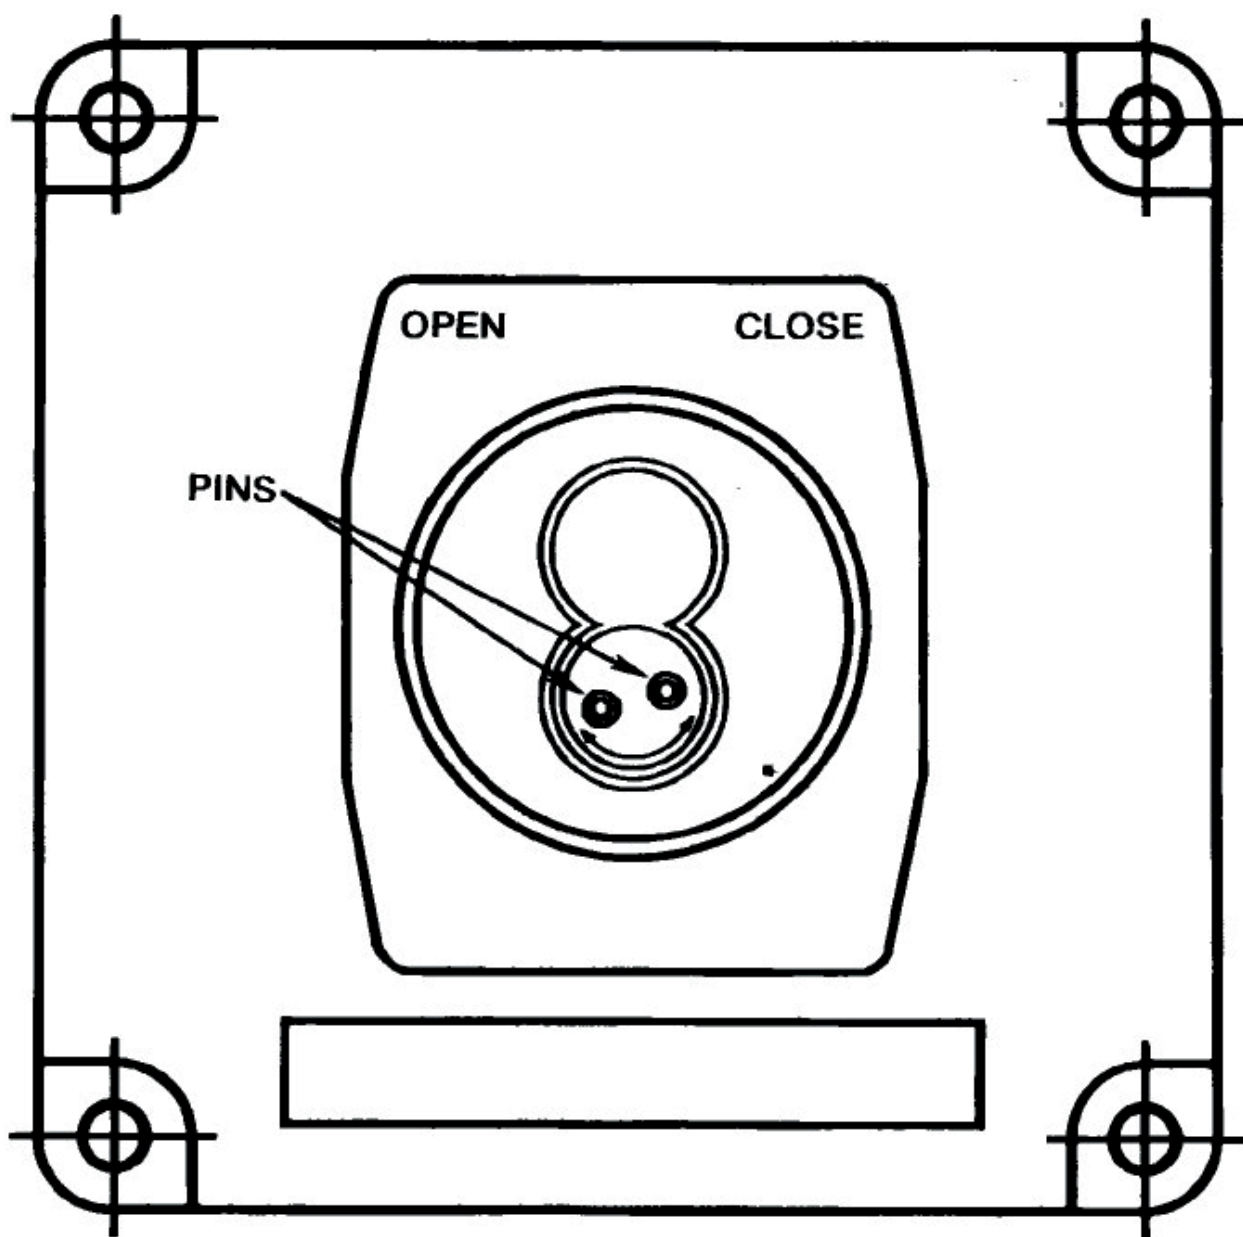

To remove cover when combined core is not in place:  
remove cover screws, insert screwdriver between pins, rotate  
locking mechanism either clockwise or counterclockwise,  
slide cover down and lift off.

**SQUARE D**

30072-100-36C