

Rack Air Distribution Unit Distribution Diagram

The Air Distribution Unit is installed in the bottom of the enclosure to evenly distribute cool, conditioned air throughout the densely populated enclosure. Cold air is pulled in from below the raised floor plenum by dual blower fans which supply consistent air volumes for even inlet temperatures and therefore extend the life of the equipment.

