

## Industrial Control Transformers

### FB2X Fusing Block Installation Manual



P/N: 272-38176-03  
REV. 06 (05/16)  
©2016 Appleton Grip LLC d/b/a Appleton Group  
All rights reserved. Specifications  
subject to change without notice.

### Caution

*Make sure all power is off  
before any wiring is started.  
For secondary fusing only.*

**(USE FBP KIT FOR PRIMARY FUSING)**

### Secondary Fuse Applications

1. Remove the two 10/32 screws (A) from F1 and X1.
2. Install the two fuse clips (B and C) at F1 and X1.  
Install the clips with the fuse stops facing away from each other.  
Make sure the screws are tightened.
3. Connect the secondary load wires to F2 and X2.

#### Included with the FB2X kit:

- Two 12/32 fuse clips with 10-32 screws
- One shorting clip for the primary, if wiring primary for lower voltage
- Instruction sheet

