



1587 FC/1587/1577 Insulation Tester

Go to www.fluke.com to register your Product, read the Users Manual and find more information.
Vaya a www.fluke.com para registrar el producto, descargar manuales y obtener más información.
Acesse www.fluke.com.br para registrar seu Produto, ler o Manual do Usuário e obter mais informações.

Fluke Connect

1

2

3

4

5

6

7

8

1. Download the Fluke Connect app.
2. Turn on the phone's Bluetooth.
3. Turn on the Tester and push to activate the radio.
4. Make sure that the radio is active.
5. Go to the phone and start the Fluke Connect app.
6. Tap **Capture Measurements**.
7. Tap **Fluke 1587 FC** to connect the Tester to the phone by Bluetooth.
8. The live display from the Tester shows on the phone app.

For more instructions about how to use the Fluke Connect app, go to www.flukeconnect.com.

Voltage $\tilde{V}$ $\bar{V}$ mV

Temperature °C °F

Continuity |||


Testing Insulation

Current mA, mA


PI / DAR

Diode Test


Good Diode

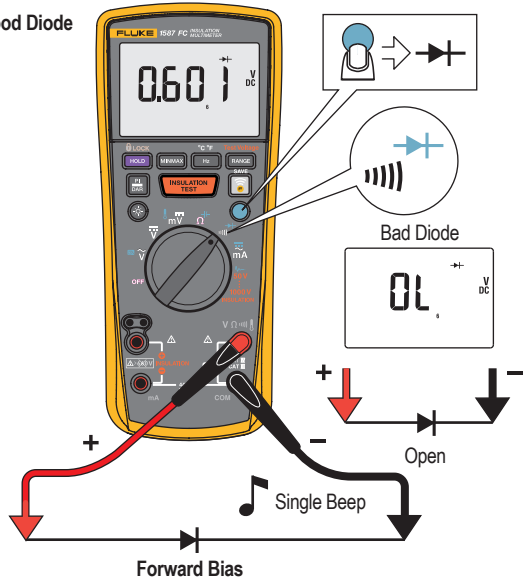


Good Diode

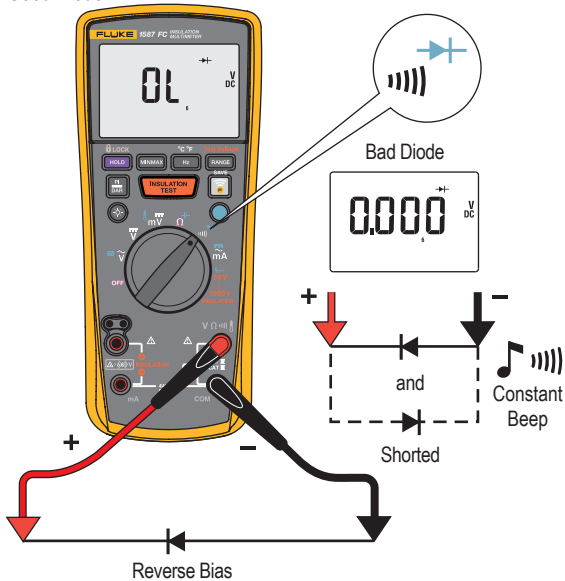

Resistance Ω

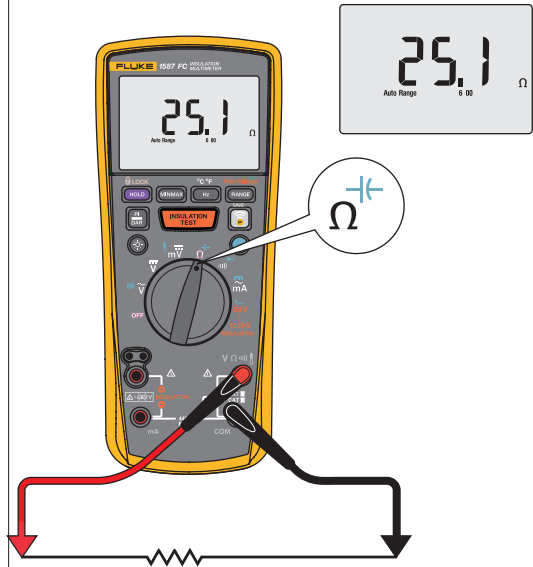


Capacitance μF

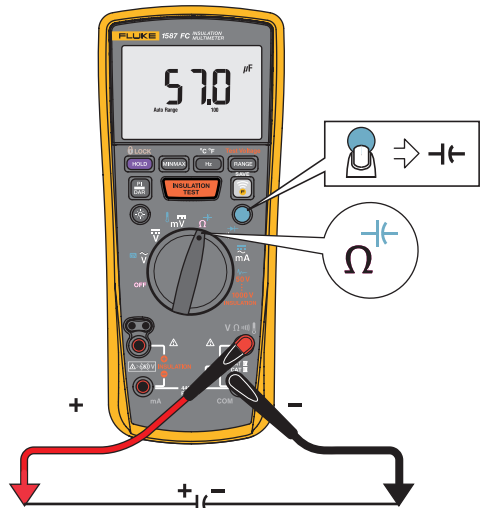


Frequency (Hz)


AC/DC
Voltage
Frequency

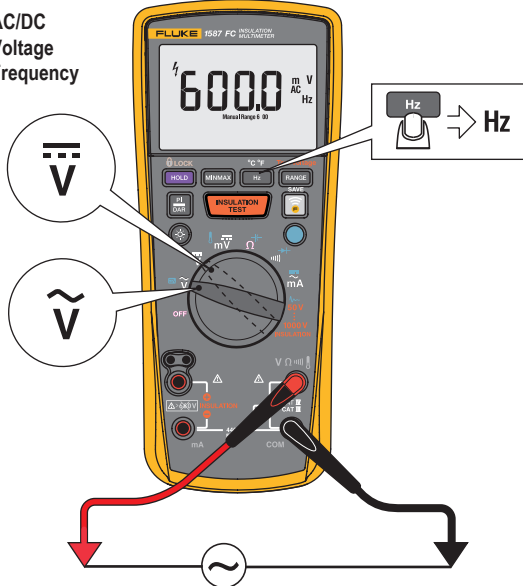


AC/DC Current Frequency

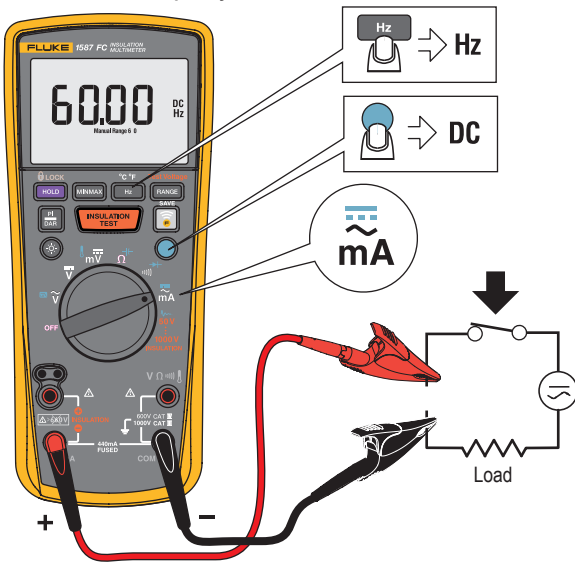


Low Pass (VFD) Filter (Model 1587)

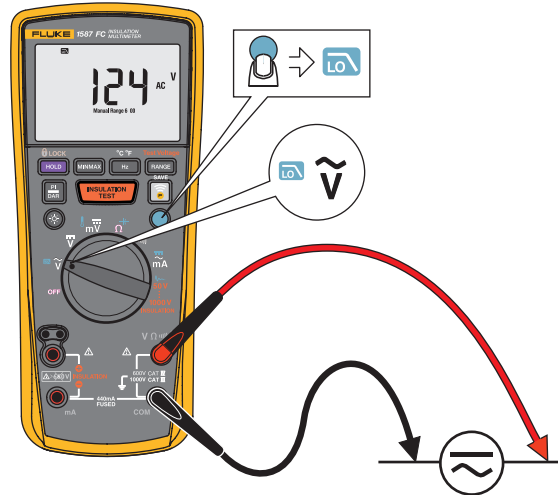

Smoothing (Power Up Option)

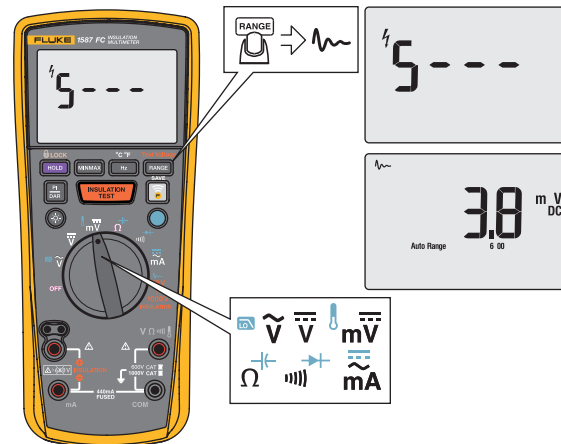

Fuse Test

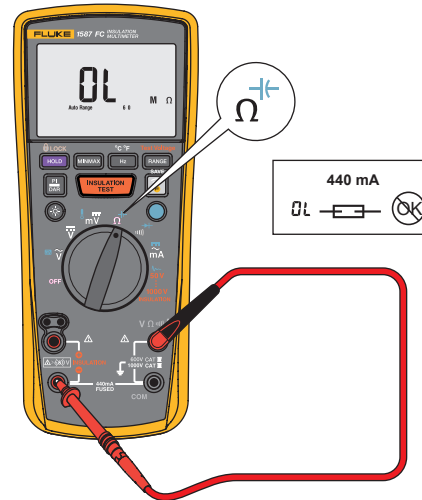

Battery / Fuse Replacement

