




This template is printed actual size (scale = 1:1).

1900P Industrial Display Widescreen Computer Cutout: 321 mm high x 493 mm wide (12.64 in. x 19.41 in.)

1500P Industrial Display Widescreen Computer Cutout: 260.2 mm high x 420 mm wide (10.24 in. x 16.54 in.)

Instructions for Tightening the Mounting Clips:

- 1. Hand-tighten the mounting clips around the bezel by following the tightening sequence below.
- 2. Tighten the mounting clips to a torque of 1.35 N•m (12 lb•in) by following the tightening sequence below, making sure to not overtighten.
- 3. Repeat this process at least three times until the clips are properly torqued, making sure the gasket is compressed uniformly against the panel.

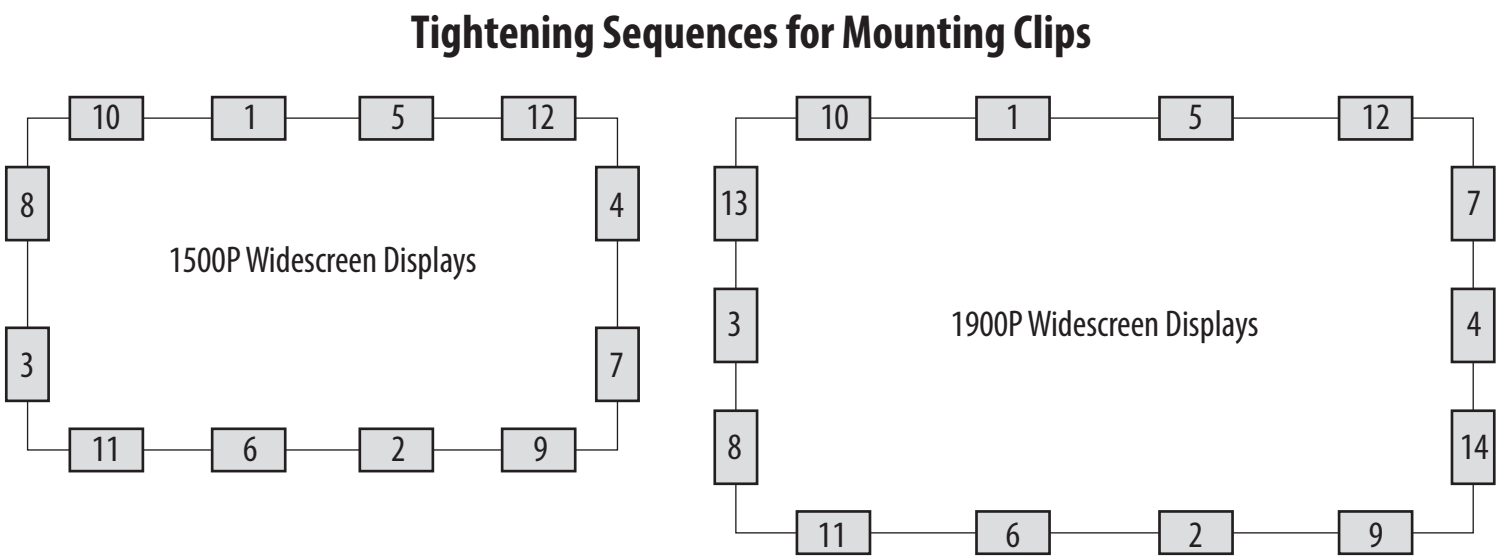

1500P Industrial Display Widescreen Computer Cutout: 260.2 mm high x 420 mm wide (10.24 in. x 16.54 in.)

1900P Industrial Display Widescreen Computer Cutout: 321 mm high x 493 mm wide (12.64 in. x 19.41 in.)

