
POLYLINE® Nonmetallic Hinge Installation


Installation Instructions for POLYLINE® Series Enclosures AMP1648, AMP1860

Instructions for Removing Hinge Clips for Cover Removal

NOTE: Flat Blade Screw Driver or similar tool is required to remove hinge clips

- 1. Unlatch and open the Cover between 90° and 120°. (If the Cover is fully open, the hinge clips cannot be removed.)
- Use the flat blade screwdriver and position the blade to disengage the clip as shown. The hinge clip will unseat when the screwdriver is rotated.
 NOTE: The spring action of the hinge clip may cause the clip to unseat quickly. Place a hand or other means under the hinge clip to catch it during removal.
- 3. Collect the hinge clip that is removed and set aside for reinstallation.
- 4. Repeat steps 2 & 3 for each hinge clip.

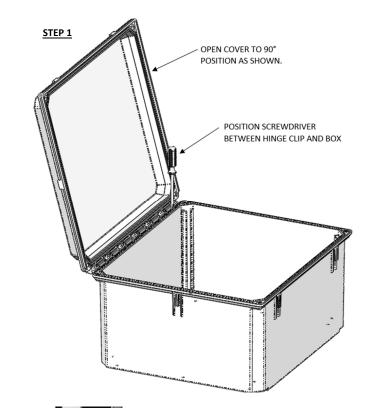

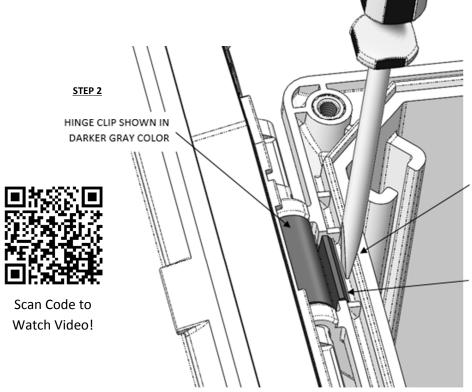

ROTATE
SCREWDRIVER
BETWEEN BOX AND
HINGE CLIP TO
UNSEAT THE CLIP
FEATURE ON THE
HINGE CLIP

CLIP FEATURE





POLYLINE® Nonmetallic Hinge Installation


Installation Instructions for POLYLINE® Series Enclosures AMP1648, AMP1860

Instructions for Installing Hinge Clips on Nonmetallic Hinge

- Align the Cover with the Box with the Cover oriented in the open position (open past the 120° position).
- 2. Line up the posts of the Cover hinge feature with the grooves on the Box hinge feature.
- Push or Pull the Cover up to fully seat the posts in the grooves before closing the Cover.
- 4. Carefully close the cover and locate the hinge clips to be installed.
- 5. Insert the Hinge Clips in open slots along the hinge feature of the box.
- Push the hinge clip into the fully seated positon. There will be an audible snap when the hinge clip is seated.
- 7. Repeat Step 6 for each hinge clip.

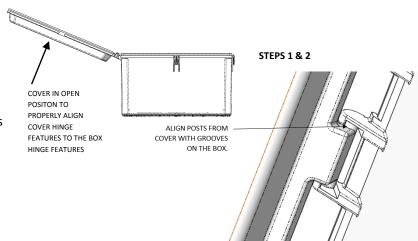

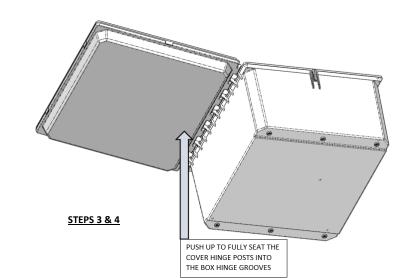

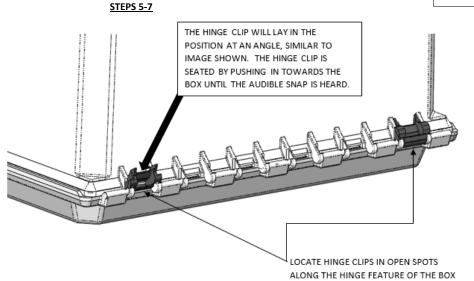

Allied Moulded Products, Inc.

222 North Union Street Bryan, OH 43506 Phone: 1-800-722-2679 Fax: 1-800-237-7269

Fax: 1-800-237-7269 www.alliedmoulded.com