


INSTALLATION INSTRUCTIONS NYLON SNAP-IN CONNECTOR

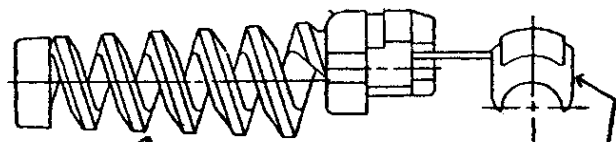

1. APPLY SNAP-IN
CONNECTOR
OVER CORD.

2. POSITION HINGED CLAMP
INTO BODY AND SQUEEZE
TIGHT WITH PLIERS.


3. PUSH SNAP-IN
CONNECTOR INTO
CHASSIS HOLE
AND RELEASE.

Wiring Device-Kellems
Hubbell Incorporated (Delaware)
185 Plains Road
Milford, CT 06460-8897
(203) 882-4800
PD1702



8/99

INSTALLATION INSTRUCTIONS NYLON SNAP-IN CONNECTOR

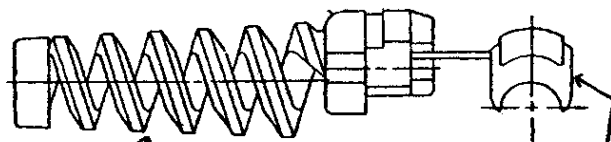

1. APPLY SNAP-IN
CONNECTOR
OVER CORD.

2. POSITION HINGED CLAMP
INTO BODY AND SQUEEZE
TIGHT WITH PLIERS.


3. PUSH SNAP-IN
CONNECTOR INTO
CHASSIS HOLE
AND RELEASE.

Wiring Device-Kellems
Hubbell Incorporated (Delaware)
185 Plains Road
Milford, CT 06460-8897
(203) 882-4800
PD1702



8/99

INSTALLATION INSTRUCTIONS NYLON SNAP-IN CONNECTOR

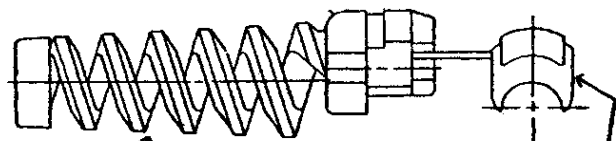

1. APPLY SNAP-IN
CONNECTOR
OVER CORD.

2. POSITION HINGED CLAMP
INTO BODY AND SQUEEZE
TIGHT WITH PLIERS.


3. PUSH SNAP-IN
CONNECTOR INTO
CHASSIS HOLE
AND RELEASE.

Wiring Device-Kellems
Hubbell Incorporated (Delaware)
185 Plains Road
Milford, CT 06460-8897
(203) 882-4800
PD1702



8/99

INSTALLATION INSTRUCTIONS NYLON SNAP-IN CONNECTOR

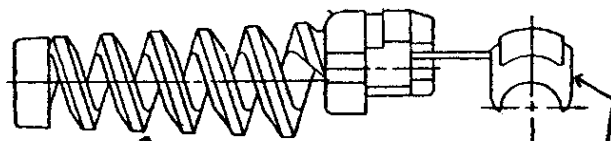

1. APPLY SNAP-IN
CONNECTOR
OVER CORD.

2. POSITION HINGED CLAMP
INTO BODY AND SQUEEZE
TIGHT WITH PLIERS.

3. PUSH SNAP-IN
CONNECTOR INTO
CHASSIS HOLE
AND RELEASE.

Wiring Device-Kellems
Hubbell Incorporated (Delaware)
185 Plains Road
Milford, CT 06460-8897
(203) 882-4800
PD1702



8/99