


# NYLON DELUXE CORD GRIPS

FOR INDOOR - OUTDOOR USE

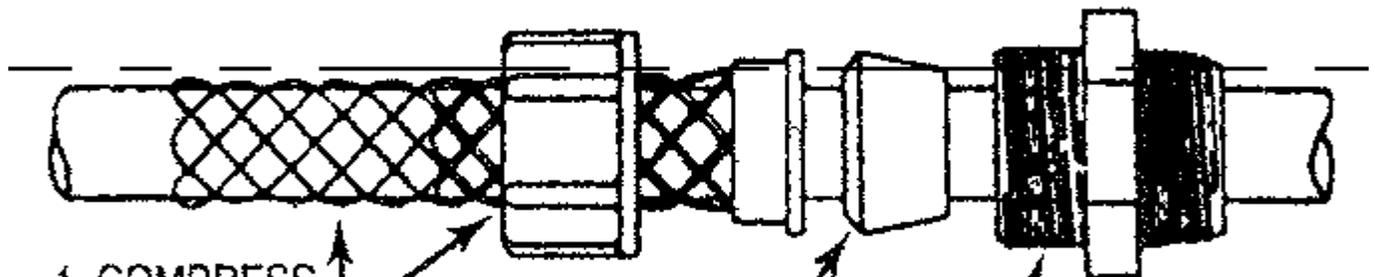

1. COMPRESS MESH END AND APPLY COMPRESSION NUT AND MESH ON CORD AS SHOWN.

2. SLIP ON BUSHING.

3. POSITION BODY ON CORD, THEN SLIDE PRECEDING COMPONENTS TO BODY FOR ASSEMBLY.

4. HAND TIGHTEN TO ASSURE A LIQUID TIGHT SEAL.

5. HAND TIGHTENING MAY CAUSE CORD TO TWIST WITHIN MESH. TO RELIEVE TWIST, COMPRESS THE MESH WHILE TURNING COMPRESSION NUT.

6. REMOVE SLACK FROM INSTALLED MESH BY SMOOTHING MESH TIGHT TO CORD.

WHEN CORD DIAMETER IS TOO LARGE TO PASS THROUGH THE BODY, STRIP OFF CORD JACKET TO END OF RUBBER BUSHING. MAKE SURE THAT JACKET IS COMPLETELY COVERED BY BUSHING WHEN ASSEMBLED.

7. STRIP CORD JACKET AS DESIRED.

Wiring Device-Kellems  
Hubbell Incorporated (Delaware)  
185 Plains Road  
Milford, CT 06460-8897  
(203) 882-4800  
**309-20-064**

Rev. April 2000

