




# Assembly & Installation Instructions

**CAUTION:** Read instructions carefully and turn electricity off at main circuit breaker panel before beginning installation.

## 5235

\*\*\*\*\*  
NOTE: ALL THREADED CONNECTIONS MUST BE SEALED WITH SILICONE SEALANT (RTV).  
\*\*\*\*\*

**WARNING** - This product contains chemicals known to the State of California to cause cancer, birth defects and /or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.  
\*\*\*\*\*

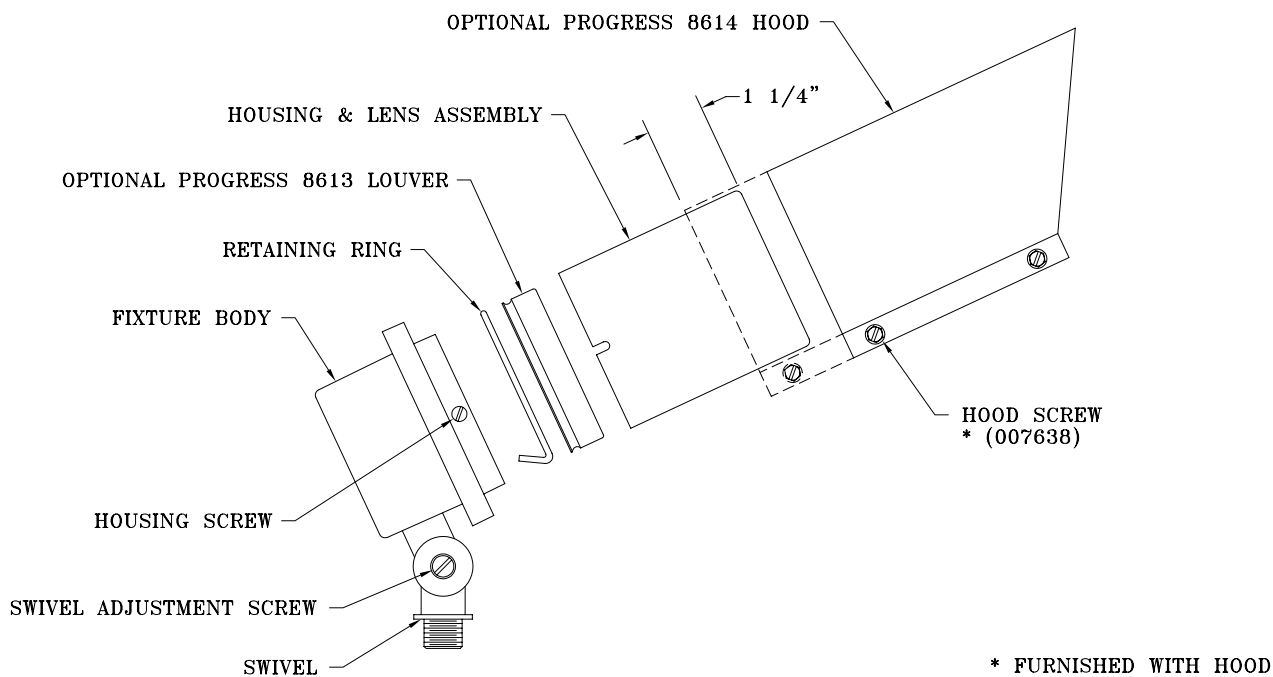

STANDARD U.L. LISTED WEATHERPROOF  
OUTLET BOX (NOT FURNISHED)

1- DISASSEMBLE FIXTURE BY LOOSENING HOUSING SCREWS AND SLIDING HOUSING FROM FIXTURE BODY. IF PROGRESS 8613 LOUVER IS TO BE USED, INSERT IT BEHIND THE LENS AND SECURE WITH RETAINING RING.

CAUTION: ALL GLASS IS FRAGILE, USE CARE WHEN HANDLING.

2- INSTALL LAMP (NOT FURNISHED). REPLACE HOUSING ON FIXTURE BODY AND SECURE IN PLACE WITH HOUSING SCREWS.

3- SLIP FIXTURE WIRES INTO A STANDARD U.L. LISTED WEATHERPROOF OUTLET BOX, INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL LOCAL CODES. THREAD SWIVEL FIRMLY DOWN INTO OUTLET BOX.

4- CONNECT FIXTURE GROUND WIRE TO GROUND WIRE FROM OUTLET BOX. CONNECT WHITE FIXTURE WIRE TO WHITE SUPPLY WIRE. CONNECT BLACK FIXTURE WIRE TO BLACK SUPPLY WIRE. USE U.L. LISTED WIRENUTS (NOT FURNISHED) TO MAKE CONNECTIONS. CLOSE AND SEAL OUTLET BOX ACCORDING TO BOX INSTRUCTIONS AND LOCAL CODES.

5- AIM FIXTURE AND SECURE IN PLACE WITH SWIVEL ADJUSTMENT SCREW.

6- IF PROGRESS 8614 HOOD IS TO BE USED, SLIDE IT AT LEAST 1 1/4" ONTO HOUSING FRONT AND SECURE IN PLACE WITH HOOD SCREWS.