

WIREMOLD



4006 Raceway Seam Clip


INSTALLATION INSTRUCTIONS

Installation Instruction No.: 42680R1 – Updated April 2005

Wiremold Electrical Systems conform to and should be installed and properly grounded in compliance with requirements of the current National Electrical Code, Canadian Electrical Code or codes administered by local authorities.

All electrical products may represent possible shock or fire hazard if improperly installed or used. Wiremold electrical products are UL Listed to U.S. and Canadian safety standards, made for interior use only, and should be installed in conformance with current local and/or the National Electrical Code.

Step 1: Hook 4006 onto 4000C/6000C Raceway Cover.

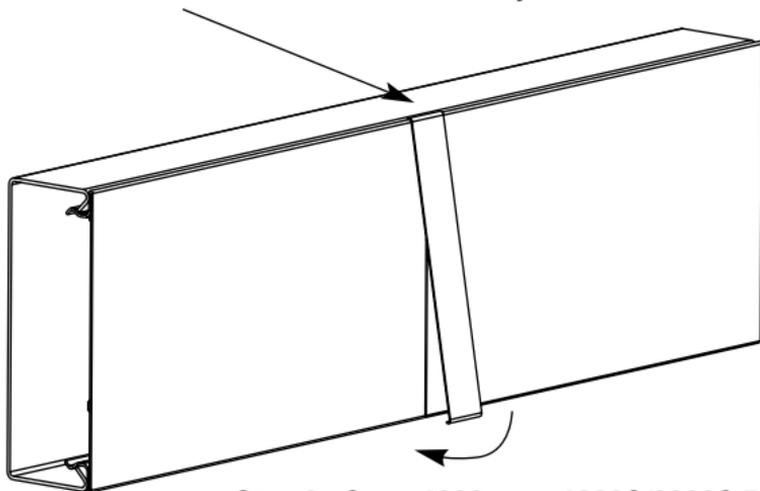

Step 2: Snap 4006 over 4000C/6000C Raceway Cover where sections intersect.