




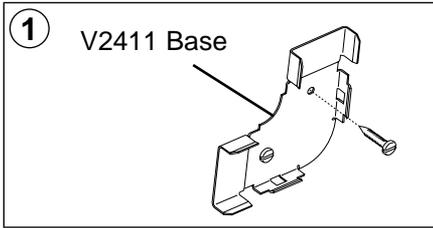


V2411 90° Flat Elbow Installation Instructions

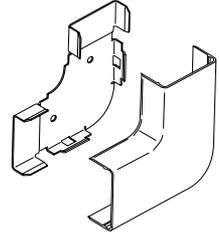

Mount V2411Base to wall using two No. 10 Pan Head screws.

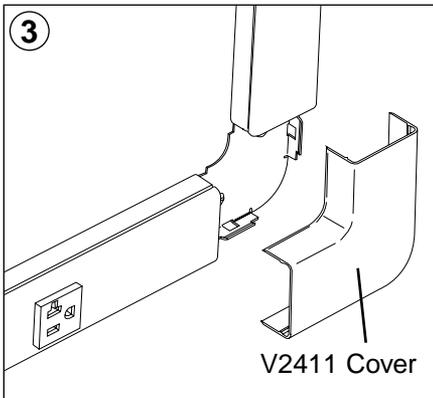

Snap V2411 cover over raceway at corner.

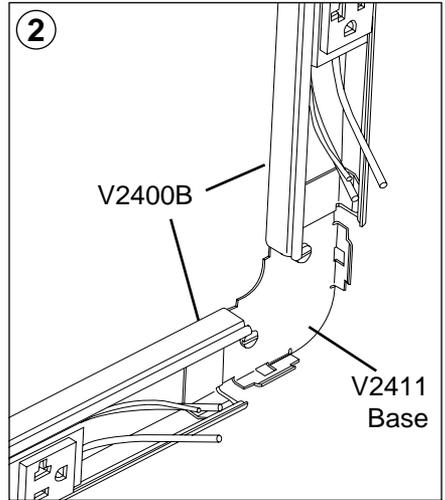

Insert V2400B Base under each tongue of V2411 Base. Mount V2400 Base and Cover per system instruction sheet.

NOTE: For ease of installation at corners – Cut-out any receptacle within 4" of corner. This will allow sufficient space within raceway for wire connections where two runs meet. Cut a blank raceway cover piece to fit over any exposed area, if necessary.



The Wiremold Company

In U.S.:

60 Woodlawn Street • West Hartford, CT 06133-2500
1-800-621-0049 • FAX 860-232-2062