


#### FRME2

- 1 FRME Enclosure
- 1 FRME Kit
- 1 Port I.D. Label
- 2 Enclosure Brackets

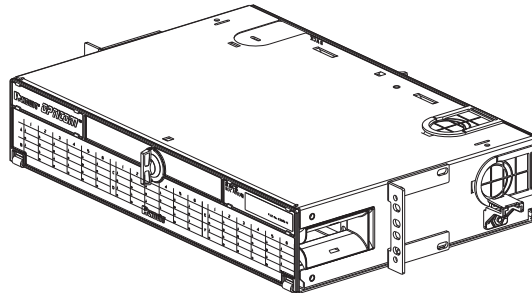


#### Assembly Instructions:

Determine the cable entry location on the enclosure. Remove the knockout by inserting a screwdriver into the slot located in the center of the knockout and apply a twisting upward motion, then lift out. Insert grommet following proper cutting diagram. Snap in saddle clips. Grounding lug attaches to a stud at the rear, inside the enclosure, on the top or bottom with a #10-32 nut. Apply laser warning label and caution label in a clearly visible location. Apply port I.D. label(s) on the inside of the door.


#### GROMMET CUTTING DIAGRAM




Cut the small circle for 1" diameter innerduct

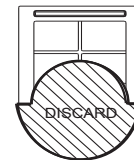


Cut the large circle for 1-1/2" diameter innerduct

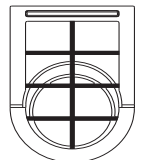


Cut the straight lines when not using any innerduct

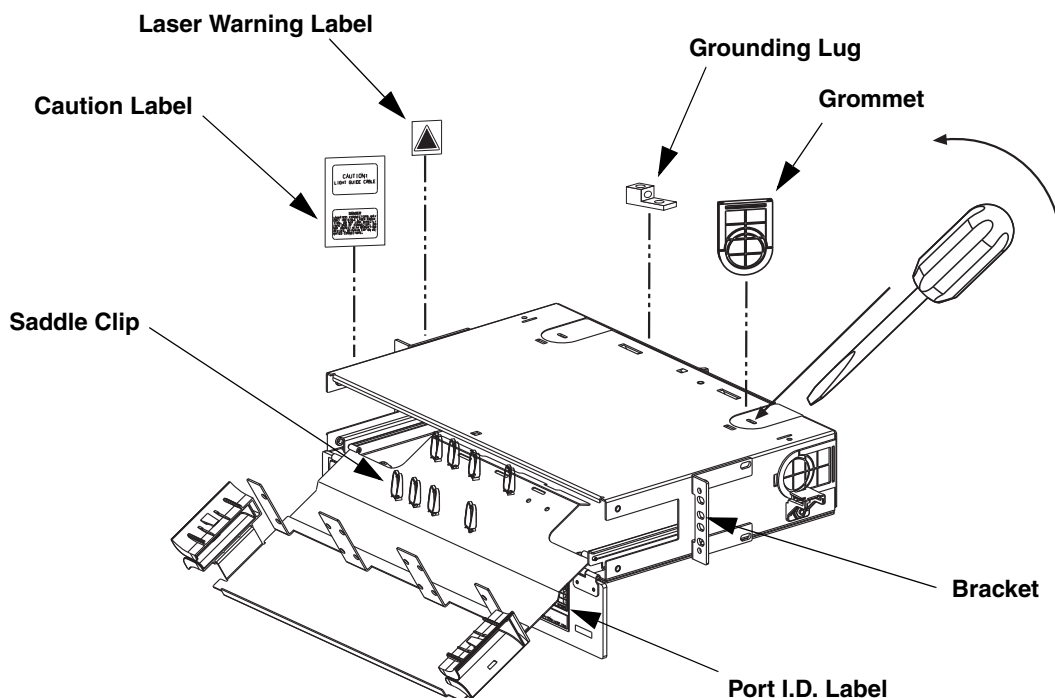

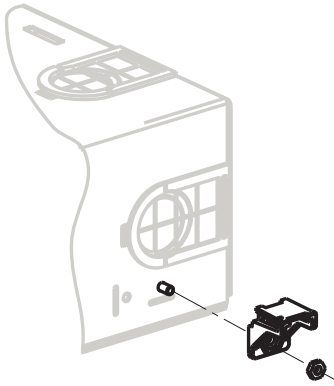


Attach strain relief clip with the #10-32 screw and nut provided.

## Mounting Instructions

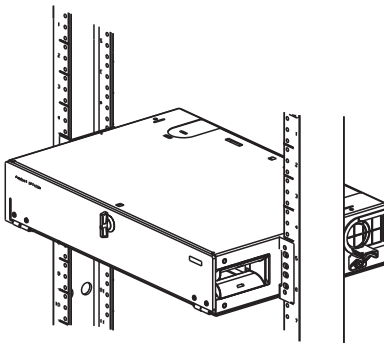


Bracket orientation for 23 inch rack

Attach the short leg of the bracket to the enclosure.

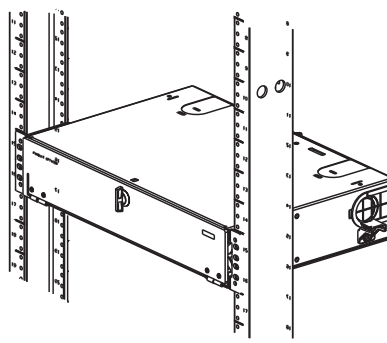

Bracket orientation for flush mount on a 19 inch rack



Locate rack bracket on the front mounting holes for flush mounting

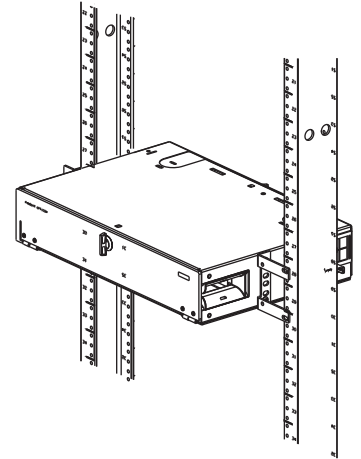

Bracket orientation for projection mount on a 19 inch rack

Locate rack bracket on the mid enclosure mounting holes for projection mounting

## Label Installation

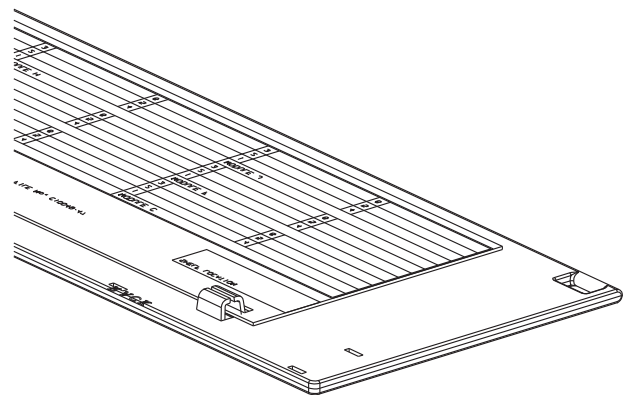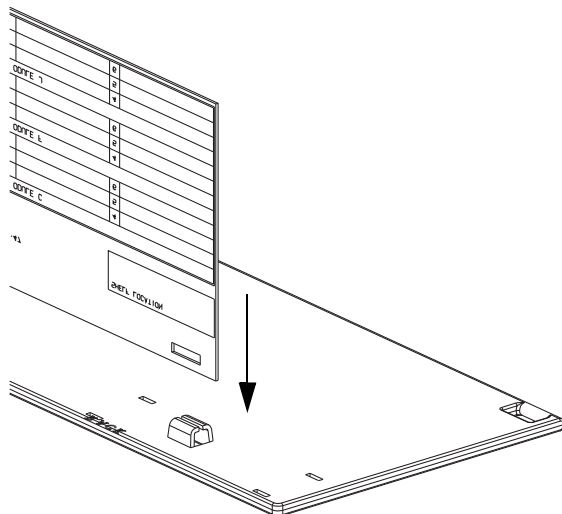

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**  
[www.panduit.com](http://www.panduit.com)

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone:  
866-405-6654