



NET-Access Slack Spool Kits

Part Numbers: CNSPE, CNSPCA

INSTRUCTIONS CM329A

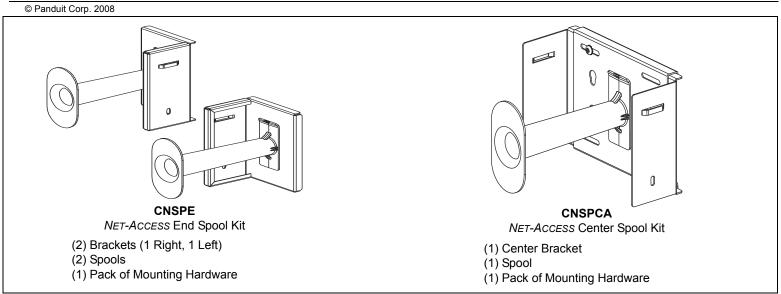


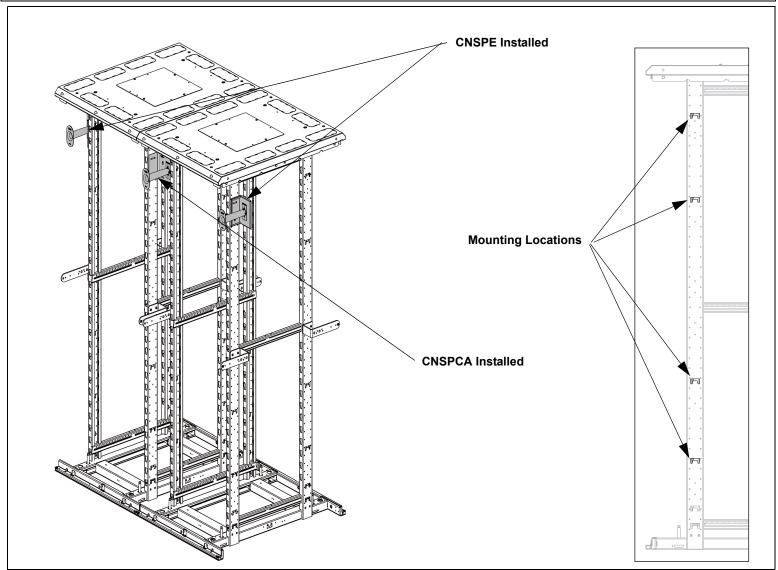

FOR TECHNICAL SUPPORT www.panduit.com/resources/install_maintain.asp

INSTRUCTIONS CM329A

Install the **CNSPCA** by choosing mounting location shown on Page 1. Loosen the (2) adjusting screws as shown in Figure 1 and slide the bracket between cabinet posts just above the desired mounting location until bridge lances are aligned in mounting location. Pull down and fasten with (2) #12-24 screws and washers provided as shown in Figure 2. Tighten the (2) adjusting screws on the bracket. Install the **CNSPE** in the desired mounting location by hooking bridge lance over tab and securing with #12-24 screw and washer provided as shown in Figure 3

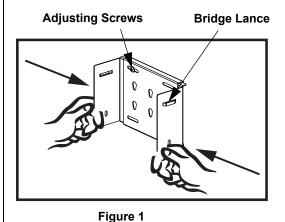

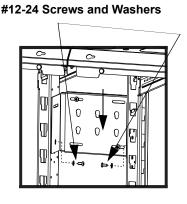


Figure 2


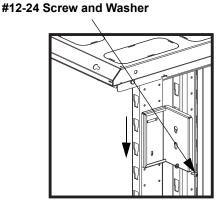


Figure 3


INSTALLATION OF SPOOLS Step 1

Align buttons with mounting leg slot



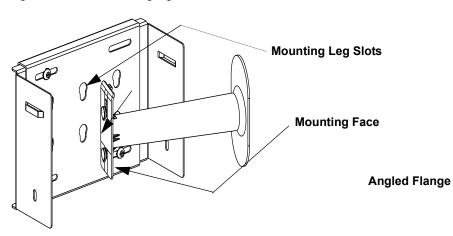

Push buttons through bracket until mounting face is flush with bracket.

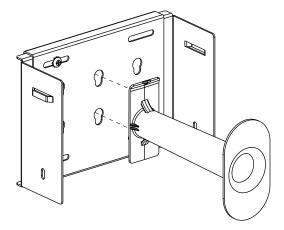

Step 3

0

Apply downward pressure until plastic spool clicks into place.

Removal/Replacement Step 4

Pull back on angled flange while applying upward pressure

Step 5

Repeat steps 1-3

For instuctions in Local Languages and Technical Support:

www.panduit.com/resources/install_maintain.asp



E-mail: cs@panduit.com Fax: (708)444-6448