

INSTALLATION INSTRUCTIONS T-PMPI-288-PC

© 2008 PANDUIT Corp.



GJ672UH	GJ696UH	GJ6120UH	GJ6144UH	GJ6168UH	GJ6192UH	GJ6216UH	GJ6240UH	GJ6264UH	GJ6288UH
72"	96"	120"	144"	168"	192"	216"	240"	264"	288"







GJ5660U	GJ5696U	GJ56120U	GJ56180U
60"	96"	120"	180"

		HDW1/4-KT	HDW1/4-A-KT	HDW3/8-A-KT	HDW3/8-KT
	1/4-20 Nut SS	2	2	—	—
	3/8-16 Nut SS	—	—	2	2
	1/4-20 Bolt SS	2	2	—	—
	3/8-16 Bolt SS	—	—	2	2
	1/4 Washer SS	4	4	—	—
	3/8 Washer SS	—	—	4	4
	1/4 Compression Washert SS	2	2	—	—
	3/8 Compression Washert SS	—	—	2	2
	12-24 Screw	2	—	—	2
	10-32 Screw	—	2	2	—
	M6 Screw	2	—	—	2
	M5 Screw	—	2	2	—

General Assembly Notes

1. Clean all mating surfaces prior to installation using the cleaning pad (sold separately).
2. Apply a very thin layer of anti-oxidizing paste (sold separately) to all mating surfaces prior to installation.
3. All M6 Thread Forming Screws are to be fastened using a 7mm socket wrench and an installation torque of 35 in.-lbs.
4. All 1/4-20 Bolts are to be fastened using a 7/16" socket wrench and an installation torque of 7 Ft.-lbs.

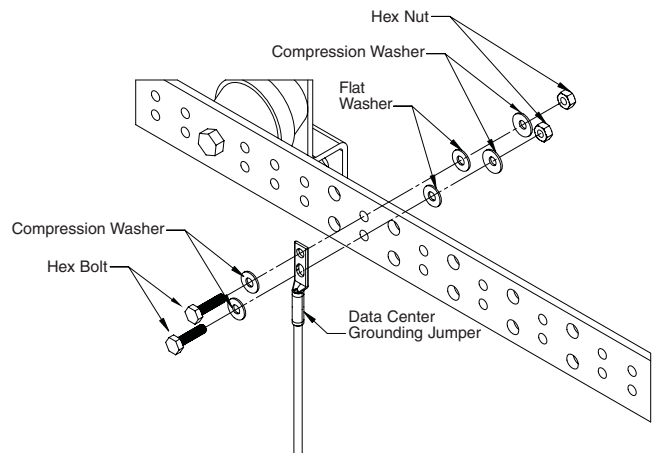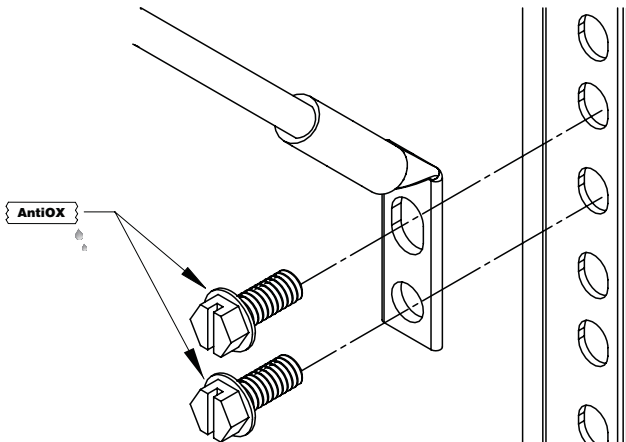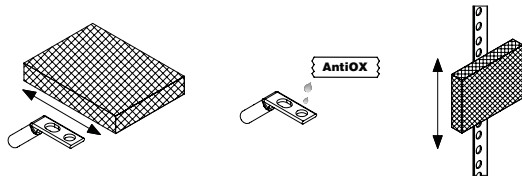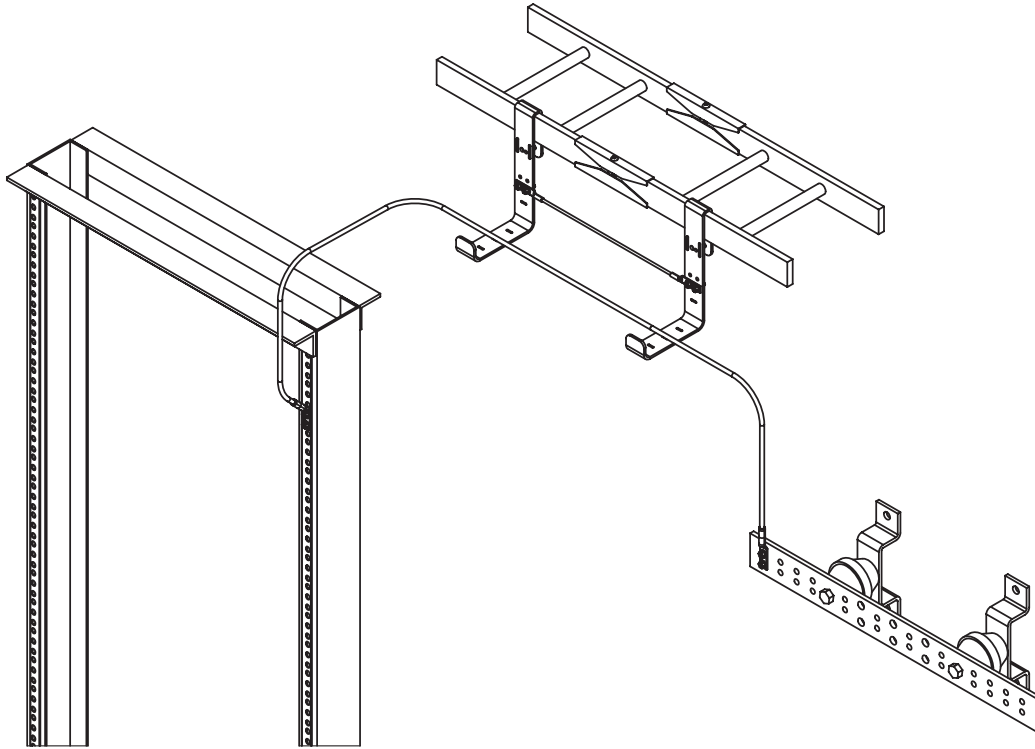

For Instructions in Local Languages
and Technical Support:

http://www.panduit.com/resources/install_maintain.asp



E-mail:
cs@panduit.com

Fax:
(815)485-5839