




OFFICE FURNITURE CORNER RACEWAY AND FITTINGS FOR USE WITH PANDUIT OFFICE FURNITURE RACEWAY COMMUNICATION ROUTING SYSTEM

© Panduit Corp. 2014 INSTALLATION INSTRUCTIONS RW183


<u>Panduit Part Numbers</u>: OFCR70**, OFCRC70**, OFR200FCR70**4, OFR200FCR70**2, OFR200FCR70**1, OFCR70EC**, OF70FV4** [OF70FV2**, OF70PO**, OF70PO** (NOT SHOWN)], OFR200FCR70**4P, OFR200FCR70**2P, OFR200FCR70**1P

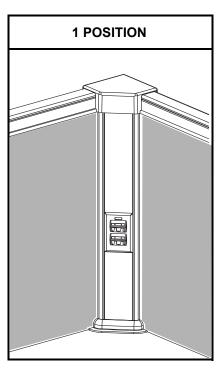


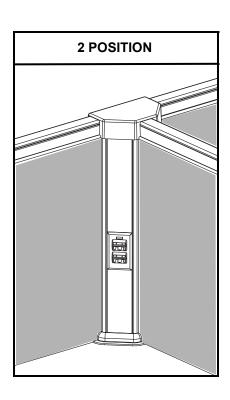


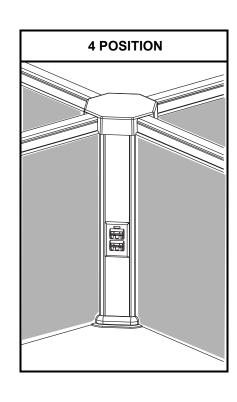


OPTIONAL CONFIGURATIONS

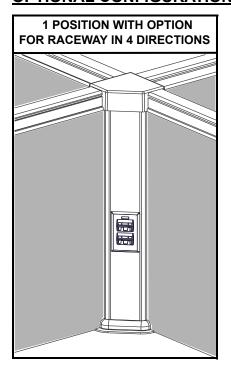

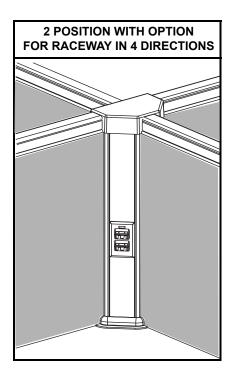


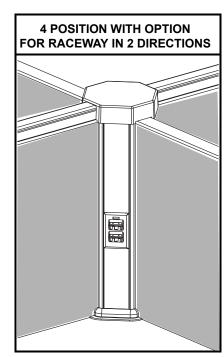


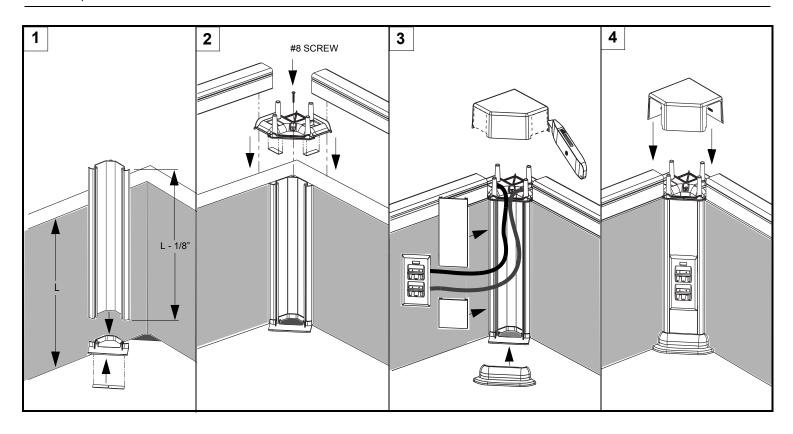



FOR PROPER TAPE ADHESION, SURFACE MUST BE CLEAN AND DRY PRIOR TO INSTALLATION. PRESSURE MUST BE APPLIED FOR 20 SEC. AT POINT OF APPLICATION.


OPTIONAL CABLE ROUTING FROM DESKTOP

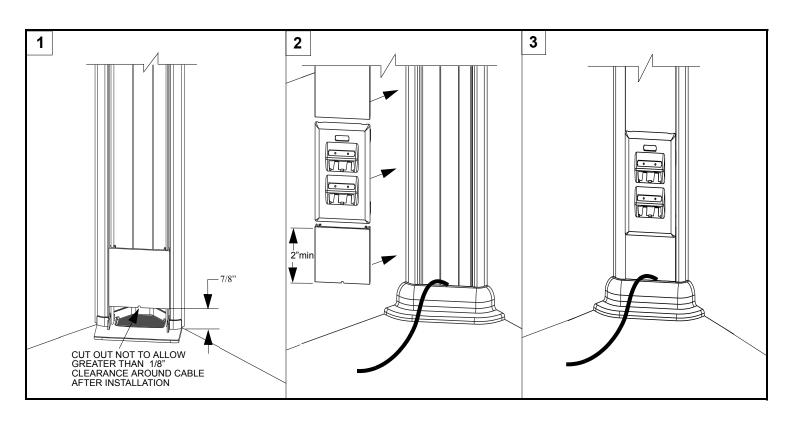

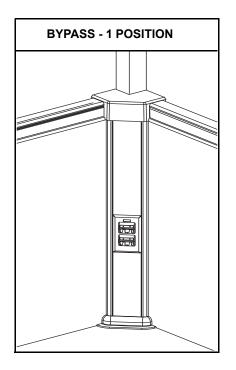

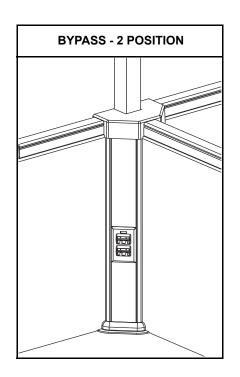

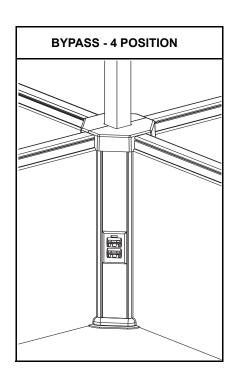

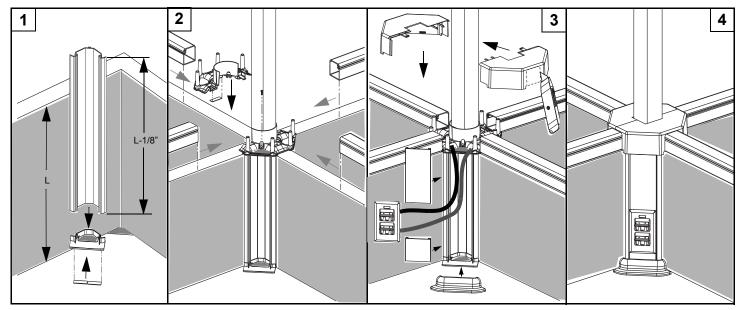

Note: Minimum bend radius on fittings is .625".

For Instructions in Local Languages and Technical Support:

 $www.panduit.com/resources/install_maintain.asp$



E-mail: techsupport@panduit.com Phone: 866-405-6654

Page 3 of 3 Rev. 05