






OFFICE FURNITURE CORNER RACEWAY AND FITTINGS FOR USE WITH PANDUIT OFFICE FURNITURE RACEWAY COMMUNICATION ROUTING SYSTEM

© Panduit Corp. 2014




INSTALLATION INSTRUCTIONS


RW183

Panduit Part Numbers: OFCR70**, OFCRC70**, OFR20OFCR70**4, OFR20OFCR70**2, OFR20OFCR70**1, OFCR70EC**, OF70FV4** [OF70FV2**, OF70P**, OF70PG** (NOT SHOWN)], OFR20OFCR70**4P, OFR20OFCR70**2P, OFR20OFCR70**1P

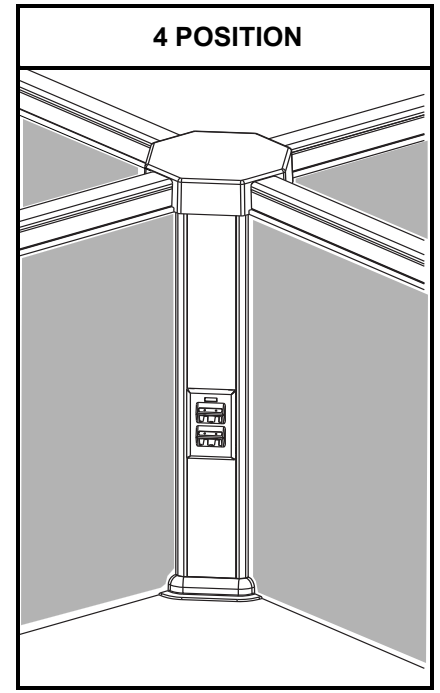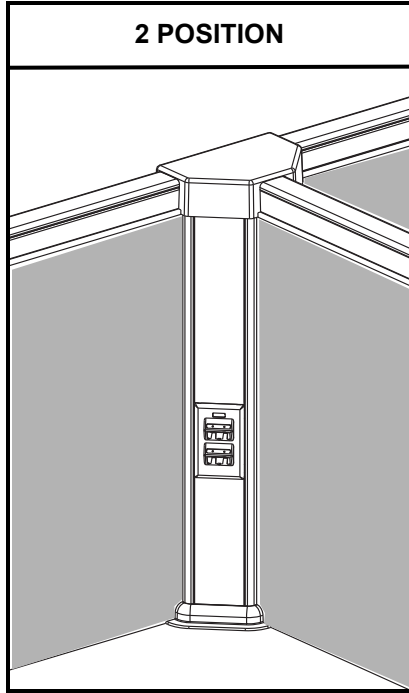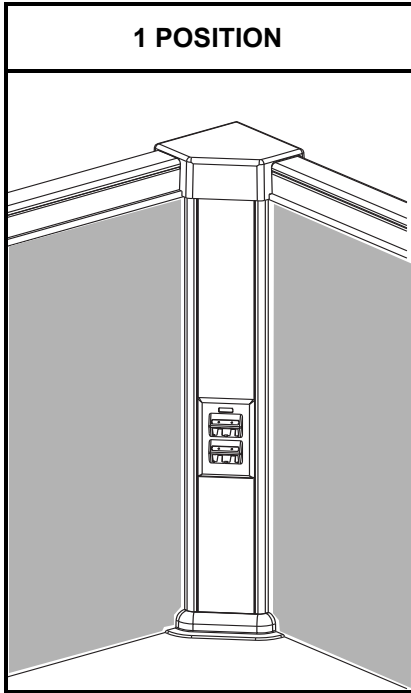


OPTIONAL CONFIGURATIONS


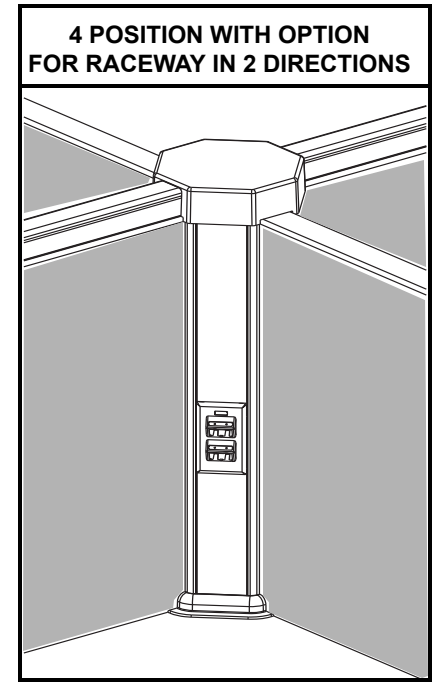
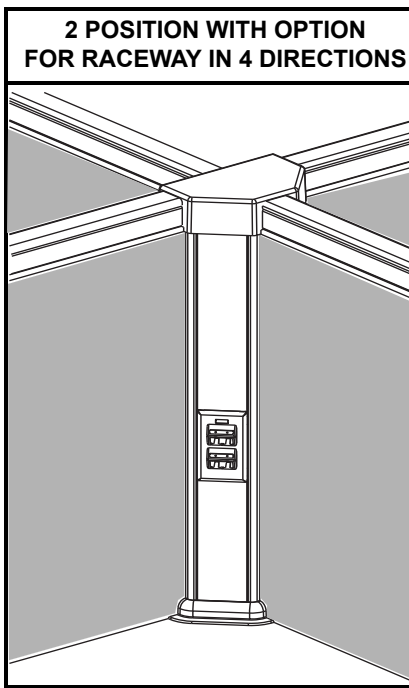
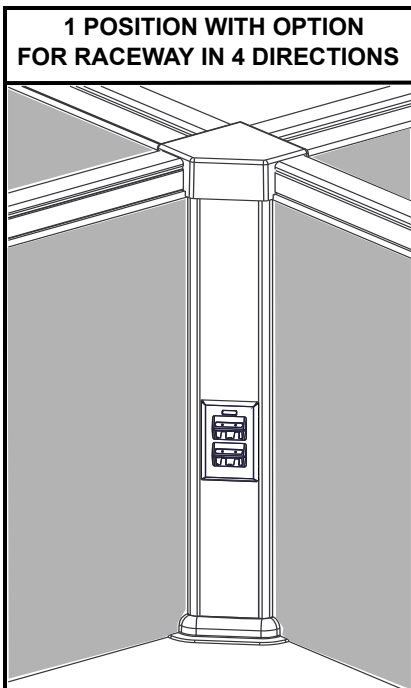


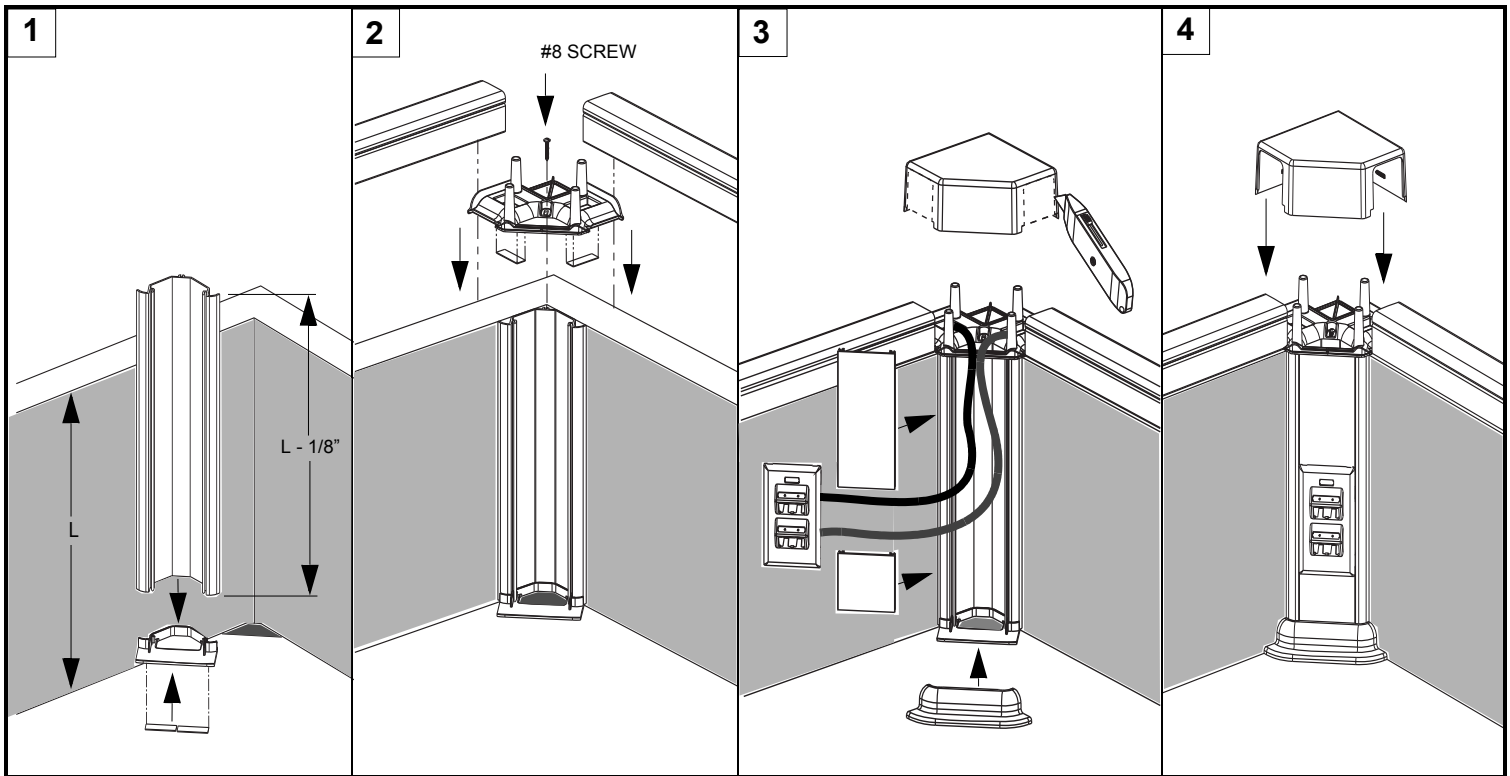

FOR PROPER TAPE ADHESION, SURFACE MUST BE CLEAN AND DRY PRIOR TO INSTALLATION. PRESSURE MUST BE APPLIED FOR 20 SEC. AT POINT OF APPLICATION.

OPTIONAL CABLE ROUTING FROM DESKTOP

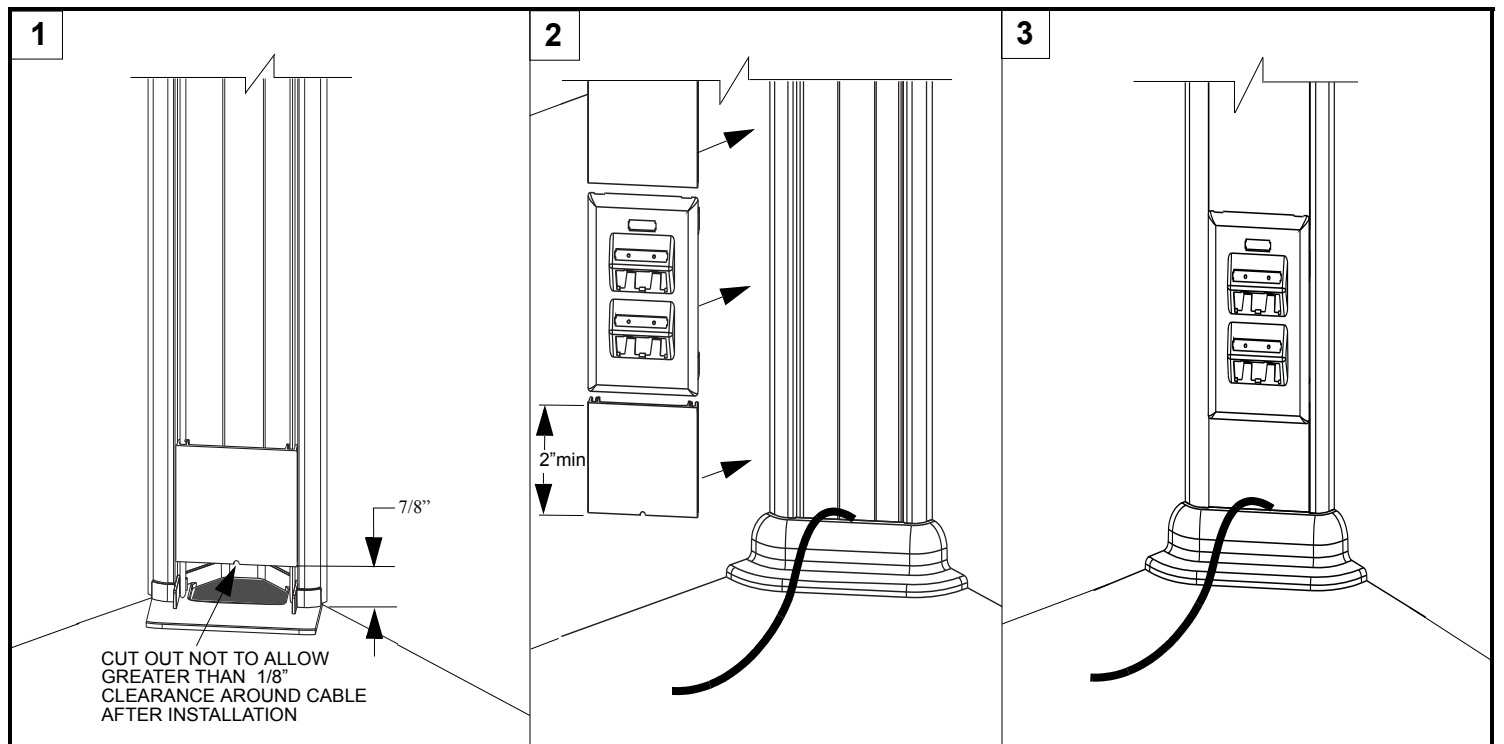

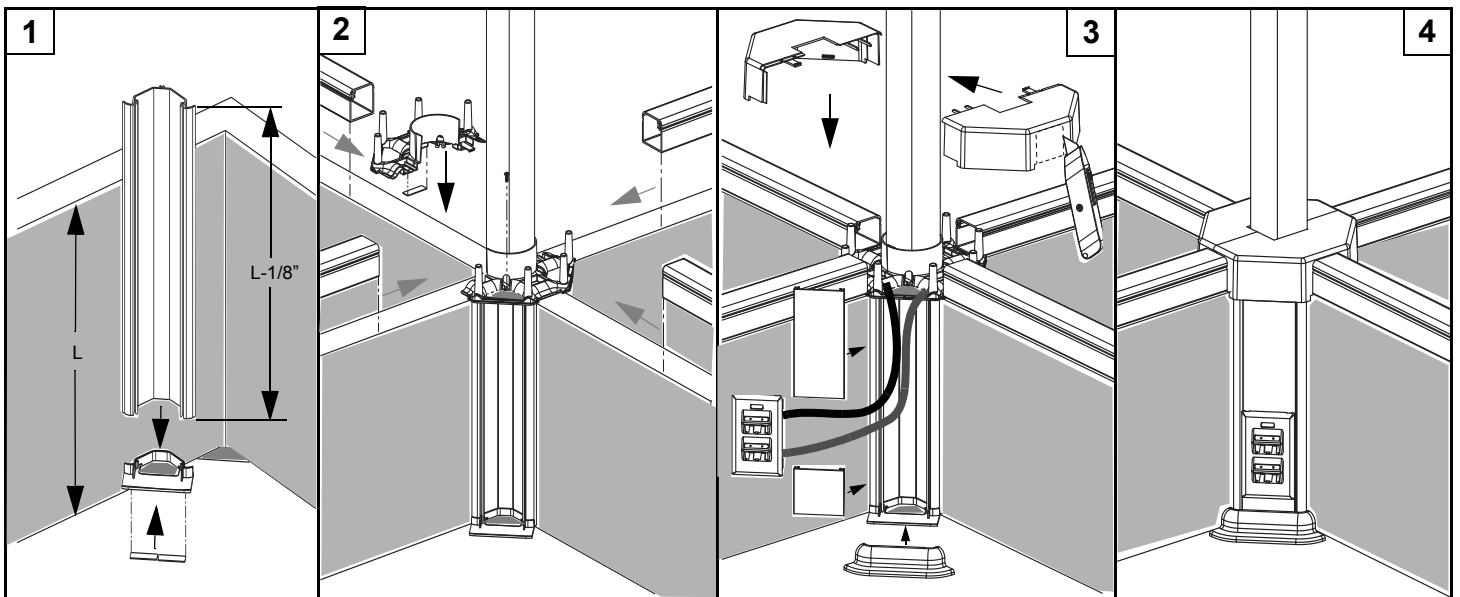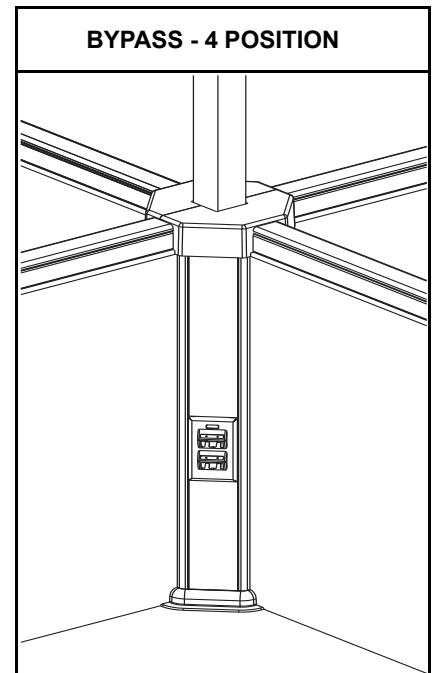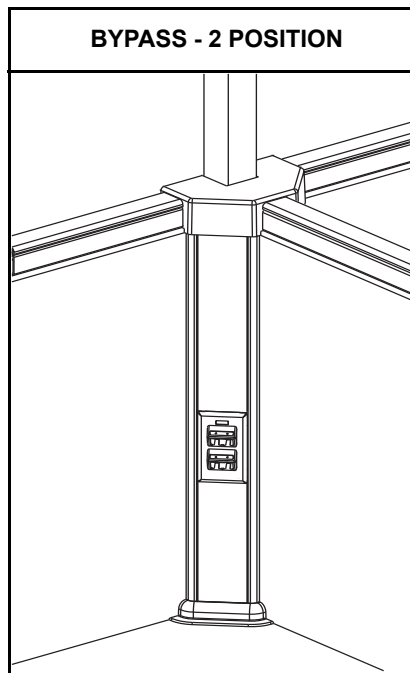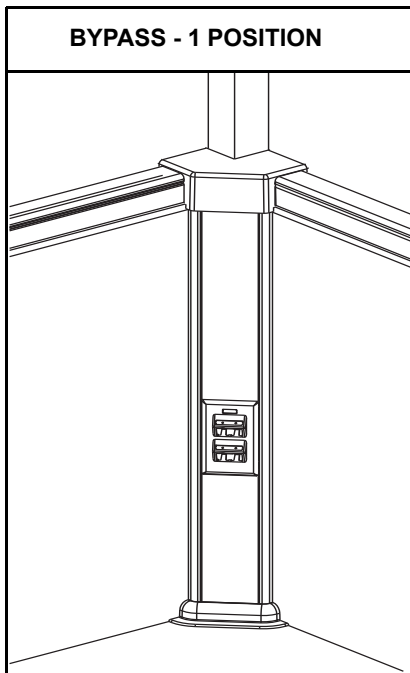

Note: Minimum bend radius on fittings is .625".