


Finger Bracket Installation

- Remove Shipping Brackets.
- Install Finger Brackets.

Note: Front E-Rails should be located a minimum of 126mm (4.96") from the front or rear of the cabinet.

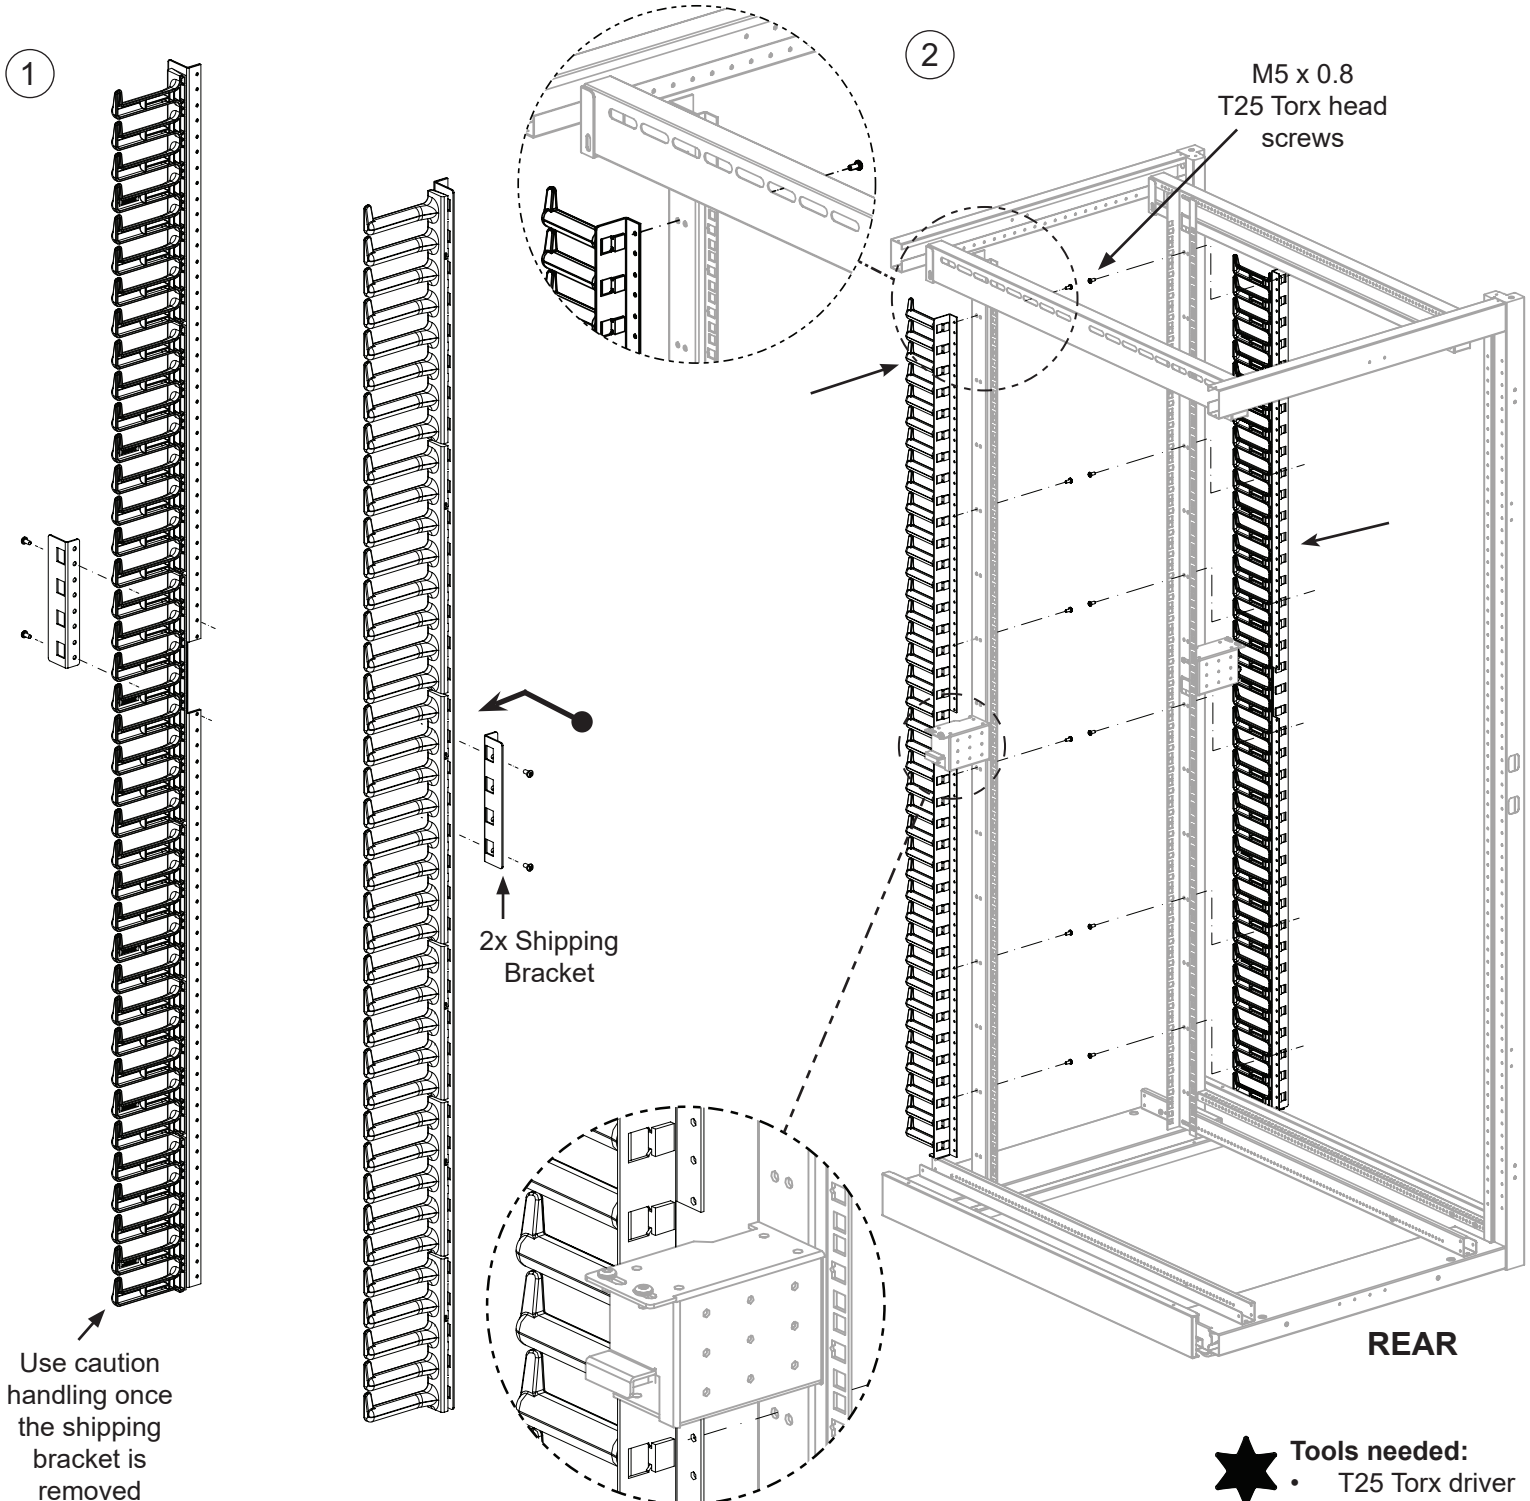



★ **Tools needed:**

- T25 Torx driver

Placement

- Locate Fingers so the distance between fingers is centered in RU spacing.
- If applying the Finger Bracket Kit to the rear E-Rails follow the same Installation process on the rear E-Rails.

Position Finger opening over center of RU space
(Noted by the notch in center Cage Nut opening)

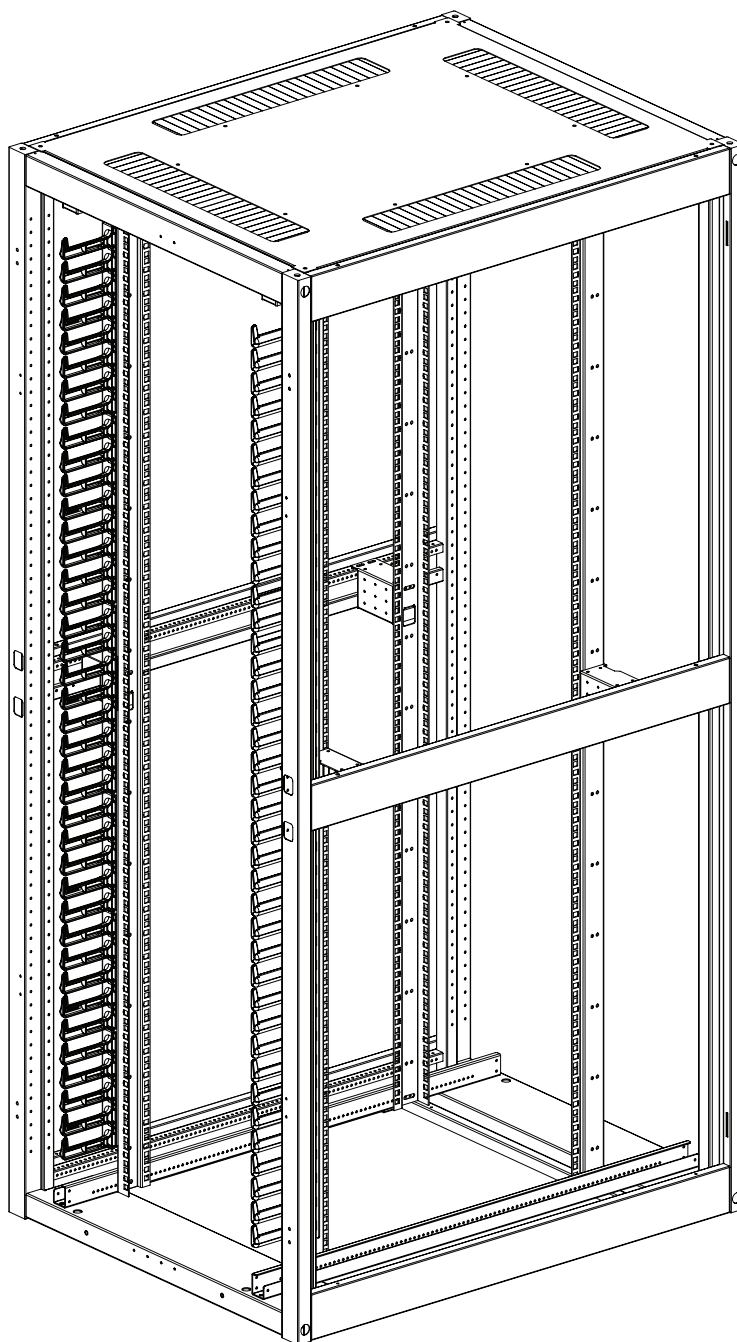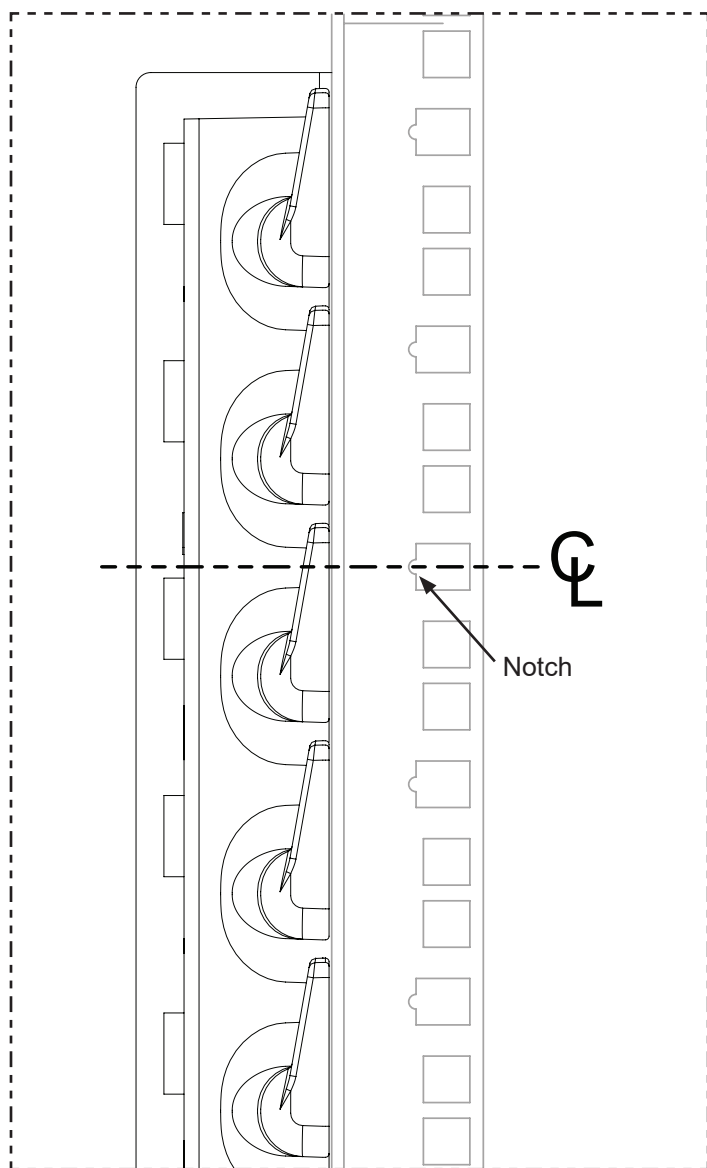

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT

www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654