

INSTRUCTIONS CM392C


© Panduit Corp. 2009

PART NUMBERS

VERTICAL CABLE MANAGEMENT		Mounting Kits	Racks				Doors
Front/Rear	Front Only	NRVCB	CMR19X47	CMR19X84	CMR23X84	CMR19X84NU	NRD6
			CMR19X84S	3" Deep R2P Series of 2 Post Racks			
NRV6	NRVF6	NRVCB or WMPVSMK	NFR84	CMR4P84	CMR4P84CN	CMR4P84NU	NRD10
NRV10	NRVF10		CMR4P84D23	CMR4P84D23CN	CMR4P84D23NU	CMR4P84D23CNNU	NRD12
NRV12	NRVF12		R4P	R4PCN	R4P23	R4P23CN	
			R4P36	R4P36CN	R4P42	R4P42CN	


Location Guide for Center Mounting (CMR19X84 with NRVCB)

Dimensions in (...) parenthesis are for 10" Vertical Cable Management
Dimensions in [...] brackets are for 12" Vertical Cable Management

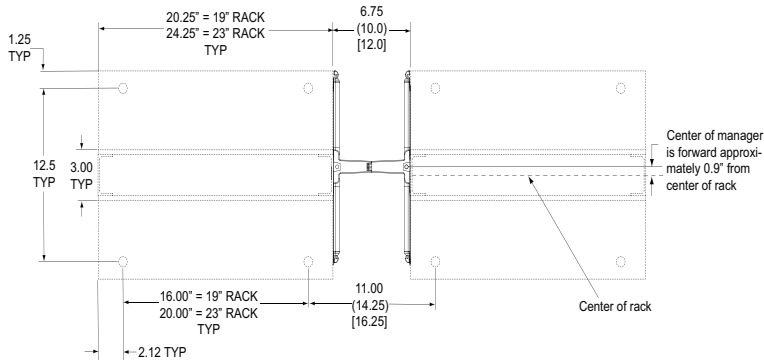


Bracket Installation


Note:
When installing between two racks use part number **NRVCB** for the additional brackets required. Bracket is keyed to be installed in the correct orientation.

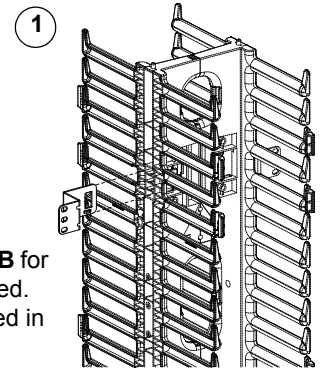

Standard Rack Installation

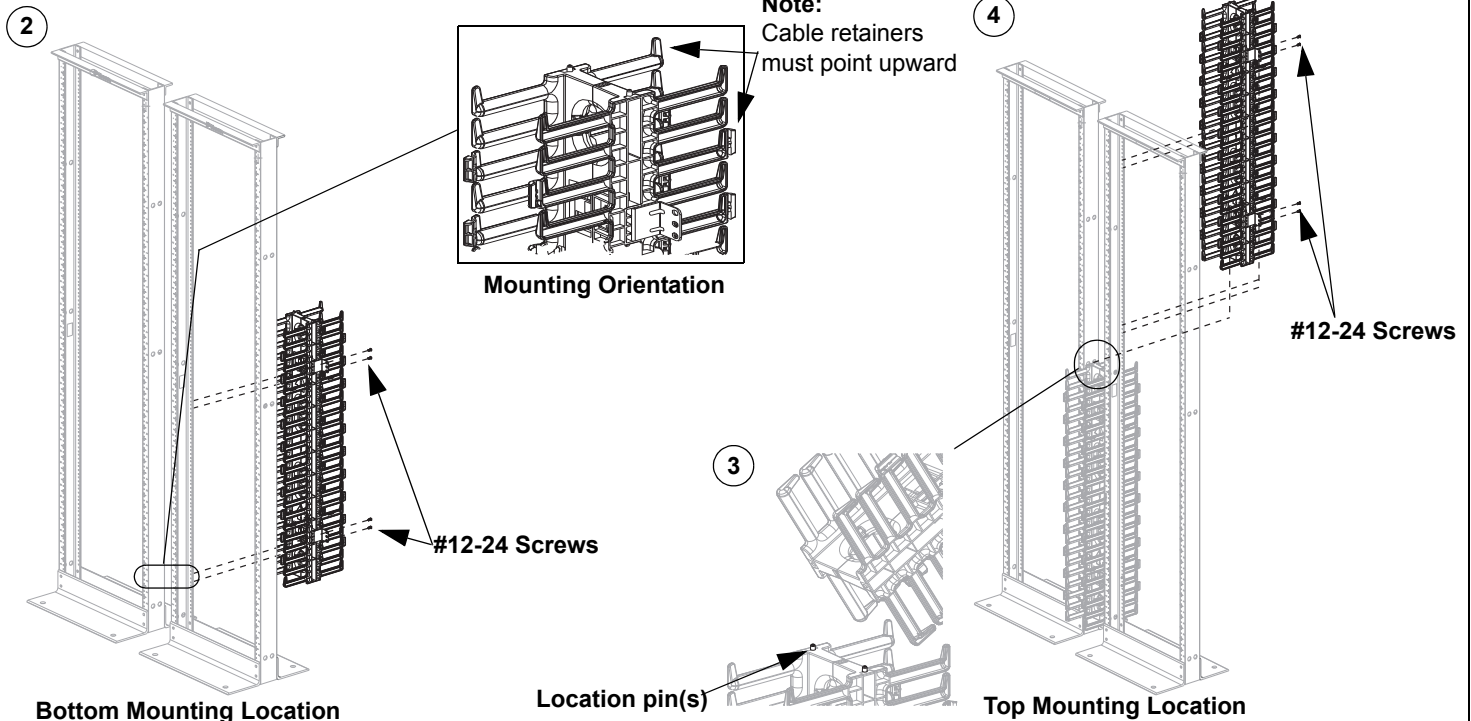


4-Post Rack Installation using Brackets. Note: Step 1 is the same as for the Standard Rack.

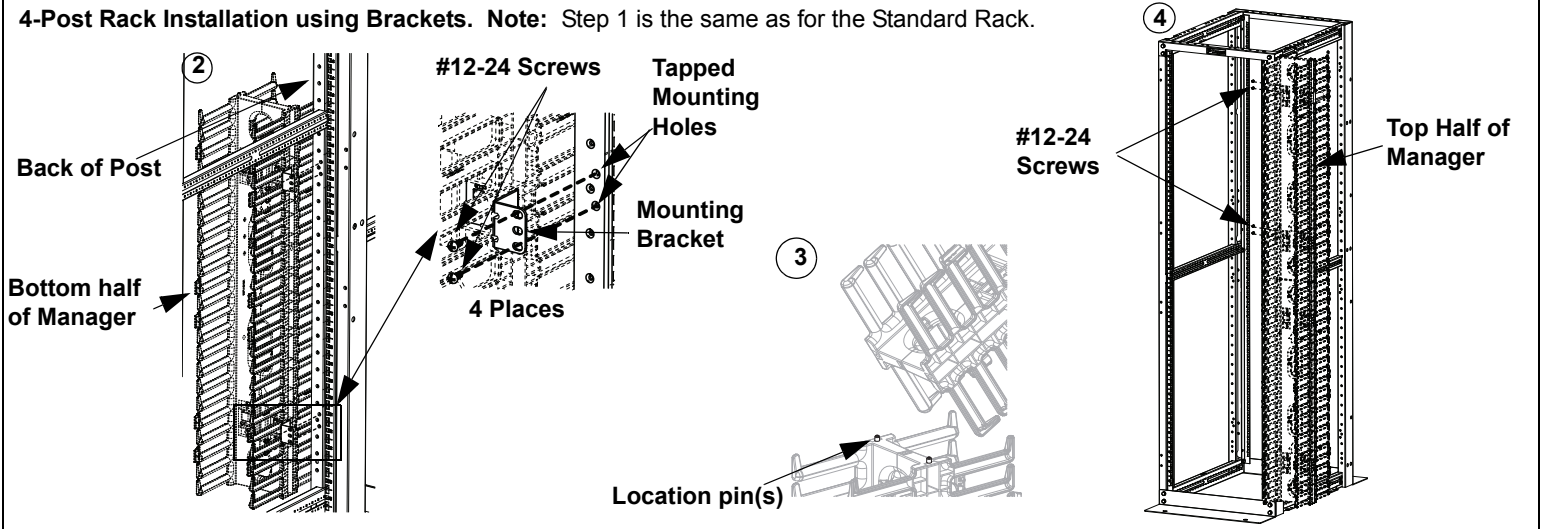

Installation Instructions NFR84 and 4-Post Racks using WMPVSMK side mounting kit


Note: Mount the racks to the floor.

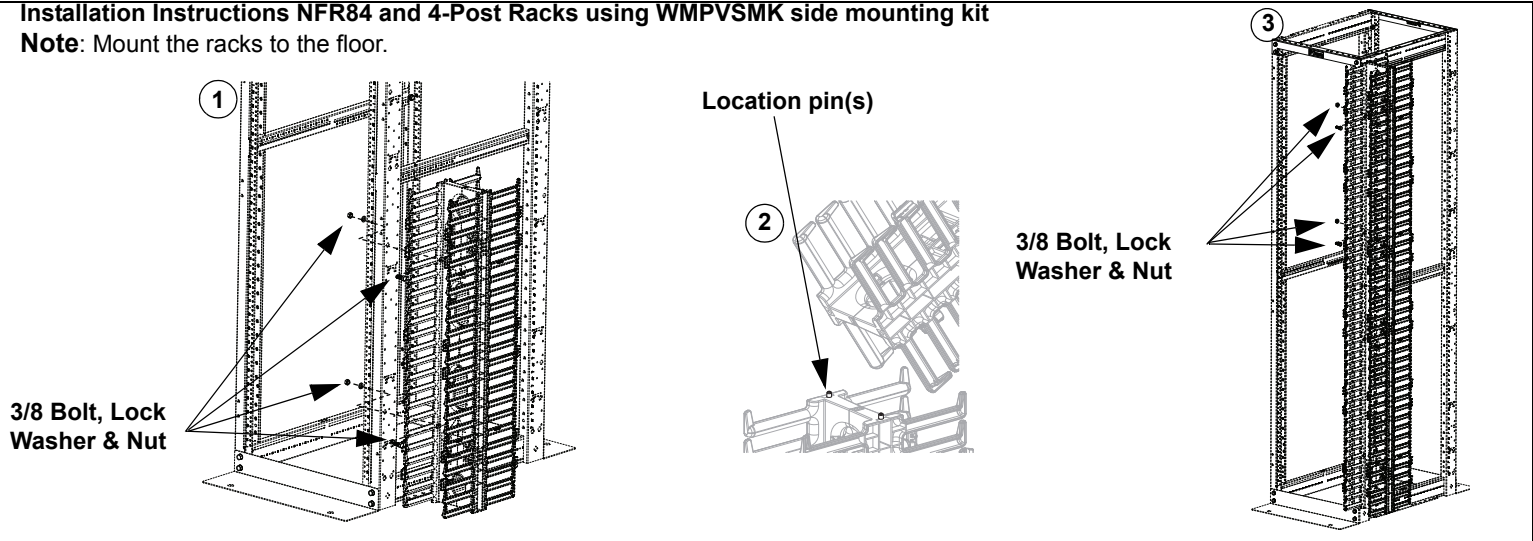

Opening and Closing Cover

Door Latches


Door Finger Tabs

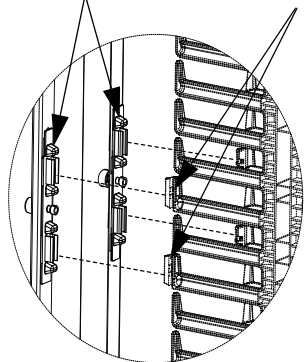

Installation

Line up finger tabs with door latches. Then squeeze door and fingers together to engage (4 places).

To open, grasp back of door and push top button with thumb. Repeat with bottom button.

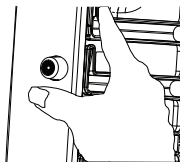

To close, grasp cable retainers and door until latched


Top Latch Buttons

Bottom Latch Buttons

Removal

To remove door, press bottom latches first, then press top latch buttons while holding door

Wire Retainer Installation (WR5E)

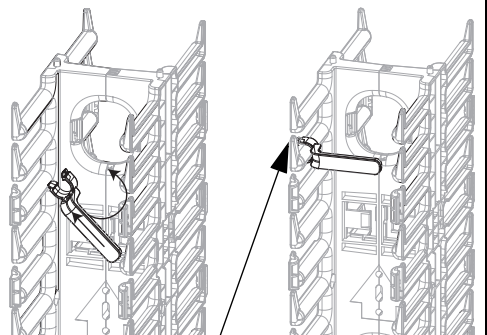

Use thumb to release wire retainer for removal

For instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT®

www.panduit.com

E-mail:
cs@panduit.com
Fax:
(708)444-6448