

Industrial Control Transformers

SBEDIN (For DIN Mounted Protection Devices) Installation Manual


S B E D I N



P/N: 272-38176-06
REV. 02 (05/16)
©2016 Appleton Grp LLC d/b/a Appleton Group
All rights reserved. Specifications
subject to change without notice.

Caution

*Make sure all power is off
before any wiring is started.*

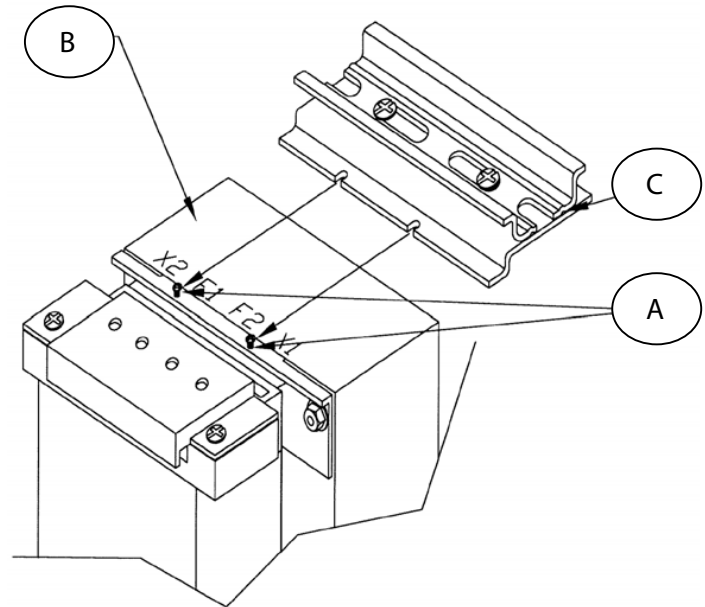

This kit includes parts that allow Hevi-Duty Control Transformers to use DIN mount protection devices for CE applications

Assembly Instructions:

1. Loosen the two thread forming screws (A) on the transformer (B). Either side of the transformer is ok.
2. Slide the DIN assembly (C) under the heads of the two loosened thread forming screws and tighten the screws.

Connect the protection devices per the manufacturer's directions. The "H" side of the transformer is the input side and the "X" side is the output side.

Included with the SBEDIN kit:

- Metal DIN Rail Assembly
- Instruction Sheet