


IMPORTANT

INSTALLATION INSTRUCTIONS

1. Be sure all pipe connections are clean and free of debris.
2. Install the female threaded end of valve directly to the source of the vacuum. The male threaded end is to be open to atmosphere. **NO VALVE IS TO BE PLACED BETWEEN THE RELIEF VALVE AND THE VACUUM SOURCE.**

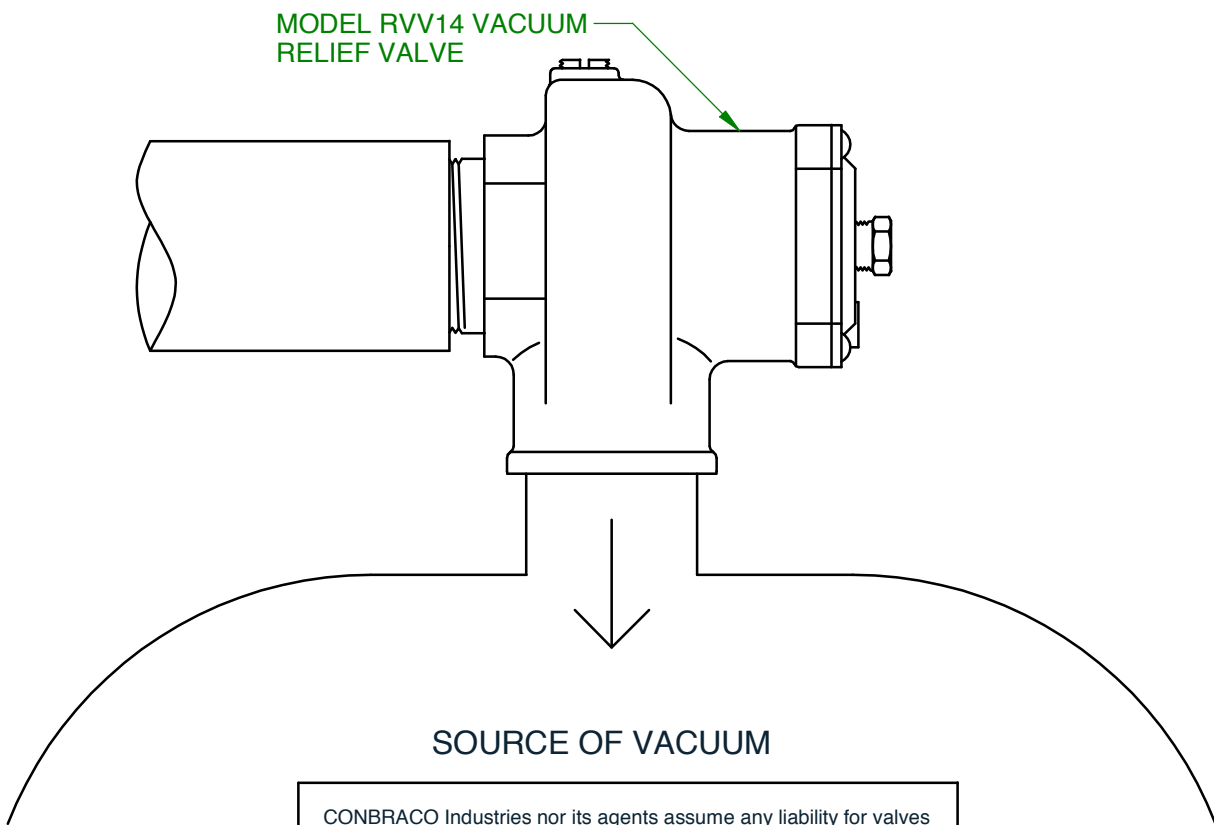

CONBRACO Industries nor its agents assume any liability for valves improperly installed or maintained.

WARNING! This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (California law requires that this warning be given to the customers in the State of California.)

For more information visit www.apollovalves.com



MANUFACTURED BY CONBRACO INDUSTRIES INC.
1418 S. PEARL ST.
PAGELAND, SC 29728