




RECOMMENDED TIGHTENING TORQUES FOR
COPPER LOCKTITE® LUGS & TAPS
FOR COPPER CABLES ONLY.



- 1. Strip insulation to barrel length.
CAUTION: Do not nick conductors.
- 2. Insert wire into connector and tighten to torque values shown in table for the various LOCKTITE® Lug ranges.

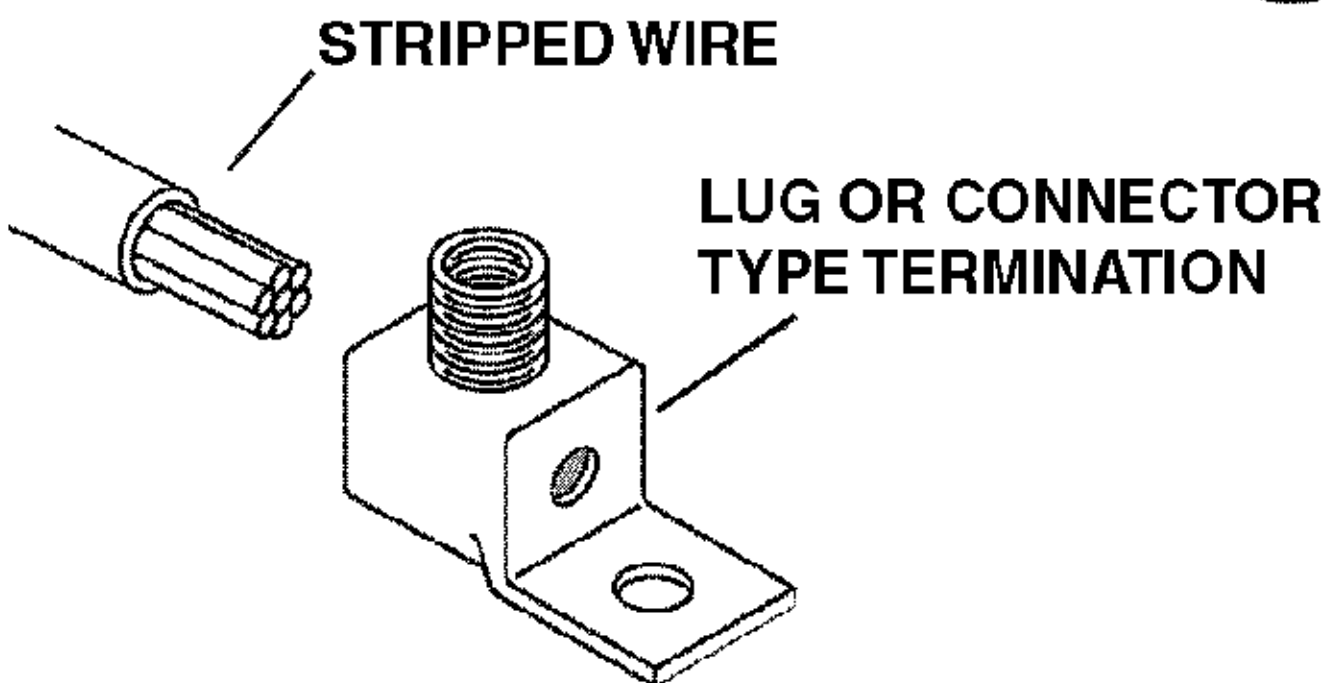

NOTE: Connector is intended to secure only single conductors within the specified wire ranges.

T&B RECOMMENDED TIGHTEN TORQUE		
SIZE OF CONDUCTOR RANGES	WRENCH TORQUE INCH-LBS.	SCREW DRIVER TORQUE INCH-LBS.
14 TO 8	—	20
8 TO 4	—	35
4 TO 1	125	—
1 TO 2/0	150	—
2/0 TO 4/0	200	—
4/0 TO 300	250	—
300 TO 500	300	—
500 TO 750	300	—
750 TO 1000	400	—

WARRANTY: Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for its intended use. Thomas & Betts manufactures its goods and tools in a manner to be free of defects. Should any defect occur in its goods within two (2) years (or tools within time stated on warranty card) of date of purchase, Thomas & Betts, upon prompt notification, will at its option, exchange or repair the goods or tools or refund the purchase price. Proof of purchase required.

Limitations and Exclusions: **THIS WARRANTY IS IN LIEU OF ALL OTHER REPRESENTATIONS AND EXPRESSED AND IMPLIED WARRANTIES (INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE), AND UNDER NO CIRCUMSTANCES SHALL THOMAS & BETTS BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES OF ANY KIND.**

Thomas & Betts Corporation
Memphis, TN
In Canada, Thomas & Betts Ltd. Iberville, P.Q.
Website: www.TNB.com