




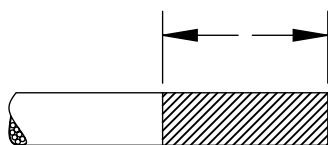

1

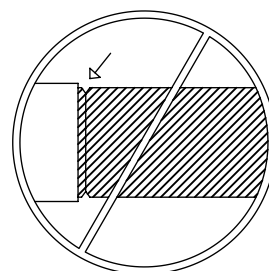

2






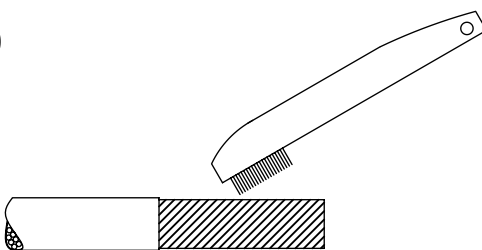


3


SBCx

SBCxL

SBCTx

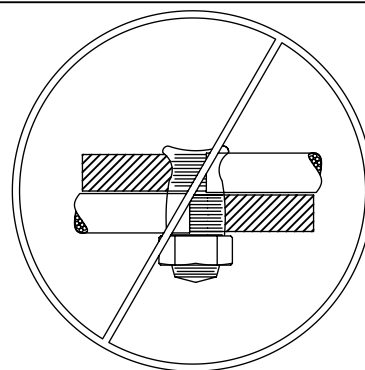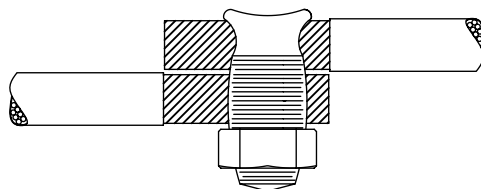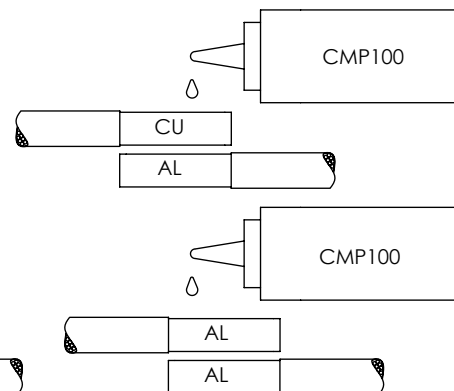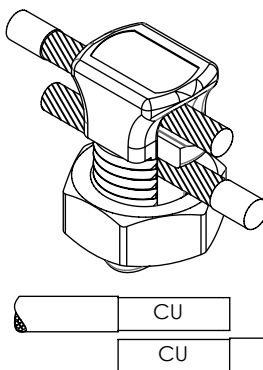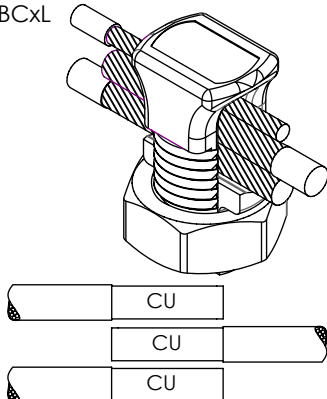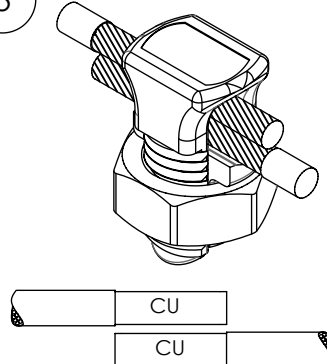

4

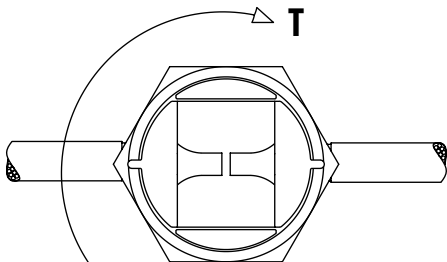

BOTTOM VIEW SHOWN

PART NUMBERS

SBC8
SBC6S
△ SBC6SL
SBC4S
△ SBC4SL
SBC3
SBC2
SBC1/0
SBC2/0

SBC3/0
SBC250
SBC350
SBC500
SBCT8
SBCT6
SBCT3
SBCT2
SBCT1/0

SBCT2/0
SBCT3/0
SBCT250
SBCT350
SBCT500

NOTE:
SBCT8 THRU SBCT2/0 ARE
UL LISTED FOR USE WITH BOTH
ALUMINUM AND COPPER CONDUCTORS

NOTE:
SBCT3/0 AND LARGER ARE
UL LISTED FOR USE WITH COPPER CONDUCTORS
THEY CAN STILL BE USED ON ALUMINUM CONDUCTORS,
HOWEVER THEY ARE NOTE UL LISTED FOR THAT APPLICATION

DB
RATED



DB
RATED

PART NUMBERS

◇ SBC8L
◇ SBC2L
SBC750
SBC1000

SBCT750*
SBCT1000*

NOTE:
*CAN BE USED ON ALUMINUM CONDUCTOR,
HOWEVER THEY ARE NOT UL LISTED FOR
THAT APPLICATION

NOTE:
OVER 500 kcmil NOT UL OR CSA
LISTED FOR GROUNDING OR BONDING

PART NUMBER	COPPER CONDUCTOR								REQUIRED TORQUE (IN-LB)
	MAXIMUM RUN TO MAXIMUM TAP		MINIMUM RUN TO MINIMUM TAP		MAXIMUM RUN TO MINIMUM TAP		MINIMUM EQUAL		
	RUN	TAP	RUN	TAP	RUN	TAP	RUN	TAP	
SBC8	8 STR 8 SOL	8 STR 8 SOL	10 STR 10 SOL	16 STR 16 SOL	8 STR 8 SOL	16 STR 16 SOL	10 STR 10 SOL	10 STR 10 SOL	80
SBCT8	6 SOL	6 SOL	8 STR 8 SOL	14 STR 14 SOL	6 STR 6 SOL	14 STR 14 SOL	8 STR 8 SOL	8 STR 8 SOL	165
SBC6S	6 SOL	6 SOL	8 STR 8 SOL	16 STR 16 SOL	6 SOL	16 SOL	8 STR 8 SOL	8 STR 8 SOL	165
SBC6SL									
SBCT6	6 STR 6 SOL	6 STR 6 SOL	8 STR 8 SOL	10 STR 10 SOL	6 STR 6 SOL	10 STR 10 SOL	8 STR 8 SOL	8 STR 8 SOL	165
SBC4S	6 STR 6 SOL	6 STR 6 SOL	8 STR 8 SOL	14 STR 14 SOL	6 STR 6 SOL	14 STR 14 SOL	8 STR 8 SOL	8 STR 8 SOL	165
SBC4SL									
SBC3	4 STR 4 SOL	4 STR 4 SOL	6 STR 6 SOL	14 STR 14 SOL	4 STR 4 SOL	14 STR 14 SOL	8 STR 8 SOL	8 STR 8 SOL	275
SBCT3	4 STR 4 SOL	4 STR 4 SOL	6 STR 6 SOL	10 STR 10 SOL	4 STR 4 SOL	10 STR 10 SOL	8 STR 8 SOL	8 STR 8 SOL	275
SBC2	2 STR 2 SOL	2 STR 2 SOL	6 STR 6 SOL	14 STR 14 SOL	2 STR 2 SOL	14 STR 14 SOL	6 STR 6 SOL	6 STR 6 SOL	275
SBCT2	2 STR 2 SOL	2 STR 2 SOL	6 STR 6 SOL	14 STR 14 SOL	2 STR 2 SOL	14 STR 14 SOL	6 STR 6 SOL	6 STR 6 SOL	275
SBC1/0	1/0 STR 1/0 SOL	1/0 STR 1/0 SOL	2 STR 2 SOL	14 STR 14 SOL	1/0 STR 1/0 SOL	14 STR 14 SOL	4 STR 4 SOL	4 STR 4 SOL	385
SBCT1/0	1/0 STR 1/0 SOL	1/0 STR 1/0 SOL	2 STR 2 SOL	10 STR 10 SOL	1/0 STR 1/0 SOL	10 STR 10 SOL	4 STR 4 SOL	4 STR 4 SOL	385
SBC2/0	2/0 STR 2/0 SOL	2/0 STR 2/0 SOL	1 STR 1 SOL	14 STR 14 SOL	2/0 STR 2/0 SOL	14 STR 14 SOL	2 STR 2 SOL	2 STR 2 SOL	385
SBCT2/0	2/0 STR 2/0 SOL	2/0 STR 2/0 SOL	1 STR 1 SOL	8 STR 8 SOL	2/0 STR 2/0 SOL	8 STR 8 SOL	2 STR 2 SOL	2 STR 2 SOL	385
SBC3/0	3/0 STR 3/0 SOL	3/0 STR 3/0 SOL	2/0 STR	8 STR	3/0 STR 3/0 SOL	8 STR 8 SOL	1 STR 1 SOL	1 STR 1 SOL	500
SBCT3/0	3/0 STR 3/0 SOL	3/0 STR 3/0 SOL	2/0 STR 2/0 SOL	8 STR 8 SOL	3/0 STR 3/0 SOL	8 STR 8 SOL	1 STR 1 SOL	1 STR 1 SOL	500
SBC250	250 STR	250 STR	4/0 STR 4/0 SOL	8 STR 8 SOL	250 STR	8 STR	1 STR 1 SOL	1 STR 1 SOL	650
SBCT250									
SBC350	350 STR	350 STR	350 STR 350 SOL	1/0 STR 1/0 SOL	350 STR	1/0 STR	2/0 STR 2/0 SOL	2/0 STR 2/0 SOL	650
SBCT350	350 STR	350 STR	350 STR	1/0 STR	350 STR	1/0 STR	2/0 STR 2/0 SOL	2/0 STR 2/0 SOL	650
SBC500	500 STR	500 STR	500 STR 500 SOL	2/0 STR 2/0 SOL	500 STR	2/0 STR	300 STR	300 STR	825
SBCT500	500 STR	500 STR	400 STR	2/0 STR	500 STR	2/0 STR	300 STR	300 STR	825

PART NUMBER	COPPER CONDUCTORS			MAX CONDUCTOR		REQUIRED TORQUE (IN-LB)
	RANGE OF EQUAL RUN & TAP		MIN TAP WITH ONE MAX MAIN	COPPERWELD		
				STR.	TYPE A	
SBC8L	16 STR	8 STR	16 STR	---	---	80
SBC2L	6 SOL	2 STR	14 STR	3 No. 7	3A	275
SBC750	350 kcmil	750 kcmil	8 SOL	19 No. 5	---	1000
SBCT750	250 kcmil	750 kcmil	2/0 STR	19 No. 5	---	1000
SBC1000	500 kcmil	1000 kcmil	8 SOL	---	---	1100
SBCT1000	350 kcmil	1000 kcmil	4/0 STR	---	---	1100

For Instructions in Local Languages
and Technical Support:

PANDUIT

E-mail:
cs@panduit.com

www.panduit.com/resources/install_maintain.asp

www.panduit.com

Fax:
708-444-6993