





1406758015503

Assemblage et encombrements
Montage und Abmessungen



Assembly and mounting density
Istruzioni di montaggio, dimensioni d'ingombro

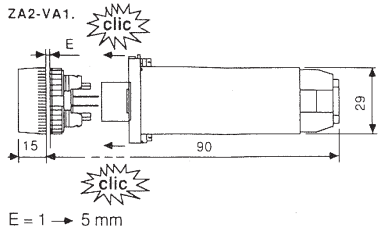


Changement d'une valeur affichée
Änderung des angezeigten Wertes
Loading a stored value
Variazione del dato visualizzato

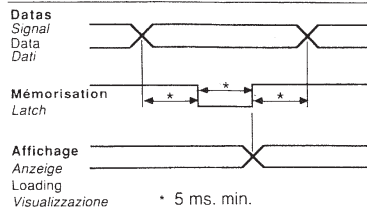

Démontage
Demontage
De-mounting
Smontaggio

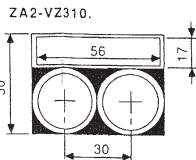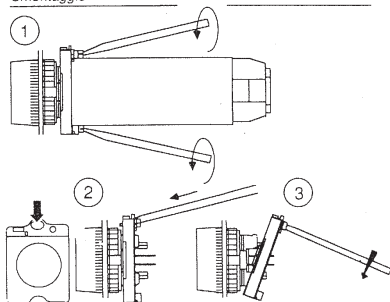


Perçage du support (Cenelec EN 50.007)
Bohrungen der Montageplatte
Panel drilling
Foratura del pannello

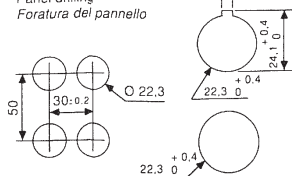


Schémas de raccordement
Anschlusspläne
Connection details
Schema dei collegamenti

ZA2-VA11(décimal + BCD)

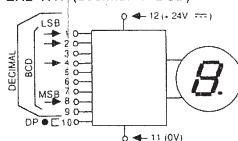

DP = Point décimal
Decimal point
Dezimal Punkt
Punto decimale

ZA2-VA12(BCD + Latch)

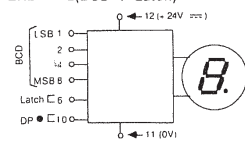

Etat 0 = -30V (0 mA) ... + 5V (1.4 mA)
Etat 1 = +13V (4 mA) ... + 30V (9.5 mA)

Tables d'entrées
Ansteuerung
Input tables
Tabella degli ingressi

Décimal
decimal
Decimal
Decimale

1	2	3	4	5	6	7	8	9	Anzeige Loading Visualizzazione Affichage
0	0	0	0	0	0	0	0	0	0
1	0	0	0	0	0	0	0	0	1
0	1	0	0	0	0	0	0	0	2
0	0	1	0	0	0	0	0	0	3
0	0	0	1	0	0	0	0	0	4
0	0	0	0	1	0	0	0	0	5
0	0	0	0	0	1	0	0	0	6
0	0	0	0	0	0	1	0	0	7
0	0	0	0	0	0	0	1	0	8
0	0	0	0	0	0	0	0	1	9

BCD

8	4	2	1	Anzeige Loading Visualizzazione Affichage	8	4	2	1	Anzeige Loading Visualizzazione Affichage
0	0	0	0	0	1	0	0	1	9
0	0	0	1	1	0	1	0	1	A
0	0	1	0	2	1	0	1	1	B
0	0	1	1	3	1	1	0	0	C
0	1	0	0	4	1	1	0	1	D
0	1	0	1	5	1	1	1	0	E
0	1	1	0	6	1	1	1	1	F
0	1	1	1	7					
1	0	0	0	8					