3RA2120-4CD27-0AK6

## **Data sheet**



FUSELESS LOAD FEEDER DIRECT START, AC 400V, SZ. S0, 16...22A, AC 110/120V 50/60HZ SCREW TERMINAL FOR BUSBAR SYSTEMS 60MM TYPE OF ASSIGNMENT 2,IQ = 150KA (ALSO TYPE OF ASSIGNMENT 1) 1NO+1NC (CONTACTOR)

product brand name	SIRIUS
product designation	non-fused load feeders 3RA2
design of the product	direct starter
manufacturer's article number	
of the supplied contactor	<u>3RT2027-1AK60</u>
of the supplied circuit-breakers	3RV2021-4CA10
<ul> <li>of the supplied busbar adapter</li> </ul>	<u>8US1251-5NT10</u>
of the supplied link module	3RA2921-1AA00
General technical data	
size of the circuit-breaker	S0
size of load feeder	S0
product extension auxiliary switch	Yes
insulation voltage with degree of pollution 3 at AC rated value	690 V
degree of pollution	3
surge voltage resistance rated value	6 kV
shock resistance according to IEC 60068-2-27	6g / 11 ms
mechanical service life (switching cycles) of contactor typical	10 000 000
type of assignment	2
Substance Prohibitance (Date)	05/01/2012
Ambient conditions	
ambient temperature	
during operation	-20 +60 °C
during storage	-50 +80 °C
during transport	-50 +80 °C
Main circuit	
number of poles for main current circuit	3
design of the switching contact	electromechanical
adjustable current response value current of the current-dependent overload release	17 22 A
operating voltage	
rated value	690 V
at AC-3 rated value maximum	690 V
operating frequency rated value	50 60 Hz
operational current at AC-3 at 400 V rated value	22 A
operating power at AC-3	
at 400 V rated value	11 000 W
at 500 V rated value	11 000 W
at 690 V rated value	18 500 W

Control circuit/ Control	
control supply voltage at AC	
at 50 Hz rated value	110 V
at 60 Hz rated value	120 V
apparent holding power of magnet coil at AC	9.8 VA
Protective and monitoring functions	
trip class	CLASS 10
design of the overload release	thermal (bimetallic)
response value current of instantaneous short-circuit trip	286 A
unit	
UL/CSA ratings	
full-load current (FLA) for 3-phase AC motor	
• at 480 V rated value	22 A
at 600 V rated value	21.9 A
yielded mechanical performance [hp]	
<ul> <li>for single-phase AC motor</li> </ul>	
— at 110/120 V rated value	1.5 hp
— at 230 V rated value	3 hp
• for 3-phase AC motor	
— at 200/208 V rated value	5 hp
— at 220/230 V rated value	7.5 hp
— at 460/480 V rated value	15 hp
— at 575/600 V rated value	20 hp
Short-circuit protection	V
product function short circuit protection	Yes
design of the short-circuit trip	magnetic
conditional short-circuit current (Iq)	2 000 A
at 400 V according to IEC 60947-4-1 rated value     at 400 V according to IEC 60947-4-1 rated value	2 000 A
<ul> <li>at 400 V according to IEC 60947-4-1 rated value</li> <li>at 500 V according to IEC 60947-4-1 rated value</li> </ul>	153 000 A 5 000 A
■ at 500 v according to 1=0 00947-4-1 Tated value	3 000 A
Installation/ mounting/ dimensions	
Installation/ mounting/ dimensions	vertical
mounting position	vertical for snapping onto 60 mm husbar systems
mounting position fastening method	for snapping onto 60 mm busbar systems
mounting position fastening method height	for snapping onto 60 mm busbar systems 260 mm
mounting position fastening method	for snapping onto 60 mm busbar systems
mounting position fastening method height width	for snapping onto 60 mm busbar systems 260 mm 45 mm
mounting position fastening method height width depth	for snapping onto 60 mm busbar systems 260 mm 45 mm
mounting position fastening method height width depth required spacing	for snapping onto 60 mm busbar systems 260 mm 45 mm
mounting position fastening method height width depth required spacing • for grounded parts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm
mounting position fastening method height width depth required spacing  • for grounded parts — forwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm
mounting position fastening method height width depth required spacing  • for grounded parts — forwards — backwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm
mounting position fastening method height width depth required spacing  • for grounded parts — forwards — backwards — upwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm
mounting position fastening method height width depth required spacing  • for grounded parts — forwards — backwards — upwards — at the side	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm
mounting position  fastening method  height  width  depth  required spacing  • for grounded parts  — forwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm
mounting position fastening method height width depth required spacing  • for grounded parts — forwards — backwards — upwards — at the side — downwards  • for live parts — forwards — backwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — upwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 10 mm 10 mm 10 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — downwards • for lowerds — downwards — backwards — backwards — backwards — upwards — downwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 10 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards — torwards — torwards — backwards — backwards — backwards — upwards — at the side	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 10 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards — to parts — forwards — backwards — backwards — at the side Connections/ Terminals	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 10 mm 9 mm 10 mm 9 mm 9 mm 9 mm 9 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — a the side — downwards • for live parts — forwards — backwards — upwards — at the side Connections/ Terminals  type of electrical connection for main current circuit	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 10 mm 9 mm 10 mm 9 mm 9 mm 9 mm 9 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side Connections/ Terminals  type of electrical connection for main current circuit type of connectable conductor cross-sections • for main contacts stranded • at AWG cables for main contacts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 20 mm 30 mm 30 mm 10 mm 20 mm 30 mm 30 mm 30 mm 30 mm 10 mm 30 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — a the side Connections/ Terminals  type of electrical connection for main current circuit type of connectable conductor cross-sections • for main contacts stranded • at AWG cables for main contacts connectable conductor cross-section for main contacts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 50 mm 30 mm 10 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards — a the side — downwards  • for live parts — forwards — backwards — upwards — at the side  Connections/ Terminals  type of electrical connection for main current circuit  type of connectable conductor cross-sections • for main contacts stranded • at AWG cables for main contacts finely stranded with core end processing	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 20 mm 30 mm 30 mm 10 mm 20 mm 30 mm 30 mm 30 mm 30 mm 10 mm 30 mm
mounting position fastening method height width depth required spacing  • for grounded parts — forwards — backwards — upwards — at the side — downwards  • for live parts — forwards — backwards — upwards — at the side — downwards — to hackwards — upwards — backwards — upwards — at the side  Connections/ Terminals  type of electrical connection for main current circuit type of connectable conductor cross-sections • for main contacts stranded • at AWG cables for main contacts connectable conductor cross-section for main contacts finely stranded with core end processing  Safety related data	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 0 mm 30 mm 9 mm 10 mm 5 mm 10 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — a the side — downwards — to backwards — backwards — upwards — at the side  Connections/ Terminals  type of electrical connection for main current circuit  type of connectable conductor cross-sections • for main contacts stranded • at AWG cables for main contacts connectable conductor cross-section for main contacts finely stranded with core end processing  Safety related data  B10 value with high demand rate according to SN 31920	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 0 mm 30 mm 9 mm 10 mm 50 mm 10 mm
mounting position fastening method height width depth required spacing  • for grounded parts — forwards — backwards — upwards — at the side — downwards  • for live parts — forwards — backwards — upwards — at the side — downwards — to hackwards — upwards — backwards — upwards — at the side  Connections/ Terminals  type of electrical connection for main current circuit type of connectable conductor cross-sections • for main contacts stranded • at AWG cables for main contacts connectable conductor cross-section for main contacts finely stranded with core end processing  Safety related data	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm  10 mm 0 mm 30 mm 9 mm 10 mm 0 mm 30 mm 9 mm 10 mm 5 mm 10 mm

protection class IP on the front according to IEC 60529

IP20

touch protection on the front according to IEC 60529

finger-safe, for vertical contact from the front

Certificates/ approvals

**General Product Approval** 

For use in hazardous locations Declaration of Conformity



Confirmation



EAC





Declaration of Conformity

**Test Certificates** 

Marine / Shipping



Type Test Certificates/Test Report

Special Test Certificate







Marine / Shipping

other

Railway









Confirmation Vibration and Shock

## Further information

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RA2120-4CD27-0AK6

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RA2120-4CD27-0AK6

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)

https://support.industry.siemens.com/cs/ww/en/ps/3RA2120-4CD27-0AK6

Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax\_de.aspx?mlfb=3RA2120-4CD27-0AK6&lang=en


Characteristic: Tripping characteristics, I2t, Let-through current

https://support.industry.siemens.com/cs/ww/en/ps/3RA2120-4CD27-0AK6/char

Further characteristics (e.g. electrical endurance, switching frequency)

http://www.automation.siemens.com/bilddb/index.aspx?view=Search&mlfb=3RA2120-4CD27-0AK6&objecttype=14&gridview=view1

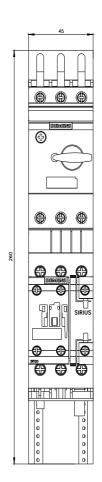

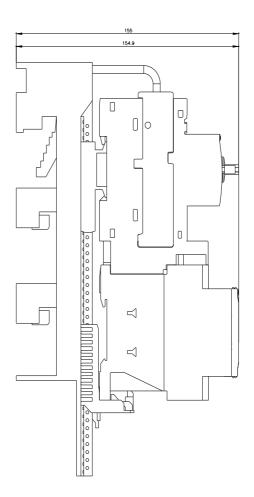

last modified: 12/15/2020 🖸