TURN OFF "FIT TO PAGE" WHEN PRINTING

PANDUIT™

SC OPTI-CRIMP™
Fiber Optic Connector
Multimode Stripping Template

Read installation instructions thoroughly <u>before</u> proceeding with termination

900μm Buffered

900μm Buffer
Insertion Mark
Bare Fiber

Insertion Mark .53"(13.5mm)

Buffer Removal 1.18"(30mm)

After Cleaving .39"(10mm)
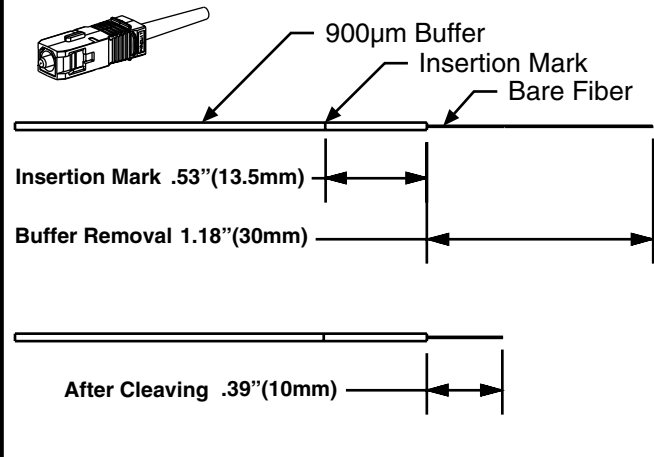
REFER TO OTHER SIDE FOR 3mm JACKETED

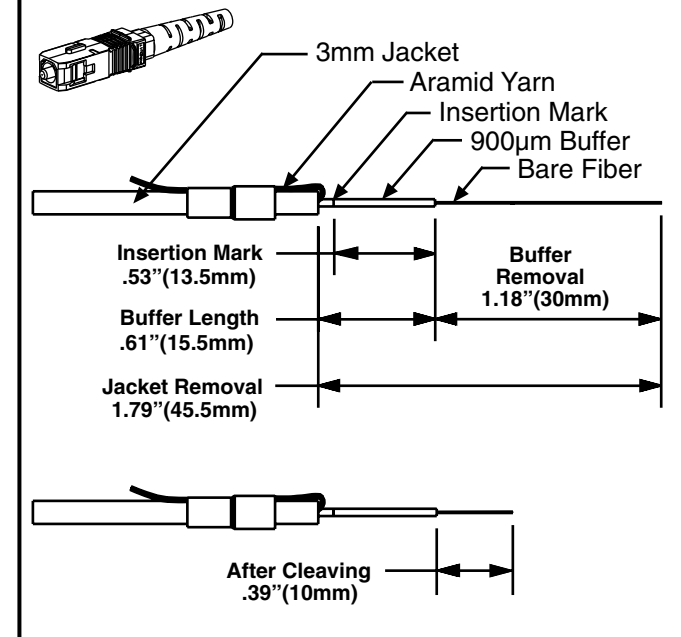Stripping Template   PN268A

SC OPTI-CRIMP™ Connector
Stripping Template

Read installation instructions thoroughly <u>before</u> proceeding with termination

3mm Jacketed

3mm Jacket
Aramid Yarn
Insertion Mark
900μm Buffer
Bare Fiber

Insertion Mark
.53"(13.5mm)

Buffer Length
.61"(15.5mm)

Jacket Removal
1.79"(45.5mm)

Buffer
Removal
1.18"(30mm)

After Cleaving
.39"(10mm)

REFER TO OTHER SIDE FOR 900μm BUFFERED