

Installation of KELLEMS® T-TYPE Pulling Grips

PATENTED


The following steps should be taken to assure proper assembly of Kellems T-TYPE Pulling Grips.

1. Using black, vinyl electrical tape, tape the end of the conductor or cable bundle two or three layers tightly wrapped covering the cable end approximately 1-1/2 inches. This prevents unlaying during assembly.
2. Assemble the grip so the cable end or cable bundle end is inserted up to the bend in the shoulder protectors (as shown below).
3. All slack should be ironed out of the mesh starting at the shoulder protectors and working back toward the tail.
4. Two Punch-Lok bands, each double wrapped, should be firmly attached approximately 1" and 2" from the grip's tail. Banding is required to insure maximum reliability and guard against accidental release.

Note: A Pengo Miller swivel is recommended for attachment to the grip's eye for release of torque during the pull.

Note: Do not run grips or swivel over bullwheels or winch drums while under tension.

Note: Do not use for pulling synthetic rope. For pulling synthetic rope, use Kellems Dua-pull Grips.

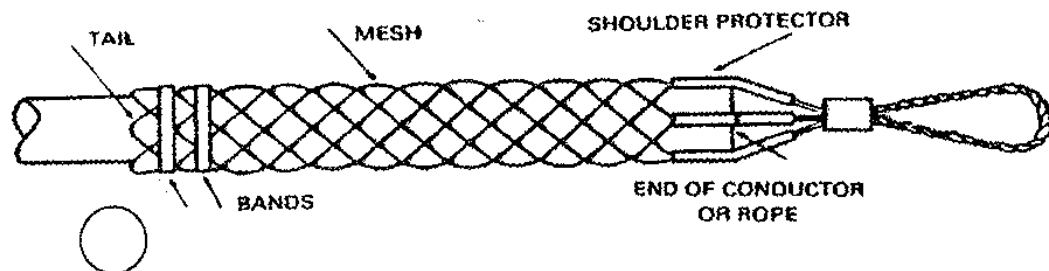

D5722401 Rev. 10/98

®Trademark of the Punch-Lok Co.

CATALOG NUMBER		CABLE DIAMETER RANGE INCHES	WORK LOAD* LBS., T-TYPE SHORT AND STANDARD	SUGGESTED SWIVEL CATALOG NUMBER	SUGGESTED PUNCH LOK BAND CATALOG NUMBER
T-TYPE FLEXIBLE EYE SHORT LGTH	T-TYPE FLEXIBLE EYE STANDARD LGTH				
033041082	N/A	.50-.61	900	20308001	20320050
033041083	N/A	.62-.74	1200	20308001	20320050
033041084	033041091	.75-.99	1360	20308002	20320052
033041085	033041092	1.00-1.49	1920	20308002	20320053
033041086	033041093	1.50-1.99	3280	20308003	20320053
033041087	033041094	2.00-2.49	3700	20308003	20320054
033041088	033041095	2.50-2.99	4900	20308003	20320054
033041089	033041096	3.00-3.49	4900	20308003	20320054
033041090	033041097	3.50-3.99	6200	20308004	20320054

* Rated working load is determined by using a factor of safety of 5 based on grip breaking strength.



Wiring Device-Kellems, Hubbell Incorporated (Delaware)
Milford, CT 06460-8897 (203) 882-4800

