



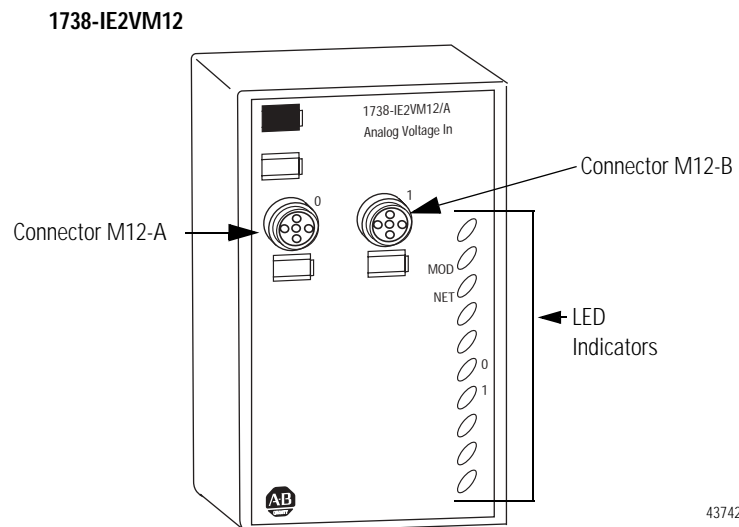

ArmorPoint 24V dc Analog Input Modules, Series A

Catalog Numbers 1738-IE2CM12, 1738-IE2VM12

The ArmorPoint I/O family consists of modular I/O modules. The sealed IP67 housing of these modules requires no enclosure. (Note that environmental requirements other than IP67 may require an additional appropriate housing.) I/O connectors are sealed M12 style. The mounting base ships with the module. The 1738-IE2CM12 and 1738-IE2VM12 modules are shown below.

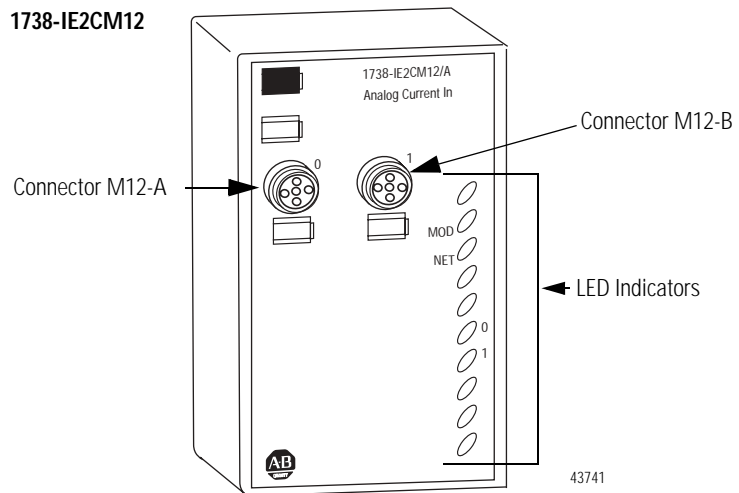

Important User Information

Solid state equipment has operational characteristics differing from those of electromechanical equipment. *Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls* (Publication SGI-1.1 available from your local Rockwell Automation sales office or online at <http://www.literature.rockwellautomation.com>) describes some important differences between solid state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.





In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc. is prohibited.

Throughout this manual we use notes to make you aware of safety considerations.

<p>WARNING</p> 	<p>Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.</p>
<p>IMPORTANT</p>	<p>Identifies information that is critical for successful application and understanding of the product.</p>
<p>ATTENTION</p> 	<p>Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you:</p> <ul style="list-style-type: none"> • identify a hazard • avoid a hazard • recognize the consequence
<p>SHOCK HAZARD</p> 	<p>Labels may be located on or inside the equipment to alert people that dangerous voltage may be present.</p>
<p>BURN HAZARD</p> 	<p>Labels may be located on or inside the equipment to alert people that surfaces may be dangerous temperatures.</p>

ATTENTION**Environment and Enclosure**

This equipment is intended for use in overvoltage Category II applications (as defined in IEC publication 60664-1), at altitudes up to 2000 meters without derating.

This equipment is considered Group 1, Class A industrial equipment according to IEC/CISPR Publication 11. Without appropriate precautions, there may be potential difficulties ensuring electromagnetic compatibility in other environments due to conducted as well as radiated disturbance.

This equipment is supplied as 'enclosed' equipment. It should not require additional system enclosure when used in locations consistent with the enclosure type ratings stated in the Specifications section of this publication. Subsequent sections of this publication may contain additional information regarding specific enclosure type ratings, beyond what this product provides, that are required to comply with certain product safety certifications.

NOTE: See NEMA Standards publication 250 and IEC publication 60529, as applicable, for explanations of the degrees of protection provided by different types of enclosure. Also, see the appropriate sections in this publication, as well as the Allen-Bradley publication 1770-4.1 (Industrial Automation Wiring and Grounding Guidelines), for additional installation requirements pertaining to this equipment.

ATTENTION



Preventing Electrostatic Discharge

This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:

- Touch a grounded object to discharge potential static.
- Wear an approved grounding wriststrap.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- If available, use a static-safe workstation.
- When not in use, store the equipment in appropriate static-safe packaging.

Mount the I/O Base


To mount the I/O base on a wall or panel, use the screw holes provided in the base.

IMPORTANT

The module must be mounted on a grounded metal mounting plate or other conductive surface.

Refer to the Drilling Dimensions illustration of the base with an adapter to help you mount the base.

Drilling dimensions

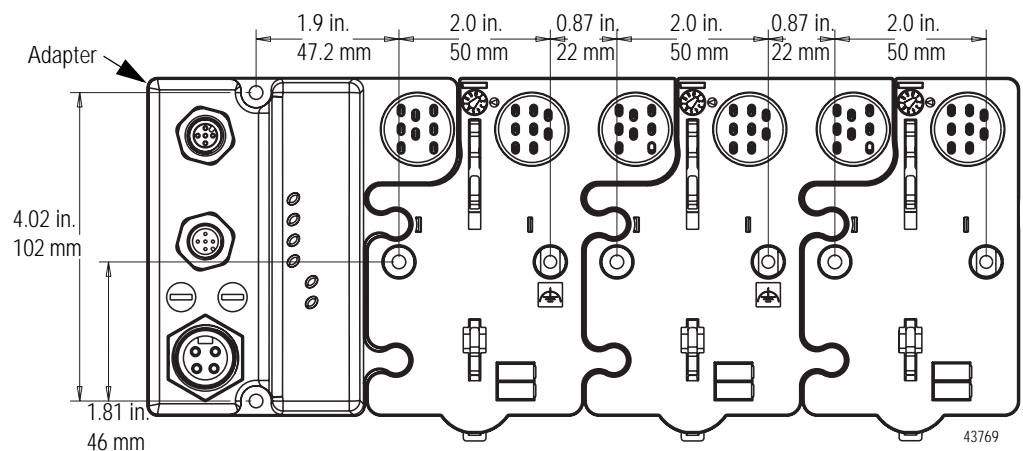


43769

Install the mounting base as follows:

1. Lay out the required points as shown above in the drilling dimension drawing.
2. Drill the necessary holes for #8 (M4) machine or self-tapping screws.
3. Mount the base using #8 (M4) screws.
4. Ground the system using the ground lug connection.

The ground lug connection is also a mounting hole.

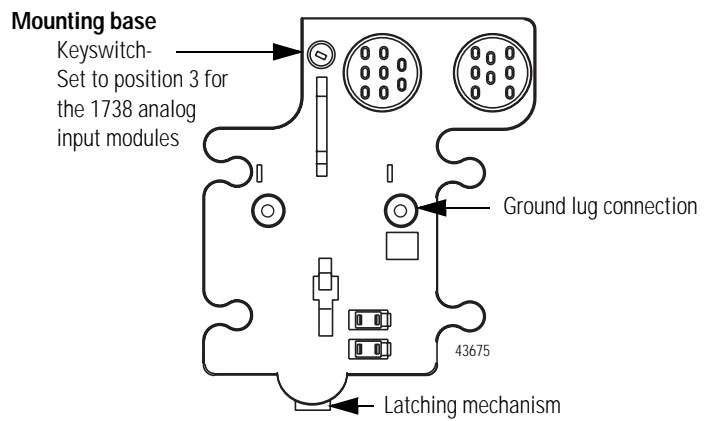


Install the ArmorPoint Analog Input Module

To install the ArmorPoint analog input module, proceed as follows.

1. Using a bladed screwdriver, rotate the keyswitch on the mounting base clockwise until the number 3 aligns with the notch in the base.
2. Position the module vertically above the mounting base.

The module bridges two bases.

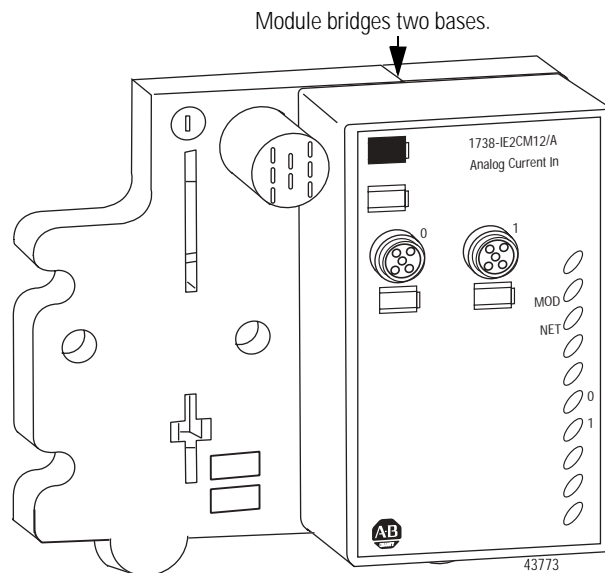

3. Push the module down until it engages the latching mechanism.

You will hear a clicking sound when the module is properly engaged.

The locking mechanism locks the module to the base.

Remove the Module From the Mounting Base

To remove the module from the mounting base:

1. Put a flat blade screwdriver into the slot of the orange latching mechanism.
2. Push the screwdriver toward the I/O module to disengage the latch.


The module lifts up off the base.

3. Pull the module off of the base.

Wire the Modules

Following are wiring instructions for the ArmorPoint analog input modules.

1738-IE2CM12 and 1738-IE2VM12

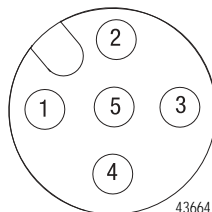

(view into connector)

Pin 1 - 24V dc

Pin 2 - Input 0 (M12-A)

Input 1 (M12-B)

Pin 3 - Common

Pin 4 - Common

Pin 5 - No Connect

IMPORTANT

Analog modules have earth grounded metal rings. This should be considered when choosing shielded cables and grounding techniques.

ATTENTION



Make sure all connectors and caps are securely tightened to properly seal the connections against leaks and maintain IP67 requirements.

Communicate with Your Module

I/O messages are sent to (consumed) and received from (produced) the ArmorPoint I/O modules. These messages are mapped into the processor’s memory. These ArmorPoint I/O analog input modules produce 6 bytes of input data (scanner Rx) and fault status data. They do not consume I/O data (scanner Tx).

Default Data Map for the ArmorPoint Analog Input Modules

1738-IE2CM12 and 1738-IE2VM12


Message size: 6 Bytes

	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
Produces (Scanner Rx)	Input Channel 0 High Byte								Input Channel 0 Low Byte							
	Input Channel 1 High Byte								Input Channel 1 Low Byte							
	Status Byte for Channel 1								Status Byte for Channel 0							
	O R	U R	H H A	L L A	H A	L A	C M	C F	O R	U R	H H A	L L A	H A	L A	C M	C F
Consumes (scanner Tx)	No consumed data															

Where: CF = Channel Fault Status; 0 = no error, 1 = fault
 CM = Calibration Mode; 0 = normal, 1 = calibration mode
 LA = Low Alarm; 0 = no error, 1 = fault
 HA = High Alarm; 0 = no error, 1 = fault
 LLA = Low/Low Alarm; 0 = no error, 1 = fault
 HHA = High/High Alarm; 0 = no error, 1 = fault
 UR = Underrange; 0 = no error; 1 = fault
 OR = Overrange; 0 = no error; 1 = fault

Troubleshoot with the Indicators

1738-IE2CM12

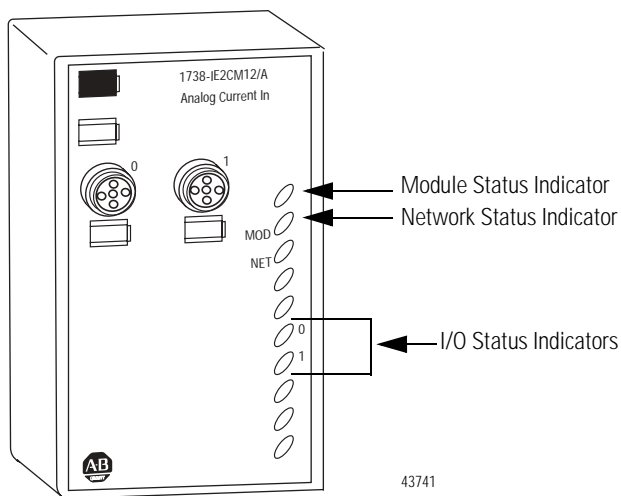

Indication	Probable Cause
Module Status	
Off	No power applied to device
Green	Device operating normally
Flashing Green	Device needs commissioning due to missing, incomplete, or incorrect configuration
Flashing Red	Recoverable fault
Red	Unrecoverable fault - may require device replacement
Flashing Red/Green	Device is in self-test
Network Status	
Off	Device is not on line: - Device has not completed dup_MAC-id test. - Device not powered - check module status indicator.
Flashing Green	Device is on line but has no connections in the established state.
Green	Device is on line and has connections in the established state.
Flashing Red	One or more I/O connections in timed-out state.
Red	Critical link failure - failed communication device. Device detected error that prevents it from communicating on the network.
Flashing Red/Green	Communication faulted device - the device has detected a network access error and is in communication faulted state. Device has received and accepted an Identity Communication Faulted Request - long protocol message.

Indication	Probable Cause
I/O Status	
Off	Module in CAL mode
Solid Green	Normal (channel scanning inputs)
Flashing Green	Channel being calibrated
Solid Red	No power or major channel fault
Flashing Red	Channel at end of range (over or under)

Specifications

ArmorPoint Analog Input Modules	
Number of Inputs	2
Input Point Density	2 single-ended, non-isolated
Input Voltage Signal Range	1738-IE2V 0...10V (user configurable) (-0.0V under, +0.5V over) ±10V user configurable (-0.5V under, +0.5V over)
Input Current Signal Range	1738-IE2C 4...20mA 0...20mA
Absolute Accuracy ¹	0.1% Full Scale @ 25°C
Accuracy Drift w/Temp., Current Input	1738-IE2C - 30 ppm/°C
Accuracy Drift w/Temp., Voltage Input	1738-IE2V - 5 ppm/°C
Digital Filter Time Constant	0...10,000 ms (default = 0 ms)
Input Common Mode Rejection Ratio	120 dB
Input Conversion Type	Delta Sigma
Input Impedance	1738-IE2C - 60 Ω 1738-IE2V - 100 KΩ
Input Normal Mode Rejection Ratio	-60 dB -3 db Notch filter 15.7 Hz @ Notch = 60 Hz 13.1 Hz @ Notch = 50 Hz 65.5 Hz @ Notch = 250 Hz 131 Hz @ Notch = 500 Hz
Input Resistance	1738-IE2C - 60 Ω 1738-IE2V - 200 KΩ
Input Resolution, Bits	1738-IE2C - 16 bits - over 0...21mA; 0.32 μA/cnt 1738-IE2V - 15 bits plus sign; 320 μV/cnt in unipolar or bipolar mode
Input Step Response (per channel)	70 ms @ Notch = 60 Hz (default) 80 ms @ Notch = 50 Hz 16 ms @ Notch = 250 Hz 8 ms @ Notch = 500 Hz
Input Update Rate (per module)	100 ms @ Notch = 60 Hz (default) 120 ms @ Notch = 50 Hz 24 ms @ Notch = 250 Hz 12 ms @ Notch = 500 Hz

Input Data Format	Signed integer
General Specifications	
Calibration	Factory calibrated
Dimensions, Metric	120H x 72W x 42D
Dimensions, Imperial	4.72H x 2.83W x 1.65D
External dc Power Supply Voltage, Nom.	24V dc
External dc Power Supply Voltage Range	10...28.8V dc
External dc Power Supply Current	1738-IE2C - 10 mA @ 24V dc 1738-IE2V - 15 mA @ 24V dc
Indicators	1 green/red module status indicator, logic side 1 green/red network status indicator, logic side 2 green/red input status indicators, logic side
Isolation Voltage (continuous-voltage withstand rating)	50V rms Tested at 1250V ac rms for 60s
Keyswitch Position	3
Mounting Base Screw Torque	#8 screw, 7.5 in. lbs. in Aluminum, 16 in. lbs. in Steel
Overvoltage Protection, Input	Fault protected to 28.8V dc
PointBus Current	75 mA @ 5V dc
Power Dissipation, Max.	1738-IE2C - 0.6 W @ 28.8V dc 1738-IE2V - 0.75 W @ 28.8V dc
Thermal Dissipation, Max.	1738-IE2C - 2.0 BTU/hr. @ 28.8V dc 1738-IE2V - 2.5 BTU/hr. @ 28.8V dc
Weight, Metric	0.29 kg
Weight, Imperial	0.64 lb
Operating Temperature	IEC 60068-2-1 (Test Ad, Operating Cold), IEC 60068-2-2 (Test Bd, Operating Dry Heat), IEC 60068-2-14 (Test Nb, Operating Thermal Shock): -20 ... 60 °C (-4 ... 140 °F)
Storage Temperature	IEC 60068-2-1 (Test Ab, Un-packaged Non-operating Cold), IEC 60068-2-2 (Test Bb, Un-packaged Non-operating Dry Heat), -40 ... 85 °C (-40 ... 185 °F)
Relative Humidity	IEC 60068-2-30 (Test Db, Un-packaged Non-operating Damp Heat): 5...95% non-condensing
Shock	IEC60068-2-27 (Test Ea, Unpackaged Shock): Operating 30 g Non-operating 50 g
Vibration	IEC60068-2-6 (Test Fc, Operating): 5 g @ 10-500 Hz
ESD Immunity	IEC 61000-4-2: 6 kV contact discharges 8 kV air discharges
Radiated RF Immunity	IEC 61000-4-3: 10V/m with 1 kHz sine-wave 80% AM from 30 MHz to 2000 MHz 10V/m with 200 Hz 50% Pulse 100% AM at 900 Mhz 10V/m with 200 Hz 50% Pulse 100% AM at 1890 Mhz
EFT/B Immunity	IEC 61000-4-4: ±3 kV at 5 kHz on signal ports
Surge Transient Immunity	IEC 61000-4-5: ±2 kV line-earth(CM) on shielded ports

General Specifications (cont)

Conducted RF Immunity	IEC 61000-4-6: 10Vrms with 1 kHz sine-wave 80% AM from 150 kHz to 80 MHz
Emissions	CISPR 11: Group 1, Class A
Enclosure Type Rating	Meets IP65/66/67 (when marked)
Conductor Category ²	1 - on signal ports
Certifications: ³ (when product is marked)	c-UL-us UL Listed Industrial Control Equipment, certified for US and Canada CE European Union 89/336/EEC EMC Directive, compliant with: EN 61000-6-4; Industrial Emissions EN 50082-2; Industrial Immunity EN 61326; Meas./Control/Lab., Industrial Requirements EN 61000-6-2; Industrial Immunity C-Tick Australian Radiocommunications Act, compliant with: AS/NZS CISPR 11; Industrial Emissions

1. Includes offset, gain, non-linearity and repeatability error terms.
2. Use this Conductor Category information for planning conductor routing. Refer to Publication 1770-4.1, Industrial Automation Wiring and Grounding Guidelines.
3. See the Product Certification link at www.ab.com for Declarations of Conformity, Certificates, and other certification details.

Notes:

Rockwell Automation Support

Rockwell Automation provides technical information on the web to assist you in using our products. At <http://support.rockwellautomation.com>, you can find technical manuals, a knowledge base of FAQs, technical and application notes, sample code and links to software service packs, and a MySupport feature that you can customize to make the best use of these tools.

For an additional level of technical phone support for installation, configuration and troubleshooting, we offer TechConnect Support programs. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://support.rockwellautomation.com>.

Installation Assistance

If you experience a problem with a hardware module within the first 24 hours of installation, please review the information that's contained in this manual. You can also contact a special Customer Support number for initial help in getting your module up and running:

United States	1.440.646.3223 Monday – Friday, 8am – 5pm EST
Outside United States	Please contact your local Rockwell Automation representative for any technical support issues.

New Product Satisfaction Return

Rockwell tests all of our products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned:

United States	Contact your distributor. You must provide a Customer Support case number (see phone number above to obtain one) to your distributor in order to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for return procedure.

ArmorPoint is a trademark of Rockwell Automation.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846