Carlon[®]

Adjustable Floor Box Kit with Stainless Steel Cover

THE FAST, EASY WAY TO PUT A PLUG ANYWHERE YOU NEED IT!

Can be used for new and existing construction

- Eliminates extension cords.
- Great for home offices & entertainment rooms.
- Easy to use kit includes everything you need!

ADJUSTS TO MOST FINISHED FLOOR HEIGHTS!

Kit includes:

- Stainless Steel Cover with Ground Lug and Wire
- Adjustable 20 cu. in. Nonmetallic Floor Box
- Duplex Receptacle
- Molded Cable Clamps
- Mounting Bracket
- All Mounting Hardware









INSTALLATION INSTRUCTIONS



Install clip over subfloor.



Screw in to adjust to height of flooring or carpet.



Beautiful flush fit every time!

MARNING A— RISK OF SHOCK, DISCONNECT POWER BEFORE INSTALLATION.

This floor box is designed to be mounted on a joist or subfloor. It can be installed on the top of the joist or from the bottom if the thickness of the joist is sufficient to allow installation of the box. If the unit is to be installed from the bottom of the joist, check prior to installation to ensure there is sufficient adjustment remaining as this type of installation is non-standard.

The unit can also be installed using the old work (small) bracket that is included. This bracket facilitates the installation of the box in areas where the larger new work bracket cannot be used. The old work bracket edge is hidden by the cover when installed. However, before cutting into the wood, you must ensure that the mounting screws will properly support the bracket/box installation.

For planning purposes please ensure that the maximum installed height to the bottom of the cover does not exceed 1-3/4" above the top of the mounting bracket.

The kit is listed as a floor box by Underwriters Laboratories. The kit also has a two (2) hour fire classification. Only covers manufactured for this box can be used with this assembly.

Floor box kit should be installed by a certified electrician.

WARRANTY: Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for the user's intended application. Thomas & Betts warrants that this product will be free from defects in materials and workmanship for a period of fwo (2) years following the date of purchase. Upon prompt notification of any warranted defect, Thomas & Betts will, at its option, repair or replace the defective product or refund the purchase price. Proof of purchase is required. Misuse or unauthorized modification of the product voids all warranties.

Limitations and Exclusions: THE ABOVE WARRANTY IS THE SOLE WARRANTY CONCERNING THIS PRODUCT,
AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY
IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE
SPECIFICALLY DISCLAIMED. LIABILITY FOR BREACH OF THE ABOVE WARRANTY IS LIMITED TO COST OF
REPAIR OR REPLACEMENT OF THE PRODUCT, AND UNDER NO CIRCUMSTANCES WILL THOMAS & BETTS BE
LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Installation - New Work Bracket

- 1. The new work bracket may be installed on the floor joist below a 3/4 inch subfloor. When a thicker subfloor is used we recommend cutting a hole in the subfloor using the box as a template and adjacent to the joist so the mounting screws will engage the joist as well as the subfloor. Use the four (4) #6x1-3/4" self-tapping screws supplied with the kit to mount the bracket.
- 2. If the new work bracket is installed from the underside of the joist, ensure the alignment with the box and opening before installing the bracket. Use the four (4) #6x1-1/4" self-tapping screws supplied with the kit to mount the bracket.
- 3. The romex wire can then be pulled through the desired clamp and the box aligned in the bracket slide. Ensure the adjusting screw is aligned on the bracket and rotate the screw clockwise using an electric or pneumatic POWER screw oun. (The adjusting screw can be turned manually with a screwdriver, but this is a self-tapping screw that is cutting threads into hardened steel and it will be very, very difficult.)
- 4. Adjust the box flush to 1/2" above floor, leaving sufficient room to complete the installation.
- 5. Wire the receptacle in accordance with the National Electrical Code. Attach a short length of green or un-insulated grounding wire to ground lug on the receptacle. Connect ground wire from receptacle and green ground wire provided with cover to ground wire entering the box using appropriate wire connector.
- 6. Align the receptacle on the recessed bosses and place the cover on the box with the outlet caps open. Push cover into the box until bottom of cover flange is flush with top of box.
- 7. Insert the two (2) #6-32x1" flat-head machine screws in the holes in the cover, ensuring that the screw is aligned with and captivates the receptacle, DO NOT OVER TORQUE, Tighten the screws to a maximum of 6 to 8 inch pounds. Ensure bottom of cover flange is flush with top
- 8. Remove the plug on the cover that hides the adjusting screw opening and set it aside where it will not be misplaced.
- 9. Using the adjusting screw, adjust the assembly so cover flange is flush with floor covering. Do not pre-load the cover against the floor covering. Place the threaded plug you previously set aside in the adjusting screw opening and tighten.
- 10. Turn the coin slot lock in the center of the cover. in either direction to lock the outlet caps.

Installation - Old Work Bracket

- As indicated in the prior instructions, ensure there is sufficient depth of the floor covering to install the old work bracket. If not, the bracket must be installed adjacent to the joist where the screws will engage the joist/flooring for support.
- 2. Use the box as a template and cut out an opening in the floor cover.
- 3. Place the bracket on the side of the opening where it is to be mounted with the two tabs up and resting on the surface. (Be careful not to drop the bracket into the opening.)
- 4. Install the bracket using the two (2) #6 square drive trim head screws provided in the kit. Since the screws are installed at an angle, there may be a small part of the screw head that protrudes. This is to be anticipated and will not interfere with the installation of the box
- 5. Use the installation instructions for the new work bracket from this point forward starting with step 3.



Old work bracket installation for tight locations or cut-in situations


MAINTENANCE

To ensure continued service, it is recommended that the sealing surfaces of the caps and cover be kept free of debris.

NOTE: Ground stainless steel cover using green grounding screw and ground wire provided.

Carlon[®]

Adjustable Floor Box Assembly

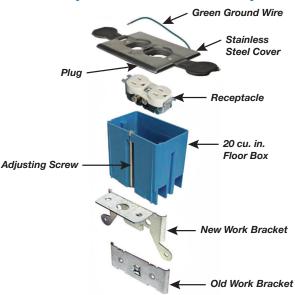

Package Contents

- . One (1) New Work Bracket
- . One (1) Old Work Bracket
- One (1) 20 cubic in. UL Listed Floor Box
- . One (1) Short Shank Receptacle
- · Green Ground Wire

- . Two (2) #6-32x1" Flat Head Machine Screws
- Four (4) #6x1-1/4" Flat Head Self-tapping Screws
- . Two (2) #6 Square Drive Trim Head Screws
- One (1) UL Listed Stainless Steel Floor Cover One (1) Tube Dow Corning #4 Sealant

 - Installation Instructions

CAUTION /



The floor box has undergone a scrub water test as required by UL under criteria specified in 514C for this type of application. However, it is not intended for nor approved for wet locations or outdoor installation.

Thomas & Betts Corporation Memphis, TN 38125 © 2016 Thomas & Betts, All Rights Reserved. www.tnb.com

